

BETA MARINE

Operator's Maintenance Manual

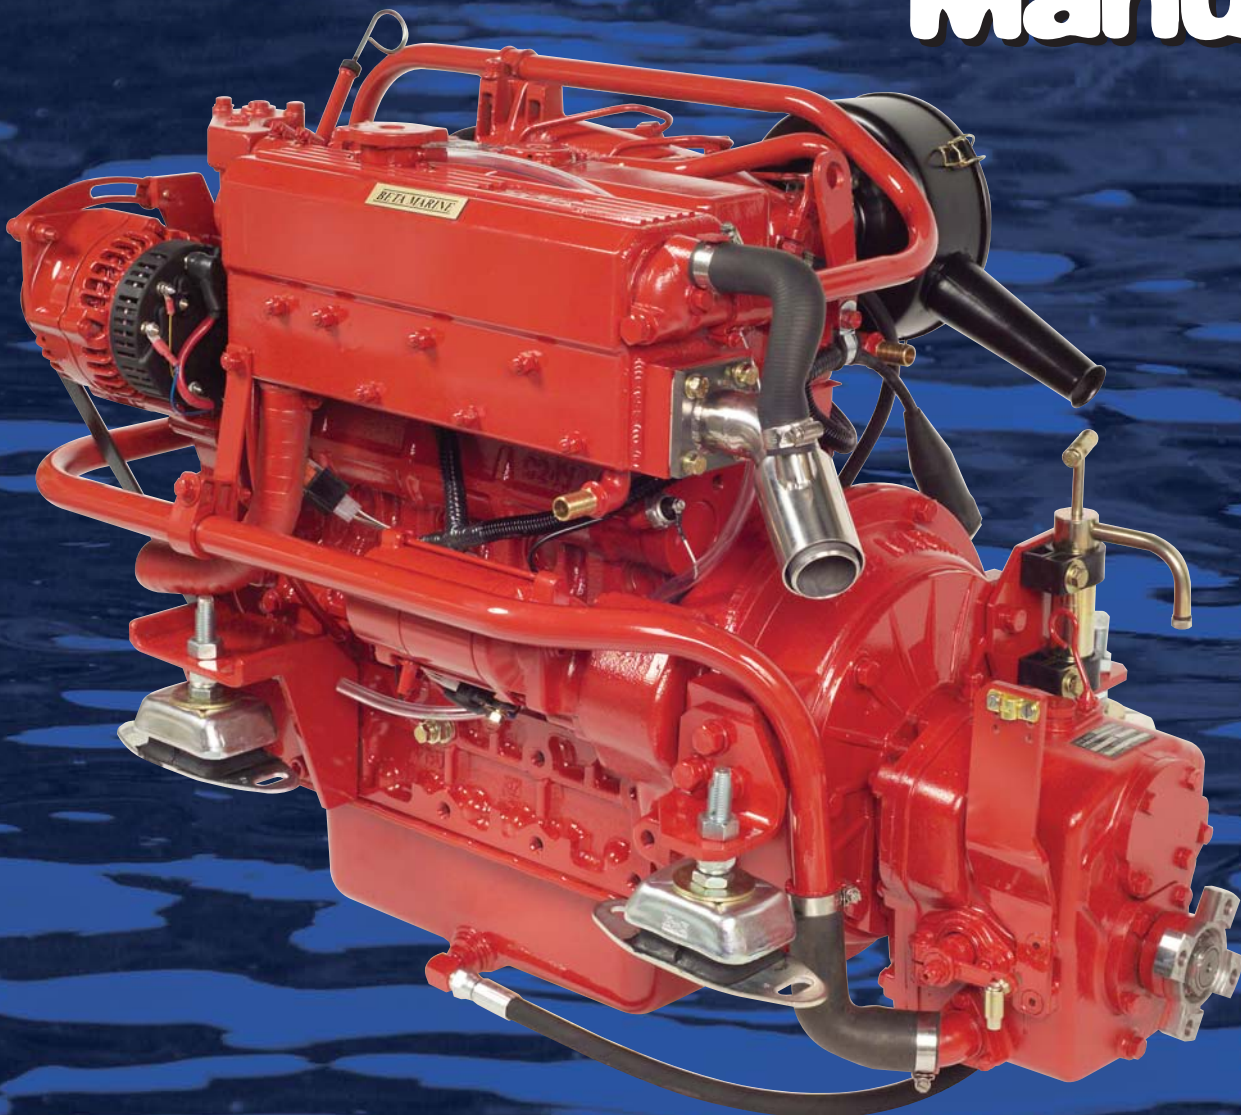


**Heat Exchanger Cooled
Mid Diesel Engine Range
Beta 43, Beta 50 & Beta 60**

CALIFORNIA — Proposition 65 Warning: Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects and other reproductive harm.

Engine Details

IMPORTANT - Please fill in details at moment of purchase - it really will help you! (and it will really help us specify the correct spare parts for you).

Engine Type:	Power:	bhp	Speed:	rpm
BETA WOC NO: K				
Gearbox Type:				
Purchased From:				
Invoice No.:				
Date Commissioned:				
Specification / Special Details:				



Contents

My engine details (to be completed now)	Inside front cover
Introduction	
Engine identification	2
Initial receipt of the engine	2
Engine storage	2
Safety precautions	3
Technical specifications	4
Section 1: Installation guidelines	
Engine mounting	5
Engine alignment - drives, flanges, flexible couplings	6
Exhausts and mounting exhausts	7
Fuel supply and "leak off"	9
Cooling - sea water inlet system	10
Calorifier connections (if fitted)	10
Electrical Installation	12
Section 2: Guidelines for operation of the engine	
Important checks prior to initial use	13
Initial start-up and bleeding the fuel system	13
Starting and stopping	14
Section 3: Maintenance & Service guidelines	
Maintenance schedule	16 & 17
Lubrication - checking and changing oil	18
Fuel system - fuel/water separator, fuel lift pump, fuel filter	20
Cooling - fresh water system, heat exchanger	21
Sea water pump, heat exchanger	22
Belt tensioning adjustment	24
Air filter inspection / replacement	24
Electrical maintenance	25
Laying up - winterising	25
Troubleshooting	26
Torque settings	37
Wiring diagrams and general arrangement drawings index	38
Exhaust Emission - Declaration of Conformity	65
Exhaust Emission - Durability	66
Fast Moving Parts Listing	68 & 67
Maintenance record	Inside back cover

OPERATION AND MAINTENANCE MANUAL FOR THE FOLLOWING BETA MARINE ENGINES BASED ON KUBOTA SERIES

Beta 43, Beta 50 & Beta 60

This manual has been compiled to provide the user with important information and recommendations to ensure trouble free and economical operation of the engine.

As manufacturers we have obviously written this "Operators Maintenance Manual" from our 'involved technical viewpoint' assuming a certain amount of understanding of marine engineering. We wish to help you, so if you do not fully understand any phrase or terminology or require any explanations please contact Beta Marine Limited or its distributors and we will be pleased to provide further advice or technical assistance.

All information and recommendations given in this publication are based on the latest information available at the time of publication, and are subject to alteration at any time.

The information given is subject to the company's current conditions of Tender and Sale, is for the assistance of users, and is based upon results obtained from tests carried out at the place of manufacture and in vessels used for development purposes. We do not guarantee the same results will be obtained elsewhere under different conditions.



Engine Identification

NOTE: In all communications with the distributor or Beta Marine, **the W.O.C. and engine number must be quoted.**

Beta 43, Beta 50 and Beta 60

The engine serial number is stamped above starter motor on the port side of the engine, and is shown on the rocker cover label.

Initial Receipt of the Engine

A full inspection of the engine must be made **immediately on delivery** to confirm that there is no damage. If there is any damage then write this clearly on the delivery note and inform your dealer or Beta Marine within 24 hours. A photograph would always help.

Engine Storage

The engine must be stored in a dry, frost free area and this is best done in its packing case. If storage is to be more than six months then the engine must be inhibited (contact your dealer or Beta Marine). Failure to inhibit the engine may result in the formation of rust in the injection system and the engine bores, this could invalidate the warranty.

② BETA MARINE LTD

WOC..... K12345

Engine Type... Beta 50

Engine No..... 1Z1234

Output.....50 BHP @ 2800 RPM

Tel: UK (44) 01452 723492 Fax: UK (44) 01452 883742

Email: sales@betamarine.co.uk

(Quote WOC number for spares)


Safety Precautions!

A Keep the engine, gearbox and surrounding area clean, including the area immediately below the engine

B Drives - Power Take Off Areas

i) Gearbox Output Flange 

The purpose of a marine diesel propulsion engine is to provide motive power to propel a vessel. Accordingly the gearbox output shaft rotates at between 280 and 2400 rev/min. This flange is designed to be coupled to a propeller shaft by the installer and steps must be taken to ensure adequate guarding.

ii) Forward End Drive 

Engines are supplied with unguarded belt drives to power the fresh water pump and battery charging alternator. The installer must ensure that it is not possible for injury to occur by allowing access to this area of the engine. The three pulleys run at high speed and can cause injury if personnel or clothing come in contact with the belts or pulleys, when the engine is running.

iii) Power Take Off Shaft  (Engine Mounted Option)

Shaft extensions are available as an option and rotate at between 850 and 3600 rev/min. If contact is made with this shaft when the engine is running, injury can occur.

C Exhaust Outlet 

Diesel marine propulsion engines emit exhaust gases at very high temperatures - around 400 - 500°C. Engines are supplied with either wet exhaust outlet (water injection bend) or dry outlet (dry exhaust stub) - see option list. At the outlet next to the heat exchanger / header tank, the exhaust outlet can become very hot and if touched, can injure. This must be lagged or avoided by ensuring adequate guarding. It is the responsibility of the installer to lag the exhaust system if a dry system is used. Exhaust gases are harmful if ingested, the installer must therefore ensure that exhaust lines are led overboard and that leakage in the vessel does not occur.

D Fuel

i) Fuel Lines 

Diesel engines are equipped with high pressure fuel injection pumps, if leakages occur, or if pipes fracture, fuel at a high pressure can harm personnel. Skin must be thoroughly cleaned in the event of contact with diesel fuel.

ii) Fuel Supply Connections 

Engines are supplied with 8mm compression fittings. The installer must ensure that when connections are made, they are clean and free of leaks.

E Oil 

The Beta propulsion unit is supplied with 2 dipsticks, one for the engine and one for the gearbox. Ensure dipsticks are returned and secure after checking, if not oil leaks can cause infection when touched. All oil must be removed from the skin to prevent infection.

F Scalding 

An engine running under load will have a closed circuit fresh water temperature of 85° to 95°C. **The pressure cap on the top of the heat exchanger must not be removed when the engine is running.** It can only be removed when the engine is stopped and has cooled down.

G Transportation / Lifting 

Engines are supplied on transportable pallets. Lifting eyes on engines are used for lifting engine and gearbox assembly only, not the pallet and associated kit.

GENERAL DECLARATION

This machinery is not intended to be put into service until it has been incorporated into or with other machinery. It is the responsibility of the purchaser / installer / owner, to ensure that the machinery is properly guarded and that all necessary health and safety requirements, in accordance with the laws of the relevant country, are met before it is put into service.

Signed:



J A Growcoot, C.E.O,
Beta Marine Limited

NOTE: Recreational Craft

Where applicable, the purchaser / installer / owner and operator must be responsible for making sure that the Recreational Craft Directive 94/25/EC is complied with.

Technical Specifications

Standard Engines	Beta 43	Beta 50	Beta 60	
Cylinder	4	4	4	
Bore (mm)	83	87	87	
Stroke (mm)	92.4	92.4	102.4	
Displacement (cc)	1999	2197	2434	
Combustion	3 Vortex, Naturally Aspirated, Indirect Injection			
Cooling	Arranged for Heat exchanger or Keel Cooling			
Starter voltage (V)	12	12	12	
Starter output (kW)	1.4	1.4	2.0	
Alternator output (Amps) (Starter Battery)	65 (standard)	65 (standard)	65 (standard)	
Glow plug resistance (each)	1Ω	1Ω	1Ω	
Engine speed (RPM) at full load	2,800	2,800	2,700	
Maximum Torque	(N m)	130.3	143.2	158.6
	@ rev/min	1,600	1,600	1,600
Power output EN ISO 8665 (kW)	30.0	33.0	33.6	
Compression Ratio	22.8:1	22.0:1	23.2:1	
Fuel timing BTDC	16.25°	16.25°	16.25°	
Capacity of standard sump approx. (litres)	9.5	9.5	9.5	
Capacity of shallow sump approx. (litres)	7.0	7.0	7.0	
Nett dry weight with gearbox (kg)	253	260	287	
Fuel	Diesel fuel oil to EN590 or ASTM D975			
Coolant	50% Water : 50% Antifreeze			
Coolant capacity approx.. (H/E litres)	7.4	7.4	7.4	
Min. recommended battery capacity	12V, 120Ah (600 CCA Minimum)			

Maximum Angle of Installation: Maximum 15° flywheel up or flywheel down when static; or up to 25° when heeling.

Rotation: Anti-clockwise on flywheel, clockwise on output gearbox flange for use with right hand propeller in ahead, on mechanical gearboxes. Hydraulic gearboxes can be left or right handed.

Fuel: Diesel fuel must conform to EN590 or ASTM D975.

Lubricant:

Engine - engine oil must meet API Classification CF (CD or CE).

Gearbox - see gearbox operator's manual for the gearbox oil type and capacity.

Oil pressure - minimum (tickover) 0.5 bar.

Power outputs: These comply with EN ISO 8665 propeller-shaft power.

1. Declared powers are at the gearbox coupling (coupling to the propeller shaft) as per EN ISO 8665, developed from our standard engine specification, including gearbox and accessories as detailed in our current price lists. Additional accessories or alternative gearboxes may affect the declared powers. Declared power outputs are subject to the stated tolerance band.
2. Operation at parameters outside the test parameters may affect the outputs / powers.

Section 1

Installation Recommendations

The installation details are basic guidelines to assist installation, however due to the great diversity of marine craft it is impossible to give definitive instructions. Therefore Beta Marine can accept no responsibility for any damage or injury incurred during the installation of a Beta Marine Engine whilst following these guidelines.

- All engines shall be placed within an enclosure separated from living quarters and installed so as to minimise the risk of fires or spread of fires as well as hazards from toxic fumes, heat, noise or vibrations in the living quarters.
- Unless the engine is protected by a cover or its own enclosure, exposed moving or hot parts of the engine that could cause personal injury must be effectively shielded.
- Engine parts and accessories that require frequent inspection and / or servicing must be readily accessible.
- The insulating materials inside engine spaces shall be non-combustible.
- **Ventilation** - It is important that the engine compartment has adequate ventilation, and this is your responsibility. If there is no ventilation the engine can overheat and damage can be caused. As a general statement an engine will produce radiated heat - approximately equal to $\frac{1}{3}$ of the engine output power. Also the 65 A or 100 A or 175 A battery charging alternators create lots of heat. (A symptom of overheating problems is often black belt dust).

If you have any doubts about the temperature of your engine compartment please check with a thermometer on a hot day, the maximum temperature in the engine compartment should be less than 60°C - the cooler the better! Engine compartment ventilation is normally best with two holes; **an inlet** allowing colder air to enter near to the alternator and drive belts and a **second outlet** (a third bigger than the inlet) for the hot air to rise and ventilate out from the top of the engine compartment. Adequate ventilation must be included with all installations.

- **General - Keel Cooled Engines**, sometimes overheating is caused by:
 - (a) Not fully venting the engine cooling system of air. It is necessary to remove all air from the cooling system - including the "skin" tanks and (if fitted) the Calorifier and associated piping.
 - (b) Incorrectly sized "skin" tanks that have been sized for 'usual' canal use, rather than maximum engine output that can sometimes be required on fast flowing rivers. An additional "skin" tank may need to be fitted; please refer to our website.

Engine Mounting

To ensure vibration free operation, the engine must be installed and correctly aligned on substantial beds, extending as far forward and aft as possible, well braced and securely fastened to form an integral part of the hull.

The engine must be installed as low as possible on the flexible mount pillar stud. This will limit vibration and extend the life of the flexible mount. To assist with engine replacement we offer 'Special Engine Feet' manufactured to your dimensions, as an optional extra to suit your existing engine bearers and shaft alignment/installation.

Warning

- (1) Do not set the engine feet high up the flexible mount pillar stud. This will cause excessive engine movement and vibration. Pack under the flexible mount with steel shims securely bolted into the engine bearer.



- (2) The pillar stud on the flexible mount is secured into position by the lower locknut, do not forget to tighten this. **Also ensure that the stud is not screwed too far through the mounting body so that it can touch the bearer. This will cause vibration and knocking noises which are very hard to find!**

Engine Installation at an Angle

Beta Marine propulsion engines can be installed at angles up to a maximum of 15° flywheel up or flywheel down when static, or can be run at up to 25° when heeling. When our engines are installed at varying angles of inclination the normal markings on the dipstick should be disregarded.




It is probably better to totally drain the lubricating oil from the sump, replacing the oil filter with a new one; then add the recommended amount of lubricating oil – noting its position on the dipstick – and then marking the dipstick. If in doubt ask Beta Marine.

Alignment




To obtain accurate alignment the flexible mountings must be adjusted until alignment is attained, and the mountings must then be locked in position.

The engine/gearbox unit has to be aligned with the propeller shaft in two ways. The traditional engine alignment method involves measuring with either feeler gauges or a DTI (Dial Test Indicator) mounted on a magnetic foot so that they are aligned within 0.125mm (0.005").

Angular Alignment

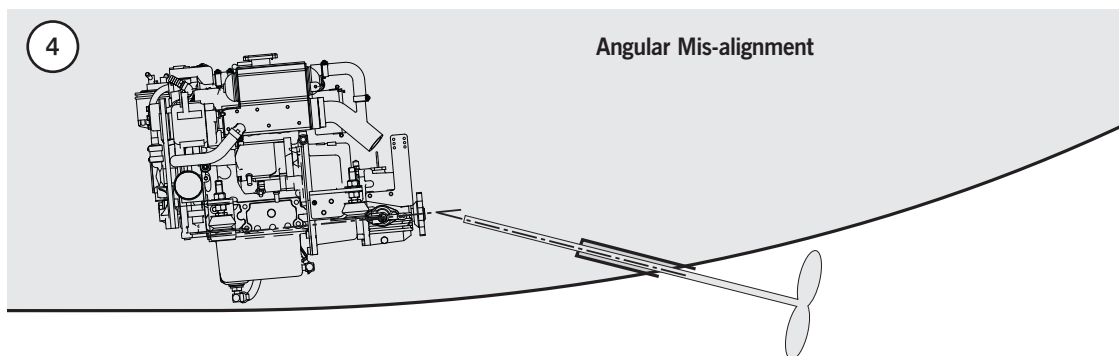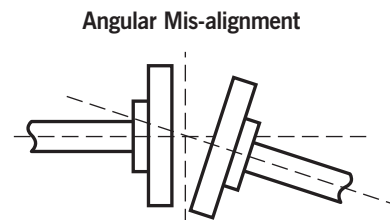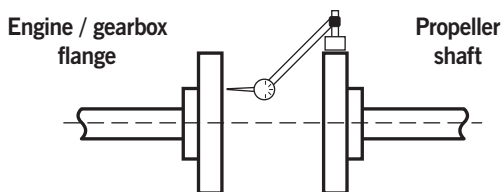

Parallel Alignment

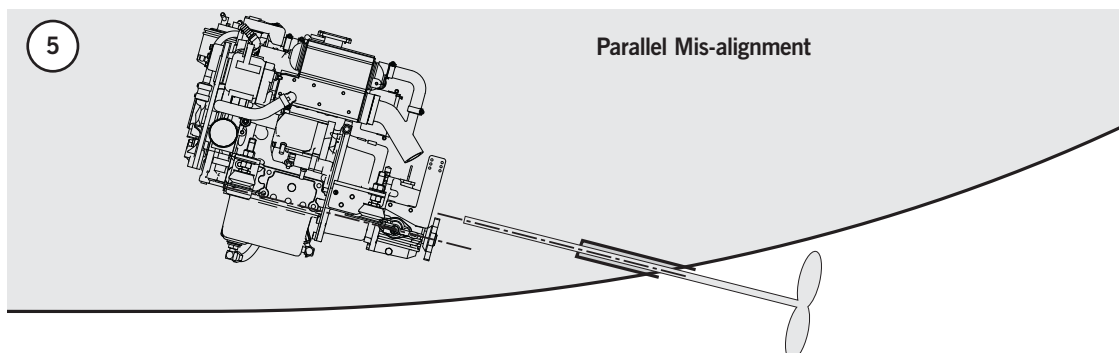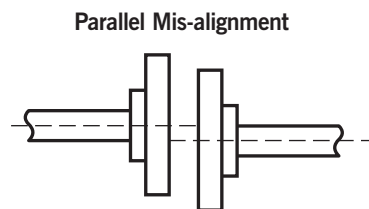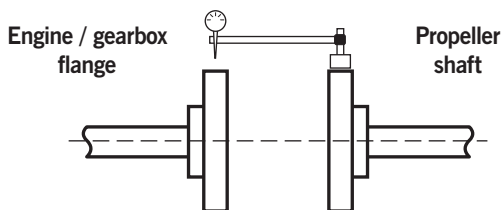

The engine mountings and the couplings must now be tightened in position and the alignment re-checked.

Flexible Output Couplings

A flexible coupling should be mounted on the gearbox output flange and is strongly recommended in almost every case. Flexible couplings do not accommodate bad alignment, they are designed to absorb torsional vibrations from the propeller (transmitted along the propeller shaft).

Exhausts

We recommend care when designing your exhaust system. The most important aspect is to ensure that the engine will not 'hydraulic lock' - by allowing cooling water into the combustion chamber through the exhaust system.

The basic criteria is when your engine is installed below the water line, the potential for water entering the engine is considerably increased. The important position that must be measured is from the water line to the point at where the cooling water is injected into the exhaust - this should measure 30 cms above the water line.

In yachts, engines are mostly installed low down and often below the water line. There are several ways to avoid cooling water entering the engine:

- (a) Syphoning of cooling water can occur when the rubber impellor of the sea water pump becomes worn. If our standard injection bend is too low then we can offer a high-rise injection bend that adds 15 cms to the height. If this is still not enough then you have to fit an 'antisiphon' valve at least 30 cms above the water line. These valves need to be checked regularly as they have been known to block up with time.
 - (b) You must fit a waterlock / silencer to stop any water in the exhaust system back filling the engine. The water lock should always be fitted at least 30 cms from the injection bend and about 15 cms below the injection bend. The waterlock should have sufficient capacity to hold an exhaust system full of water - draining into it.
 - (c) We recommend that you always create a 'gooseneck' with the exhaust hose (or purchase a propriety one) by raising the exhaust hose 40 cms above the waterline before exiting the transom at least 5 cms above the waterline. This will stop any waves pushing seawater down the exhaust.
 - (d) Keep exhaust systems to a minimum length and have gradual bends (NOT right angle elbows). Exhaust back pressure should be as low as possible; it is increased by long exhaust length and sharp bends. Back pressure should be measured; with the complete exhaust system connected and the engine running at full speed. The correct measuring point is before the injection bend (at the manifold flange).
- Beta 10 to Beta 25 maximum 70 mmHg;
Beta 30 to Beta 60 maximum 80 mmHg,
and Beta 75 to Beta 105 maximum 90 mmHg.
- (e) Wet Exhaust hose should be matched to the injection bend diameter.
- Beta 10 to Beta 60 is 50 mm internal diameter;
and Beta 75 & Beta 90 is 60 mm internal diameter.


- (f) An engine correctly installed in accordance with this handbook will meet the emission requirements of the RCD (Recreational Craft Directive).

Typical Yacht Exhaust Installation

Warning

- (1) One of the most common problems with engine installations (and often expensive), is 'hydraulic lock' (water entering the engine combustion chamber). Water entering the pistons / combustion chamber can cause bent con rods, emulsified engine oil and a wrecked fuel pump! It's best avoided!
- (2) The diagram shows a typical exhaust installation. The rubber hose connecting the heat exchanger to the injection bend must be replaced by a hose of sufficient length, connecting to a "T" piece or anti-syphon valve that is above the maximum seawater level when heeled (at least 30 cms / 12 inches above the water line) on the centre line of the boat. The pipe then returns to the injection bend and the seawater is pumped down the exhaust pipe.

6

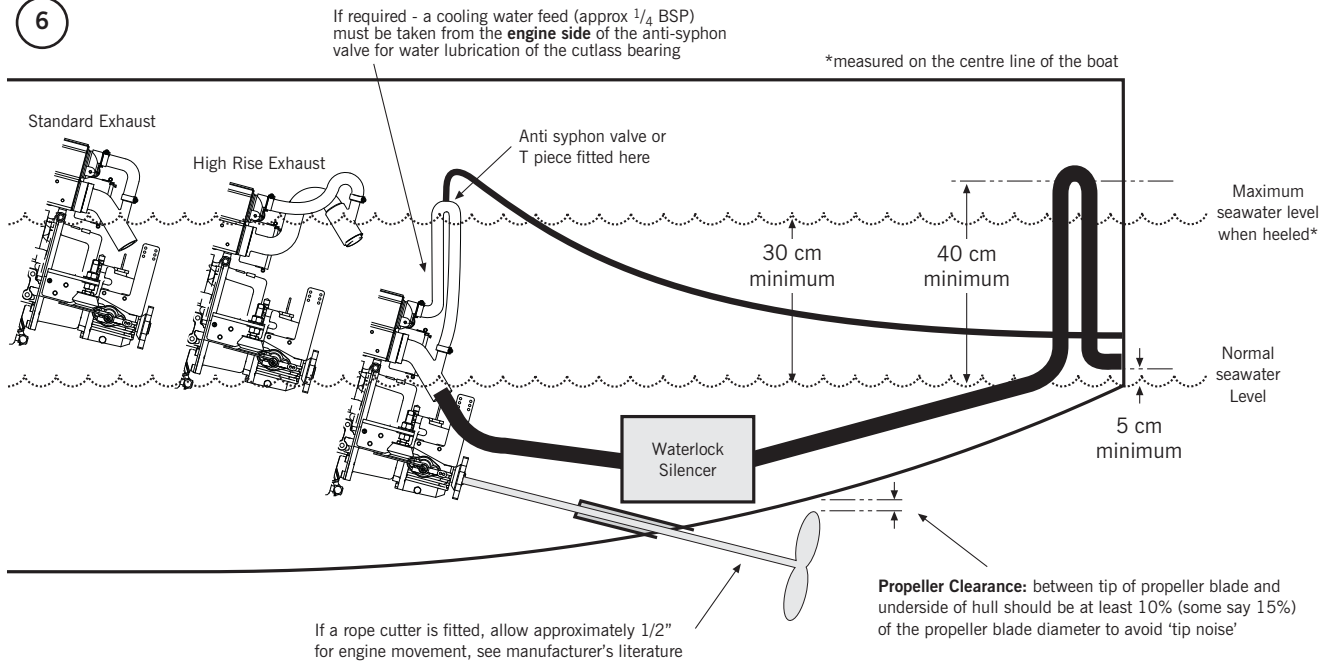


Dry Exhaust System

- An engine correctly installed in accordance with this handbook will meet the emission requirements of the RCD (see back of manual).
- Keep exhaust systems to a minimum length and have gradual bends (NOT right angle elbows). Exhaust back pressure is increased by longer exhaust length and sharp bends. Back pressure should be measured; with the complete exhaust system connected and the engine running at full speed; and should NOT exceed 70 mm Hg (3.1 inches Hg). The correct measuring point is before the dry exhaust bellows (at the manifold flange). We can supply a Manometer kit for testing 'Back Pressure'.
- The dry exhaust system installed in a canal boat or work boat should be 1 1/2" minimum internal diameter.


The engine is fitted with a 1 1/2" BSP male connector stub as standard - Valid for exhaust systems up to 3 metres in length. A flexible exhaust bellows and dry exhaust silencer should be used. It is up to the installer to work out his own pipe run but care should be taken as follows:

- Never use a flexible exhaust bellow as a bend, it will crack, always keep them straight.
- Ensure that rain water cannot enter the exhaust port and run back down the system, flooding the silencer and eventually the engine. (See drawings below).
- The system should be lagged if there is any danger of the crew getting near it.
- A dry exhaust system will give off considerable heat and suitable ventilation must be provided.

7

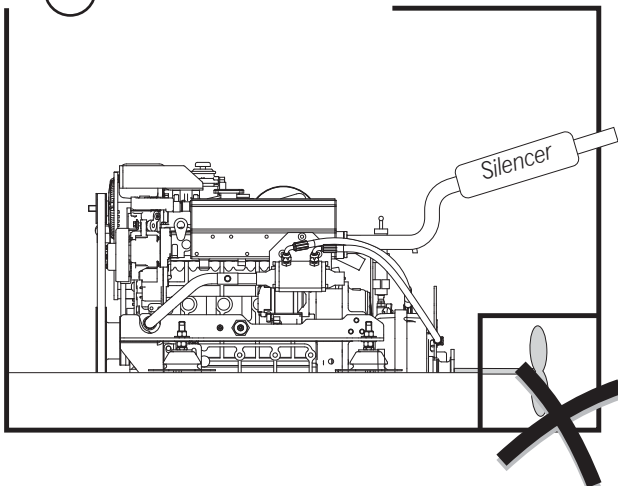


8

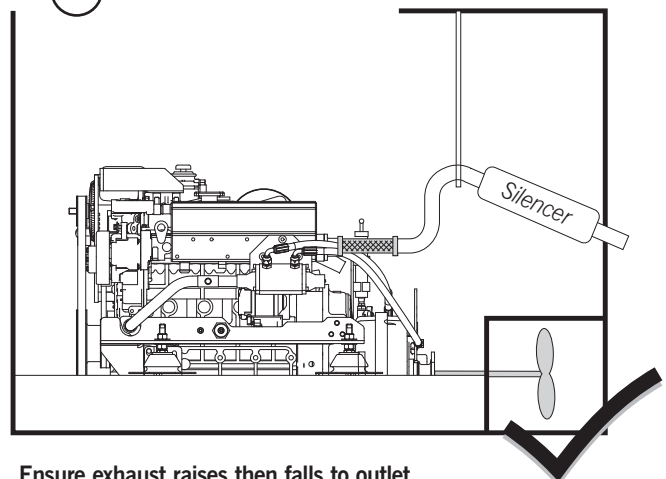

Engine Connections

Actual Connector:	Required Pipe Size:
Fuel supply and fuel leak-off connections are 8 mm conex with olives	8 mm OD piping for both with flexible section
Seawater cooling pump connections are 28 mm OD	Engine Inlet = 28 mm ID hose
Water injected exhaust elbow outlet 50 mm OD	Flexible rubber exhaust pipe of correct quality = 50 mm OD

Fuel supply & leak off

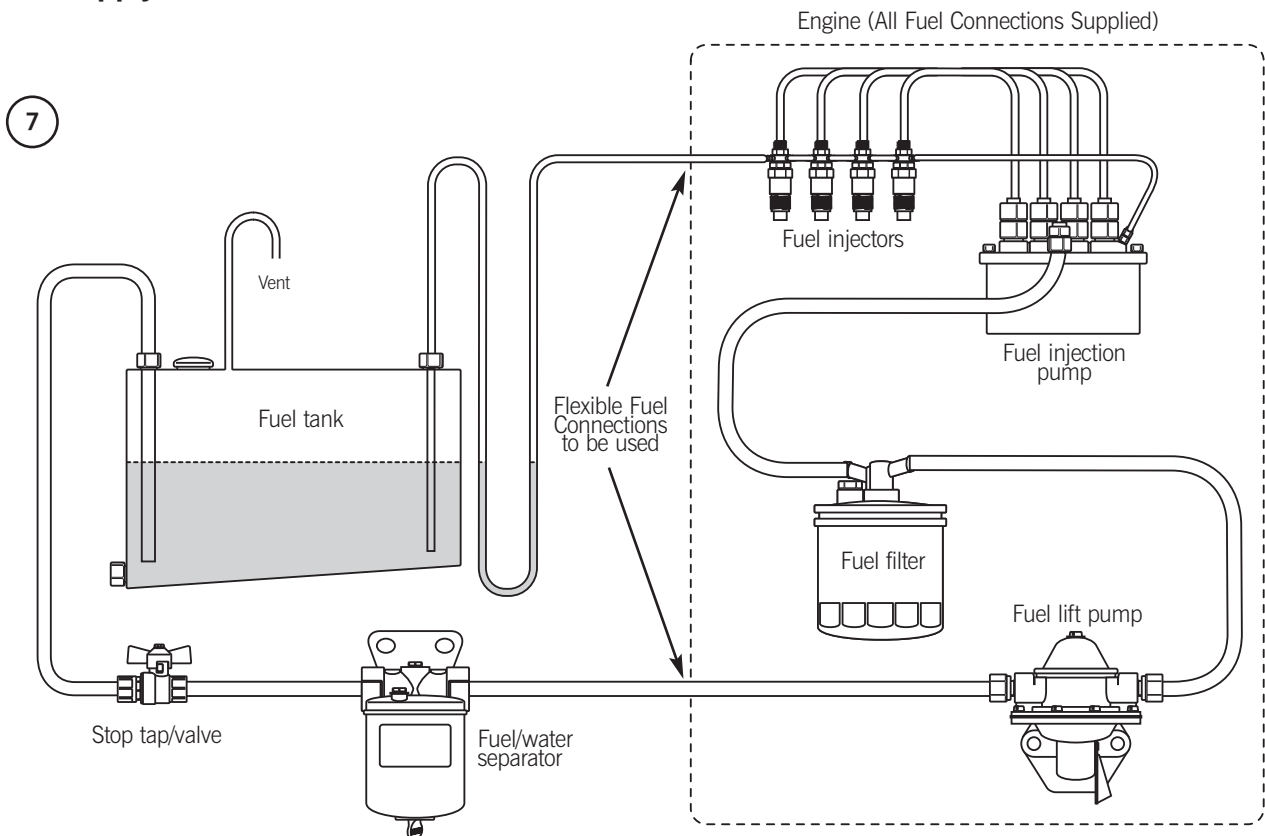


Notes:

- 1) **A fuel/water separator must be installed.**
- 2) The mechanical fuel lift pump is fitted to all engines as standard, but if a suction head of 0.25m or more is required, then an electric fuel lift pump must be fitted (ask your dealer or Beta Marine).
- 3) It is very important that the excess fuel from the injectors is fed back to the fuel tank and not back to any point in the supply line. This will help prevent air getting into the system.
- 4) The fuel return (leak off) pipe must loop down to be level with the bottom of the tank before it enters the top of the tank – see drawing. This prevents fuel 'drain down'.
- 5) Fuel lines and hoses connecting the fuel tank to the engine, must be secured, separated and protected from any source of significant heat. The filling, storage, venting, fuel supply arrangements and installation must be designed and installed so as to minimise the risk of fire. When connecting the engine to the fuel supply and return lines, flexible fuel hoses must be used (next to the engine) and must meet the requirements set in standard ISO7840:1995/A1:2000 and/or as required by your surveyor / authority.
- 6) Any fuel leaks in the system when static are likely to cause poor starting and erratic running and must be corrected immediately. These leaks will allow air to be sucked in when the engine is running.

Seawater Inlet System (Heat exchanger Cooled Engines)



Your engine is fitted with a gear driven sea water pump which sucks in seawater (raw water) to cool the closed circuit system via the heat exchanger.

1. It is very important that the seawater inlet should have a strainer system either built into the sea cock or a high level system with visual inspection glass (as shown) mounted just above the water line.
2. The inlet sea cock should be 1" BSP to which a 7/8" / 22 mm hose connector can be fitted. The sea water pump is 22 mm OD to suit the 22 mm ID hose.
3. Good access to the inlet sea cock is essential so that plastic bags or seaweed trapped in the intake can be poked out.
4. All pipe work should have approved marine grade stainless steel hose clips. Any loose clamps or bad connections can cause flooding and sinking of the vessel
5. If water is required for stern tube lubrication then this should be taken from a 'T' piece in the pipe going from the heat exchanger outlet to the water injection bend.
6. Scoop type water pickups should **never** be used, as water will be forced through the pump and into the exhaust system whilst the vessel is sailing. This is very dangerous as the exhaust will eventually fill and sea/raw water will back up into the engine through the exhaust valve. Catastrophic failure will result as soon as the engine is restarted. **Note:** The maximum lift of the sea water pump is 2m when primed.

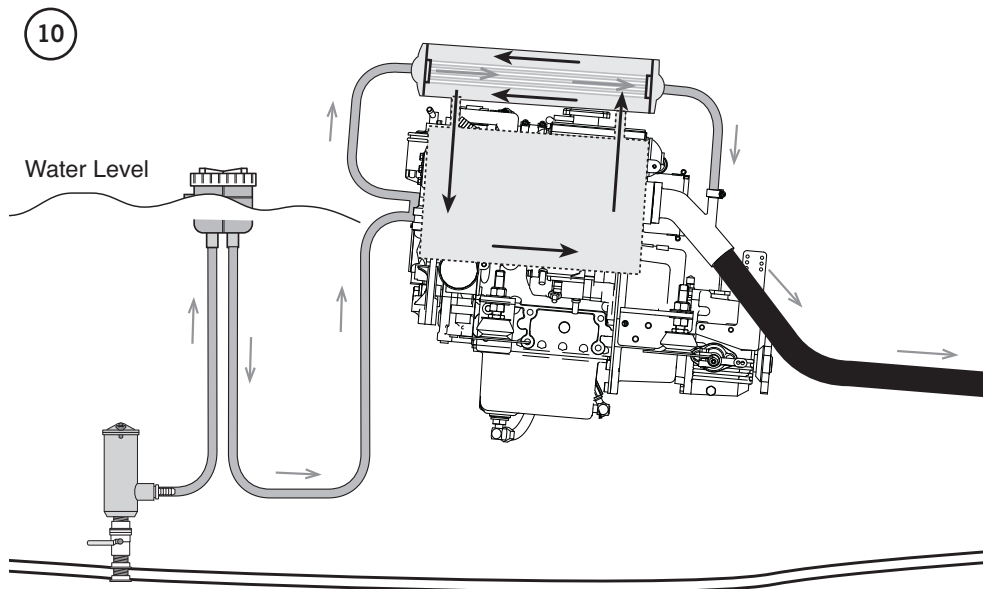


Calorifier System

All Beta 'Green Line' engines are fitted with 'Calorifier Connections' to allow the hot coolant from the closed cooling system to circulate through a calorifier tank, which in turn heats up domestic water. Photos are shown below.

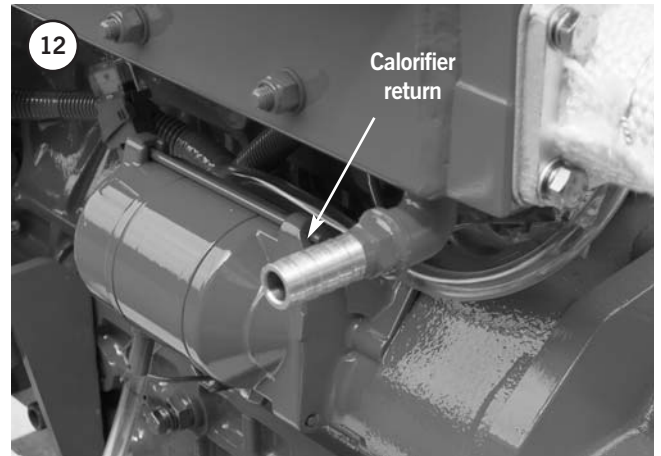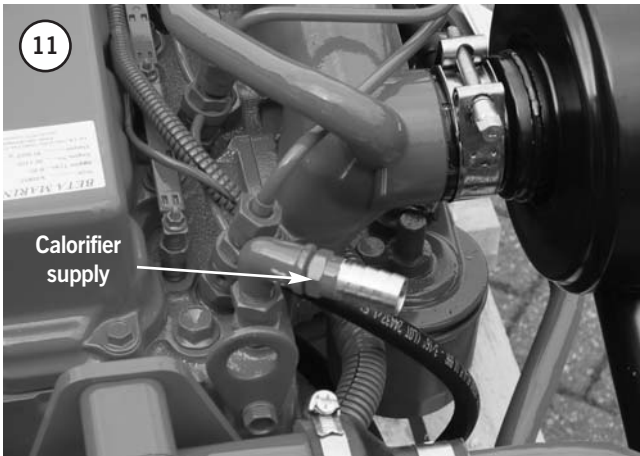

1. The big problem with a Calorifier is removing all the air from the piping / system. If you cannot get the air out, then the Calorifier will not work!
2. Try and keep the supply and return pipes either horizontal or sloping down in a continuous fall. This avoids air pockets being created.
3. If your calorifier is installed above the engine then a 'Remote Header Tank kit' must be fitted.
4. Extra care must be taken when first filling the calorifier system with coolant (a solution of 50% water to 50% antifreeze) as the header tank may appear to be full but it soon disappears into the calorifier pipe work.
5. Run the engine off load for 10 minutes then check the level as described in 'Filling the Fresh Water System'. Also check to see if the pipe going to the calorifier is getting warm after 15 minutes. Top up the water level as required and run for another 10 minutes, then repeat.
5. If the water level is steady but no warm water is getting to the calorifier then very carefully open the calorifier bleed valve (see manufacturers instructions) or if none is provided then very carefully loosen the jubilee clip securing the supply pipe to the calorifier. Air should escape. Refasten securely when no further bubbles are seen.

Caution: Do not do this when the engine is hot as scalding hot water may be forced out of the pipe under pressure.

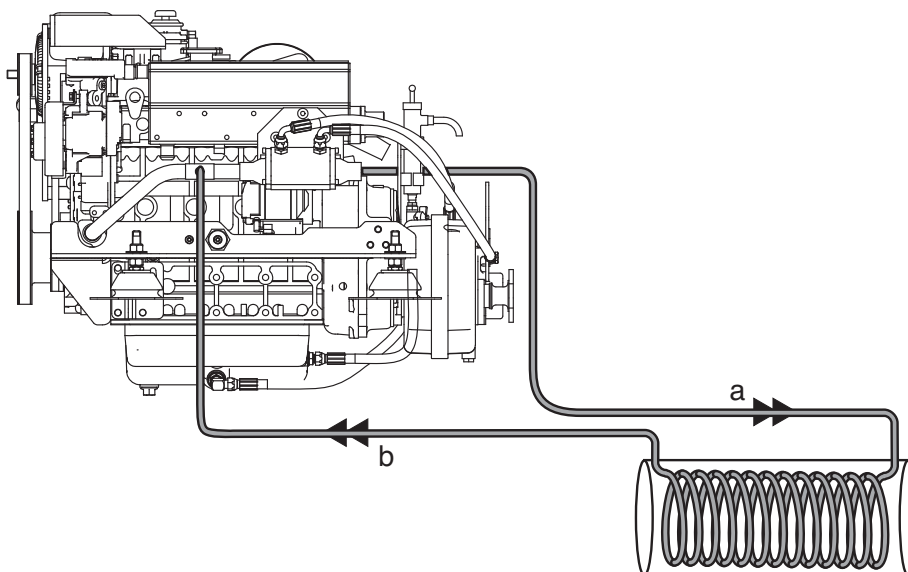

Electrical Installations

Beta Marine has 6 control panels: A, AB, ABV, ABVW B or C.

Please note that all panels are not inter-changeable with each other. Panels with gauges require analog senders for the gauges and panels with just warning lights, only require switches for engine temperature and oil pressure.

The Beta 43, Beta 50 and Beta 60 use the ABV, ABVW, B and C control panels.

The engine harness is common to all.

1. These control panels must not be installed where sea water spray can get at them. A suitable flap or cover must be fitted. The ABVW panel is fully waterproof.
2. Control Panels must be fitted in a location where the helmsman can either see or hear the alarm system.
3. For standard wiring diagrams see pages 39 to 63.
4. Our standard wiring harness has a 3 metre loom. As an optional extra, Beta can provide various lengths of extension looms for runs of over 3m, but this kit includes a start relay to overcome the voltage drop (See drawing 300-58520).

5. All electrical equipment must be protected from sea water. Sea water or rust in the starter will invalidate the warranty. Care must be taken when pushing the two halves of the plug together to ensure that individual pins do not fall out. To prevent corrosion and assist in assembly we recommend that the plug is packed with petroleum jelly (Vaseline) and then carefully pushed together. The plastic boots should cover both halves and overlap. A cable tie is then put around to hold the two halves in position and help prevent any ingress of water.
6. All cables must be adequately clipped and protected from abrasion.
7. Electrical systems shall be designed and installed so as to ensure proper operation of the craft under normal conditions of use and shall be such as to minimise risk of fire and electric shock.
8. Attention shall be paid to the provision of overload and short circuit protection of all circuits; except engine starting circuits, supplied from batteries.
9. Ventilation shall be provided to prevent the accumulation of gases, which might be emitted from batteries. Batteries shall be firmly secured and protected from ingress of water.

Typical Starter Motor Ratings

Starters used in Kobuta engines have the following standard capacities:

Engine	Starter Capacity (kW)
Less than 700cc	0.8 - 1.0
700 to 1,500cc	1.0 - 1.4
1,500 to 3,000cc	1.4 - 2.0
Over 3,000cc	2.0 - 2.5

Suggested Minimum Engine Starter Battery Size

Engine	Typical Battery Capacity (AH) at a 20hr Rate	Typical C.C.A Cold Cranking Amperage
Beta 10, Beta 14, Beta 16, Beta 20	35 - 50 AH	350 - 400
Beta 25, Beta 28, Beta 35, Beta 38, Beta 43	65 - 75 AH	450 - 540
Beta 50, Beta 62	100 - 120 AH	580 - 670
Beta 75, Beta 90	150 - 180 AH	1050 - 1200

Keyswitch Terminations

The standard panel keyswitch can be used to tap off a switched positive ignition feed to power additional gauges. In this way these gauges will only be live whilst the engine is running, the engine is starting or the heaters are being used. For silver keyswitches, the terminal to achieve this ignition switched positive is marked 'AC'. For black keyswitches, the terminal to achieve this ignition switched positive is marked '15/54'. For panels without any keyswitch, gauges can be driven from the 1 mm² brown wire which terminates at 11 way connector terminal 4. This is a lower power switched positive, any additional power required from this connection must be feed through a relay, as noted below.

Note: these keyswitch terminals are rated at 10 amps maximum, since they are already utilised for panel and alternator feeds Beta Marine recommend any additional requirements from these terminals must be fed through a relay. This relay should then be connected to it's own fused positive supply directly from the engine battery. Beta drawing 202-06421 illustrating the wiring of a typical electric fuel lift pump with ignition switched relay can be supplied upon request.

Section 2

Guidelines for Operation of Engine

Important Checks Prior to Initial Use

1. Generally, a new engine has the oil and anti-freeze removed after the works test. Fill the engine with the correct oil and antifreeze (see sections on Engine oil and Cooling). **Check gearbox oil level** - see gearbox 'Owners Hand Book'.
2. Ensure the engine is free to turn without obstructions.
3. Ensure battery is fully charged and connected with the battery isolator in the 'ON' position.
4. Ensure "Morse" speed and gearbox cables are fitted correctly and that cable travel lengths are correct.

Gear selection lever - all mechanical gearboxes: care must be taken to ensure that the remote control cable is adjusted so that the selector lever on the gearbox moves FULL travel and brought "hard up" against its end stop in both directions. Failure to achieve the correct adjustment will reduce efficiency of the clutch and may cause slippage at low revs. Warranty will not be accepted on gearboxes returned in the warranty period for failure due to incorrect adjustment.

5. Open the sea water cock.
6. **Bleeding the fuel system for initial start up.**
 - a) Open the fuel stop tap/valve and bleed the fuel/water separator of air as shown in manufacturer's literature.
 - b) Fuel should now be at the fuel lift pump and fuel filter.



- c) Open fuel bleed screw on fuel filter by 1 to 2 turns, see diagram 12.



- d) Move the hand priming lever on fuel pump up and down (see photo 11) until fuel with "no bubbles" comes out of the bleed screw (see diagram 12). The hand priming lever normally has about 90° travel; **but the camshaft lobe may block this travel requiring you to rotate the engine to obtain full travel.**
 - e) Shut/tighten the bleed screw. Clean area thoroughly with tissue paper.
 - f) Continue to hand prime for 30 seconds to push fuel through the fuel pump.
7. Ensure engine is **out of gear** and set to 1/3 throttle - see "single lever control" instructions/manual.
 8. Start engine (see normal starting). Note the engine may have to be turned over with the starter for a few seconds before it fires. Do not run the starter for more than 20 seconds. If the engine has not started after 20 seconds then disengage the starter and continue to hand prime for a further 30 seconds, then repeat. If engine does not start after 3 attempts then allow 5 minutes for the starter to cool down before repeating (c) to (h). **Note: The starter motor windings can be burnt out with continuous cranking.**

Warning **Caution - To avoid personal injury:**

- Do not try to start the engine until you know how to stop the engine.
- Do not bleed a hot engine as this could cause fuel to spill onto a hot exhaust manifold creating a danger of fire.
- Do not mix petrol / gasoline or alcohol with diesel fuel. This mixture can cause an explosion.
- Do not get diesel fuel or oil on the flexible mounts - they will deteriorate rapidly if soaked in these.
- All fuel must be removed from skin to prevent infection.

Normal Starting

Beta Control Panels - A, AB, ABV, B and C Deluxe - with keyswitch.

To operate the engine: with the engine out of gear, set speed control lever to 1/3 throttle.

- 1) Turn key anti-clockwise to 'HEAT' position and hold for ten seconds.
- 2) Turn key clockwise to 'RUN' position. At this stage the instrument panel should illuminate:
 - Red lamp for 'low oil pressure' should illuminate.
 - Red lamp for 'high engine temperature' should not illuminate (when engine is cold / cool / warm). This lamp will only ever illuminate if the engine is over temperature.
 - Red lamp for 'no starter battery charge' should illuminate.
 - Red lamp for 'no domestic battery charge'. **Only fitted with panels AB and C and will illuminate only if 2nd 'domestic' alternator is fitted.**
 - Green lamp for panel 'power on' should illuminate.
 - Buzzer should sound.
- 3) Turn to 'START' position and engine will motor, hold in position until engine fires (see initial start-up section for maximum time starter can be used).



- 4) Release key (when engine has started) to 'RUN' position.
 - All red warning lamps should extinguish and buzzer should stop sounding. The oil pressure lamp may take a few seconds to switch off and the charge fail lamp may remain on until engine rpm is increased to approximately 1,000rpm if the engine was started on tickover.
 - Green lamp for 'panel power on' should still function.
 - If the 'charge fail' lamp remains on then "blip" the engine speed up to 2000 rev/min and it will go out (split charge relay drain).

Beta Control Panel ABVW - Keyless (without keyswitch)

This panel controls the engine with three water resistant push buttons instead of a keyswitch, and is less prone to damage and corrosion from sea water spray.

To operate the engine: with the engine out of gear, set speed control lever to 1/3 throttle.

- 1) Press and hold 'HEAT' button for ten seconds maximum.
 - Red lamp for 'no starter battery charge' should illuminate.
 - Red lamp for 'high engine temperature' should not illuminate (when engine is cold / cool / warm). This lamp will only ever illuminate if the engine is over temperature.
 - Red lamp for 'low oil pressure' should illuminate.
 - Green lamp for panel 'power on' should illuminate.
 - Buzzer should sound.
- 2) Press 'START' button and hold in position until engine fires (see initial start-up section for maximum time starter can be operated). Release button (when engine has started)
 - All red warning lamps should extinguish and buzzer should stop sounding. The oil pressure lamp may take a few seconds to switch off and the charge fail lamp may remain on until engine rpm is increased to approximately 1,000rpm if the engine was started on tickover.
 - Green lamp for 'panel power on' should still function.



- 3) To stop the engine press the 'STOP' push button, hold in until engine stops. This button also switches the power off to the gauges, engine and 'power on' lamp.
- 4) To re-start the engine, simply repeat steps from '1' above, there is no need to switch battery isolators off whilst remaining on board.
- 5) If leaving the boat, isolate start battery from engine and panel, to prevent accidental start up of engine and stop power leakage.

Stopping

Every propulsion engine is fitted with a stop solenoid. To stop the engine simply press stop push button, hold in until engine stops, then turn key from 'RUN' to 'OFF' position. Do not turn the key to the off position when the engine is running, this will not allow the alternator to charge the battery.


Warning!

Do not leave the key in 'HEAT' position for more than 15 seconds - this will damage the heater plugs and eventually lead to poor starting.

When leaving the boat for an extended period:

- Turn off sea-cock (heat exchanger cooled engines).
- Turn off battery isolator.

Notes for all panel types: Do not depress the stop button for more than ten seconds as this will lead to overheating and failure of the solenoid. These engines are equipped with a mechanical stop lever in the event of electrical system failure. This lever is located on the starboard side of the engine below the speed control lever. See illustration below. Move the stop lever aft to stop the engine then return it to the run position.

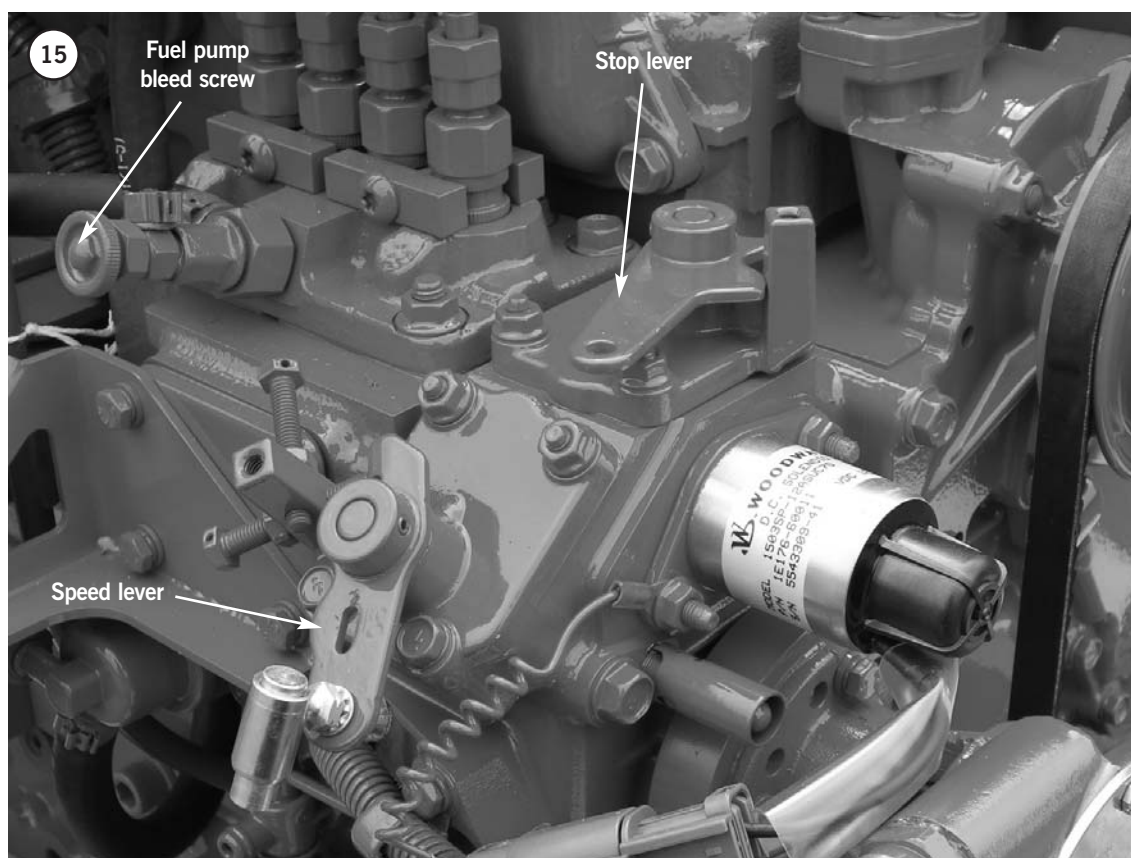

Section 3

Maintenance Schedule

Daily or every 8 hours running

- Check engine oil level.
- Check gearbox oil level.
- Check coolant level.
- Check battery fluid.
- Check drive belt tension
- Ensure raw water inlet strainer is clear.
- Check stern gland lubrication (if used).
- Drain off any water in fuel/water separator.

After the first 25 hours running

- Change gearbox lubricant (See separate gearbox manual).
- Check that all external nuts, bolts and fastenings are tight. See table for torque values. **Do NOT over tighten.** Special attention should be paid to the flexible mount lock nuts, these should be checked for tightness, starting with lower nut first in each case. If the lower nuts are found to be very loose, then the alignment of the shaft to the gearbox half coupling should be re-checked. Poor alignment due to loose flexible mount nuts will cause excessive vibration and knocking.
- Check the belt tension on any second alternators fitted and adjust, see page 11.
- Check ball joint nyloc nuts for tightness on both gearbox and speed control levers. Grease both fittings all over.

After first 50 hours

- Change engine lubricating oil.
- Change oil filter.
- Check for leaks on header tank tubestack. Tighten end cap bolt if required.
- Drain off any water in fuel/water separator.

Every 150 hours

- If shallow sump (option) is fitted, change engine lubricating oil and filter.

Every year or 250 hours if sooner

- Change engine lubricating oil (standard sump)
- Change lubricating oil filter
- Check air cleaner element
- Check sea water pump impeller and change if worn.
- Check wasting anode condition, replace when necessary. In some environments this may be six monthly or less.
- Remove heat exchanger tube stack, by undoing the bolt each end of the tube stack. Remove end cover, pull out tube stack and clean. Replace rubber 'O' rings and re-assemble. Top up with antifreeze. Immediately engine is started check for leaks.
- Spray the key switch with WD40 or equivalent to lubricate the barrel.
- Check that all external nuts, bolts and fastenings are tight. See table for torque values.
- Check ball joint nyloc nuts for tightness on both gearbox and speed control levers.

Every 750 hours (In addition to 250 hours maintenance)

- Change air cleaner element.
- Change fuel filter.
- Change antifreeze.
- Change gearbox oil.
- Check electrical equipment, condition of hoses and belts, replace as necessary.

Maintenance Schedule

	Daily or every 8hrs running	After first 25hrs	After first 50hrs	Every 150hrs with shallow sump	Every Year or 250hrs if sooner	Every 750hrs
Check engine oil level	●					
Check gearbox oil level	●					
Check engine coolant level	●					
Check battery fluid	●					
Check drive belt tension	●					
Ensure raw water inlet strainer is clear	●					
Check stern gland lubrication	●					
Drain off any water in fuel / water separator	●					
Change gearbox oil		●	See separate gearbox manual			
Check all external nuts, bolts and fastenings are tight. Check belt tension. Check for leaks		●	●		●	●
Change engine oil			●	●	●	●
Change oil filter			●	●	●	●
Lubricate keyswitch on control panel with "vaseline" or WD40			●		●	●
Check coolant "sacrificial" zinc anode and replace if necessary - sometimes frequently			●		●	●
Check general condition			●		●	●
Remove heat exchanger tube stack and replace rubber O-rings					●	●
Check sea water pump impeller and change if worn					●	●
Check air cleaner element and change if required					●	●
Change air cleaner element						●
Change diesel fuel filter						●
Change gearbox oil						●
Drain and replace engine coolant / anti-freeze						●

Lubrication

Engine oil: Engine oil quality should have the minimum properties of the American Petroleum Institute "API" classification CF (CD, or CE).

The following table gives grades of oil viscosity required for various ambient temperature ranges.

Note: A good quality SAE 15W/40 mineral based multigrade oil as used in most car diesel engines will meet requirements. Do not use lubricant additives, and the use of synthetic oil is not recommended.


Ambient Temp.	Single Grade	Multi-Grade
-30°C to 0°C	SAE 10W	SAE 10W/30
-15°C to +15°C	SAE 20W	SAE 15W/40
0°C to +30°C	SAE 30	SAE 15W/40
25°C and above	SAE 30	SAE 15W/40

Checking engine oil level

For quantities of oil required see section marked 'Technical Specification', page 4.

When checking the engine oil level, do so before starting, or more than five minutes after stopping.

1. To check the oil level, draw out the dipstick, wipe it clean, re-insert it, and draw it out again. Check to see that the oil level lies between the two notches.

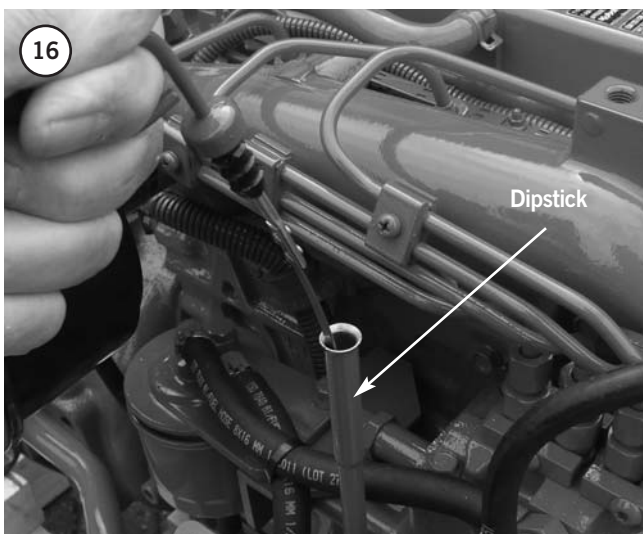

2. If the level is too low, add new oil to the specified level - **Do not over fill.**

Important: When using an oil of different make or viscosity from the previous one, drain old oil. Never mix two different types of oil. Engine oil should be changed after first 50 hours running time and then every year or every 250 hours if sooner. Oil filter is a cartridge type mounted on the starboard side of the engine.




Changing engine oil

- (1) Run the engine for 10 minutes to warm up the oil.
- (2) Your engine is provided with a sump drain pump. Unscrew the end cap on the end of the pump spout, turn the tap to 'on'. Use the hand pump as shown to pump out the oil into a bucket. Turn the tap to off position and replace end cap. See photo 18.
- (3) Unscrew the oil filter and replace with a new one. See photo 19.


Note: It is best to have a plastic bag wrapped round the filter to catch any oil left in the system. (Always keep your bilges clean!) Before screwing in the new filter spread a thin film of oil round the rubber gasket to ensure a good seal and screw in - hand tight.

- (4) Fill the engine with new oil as described on the previous page.
- (5) Run the engine and check for oil leaks.

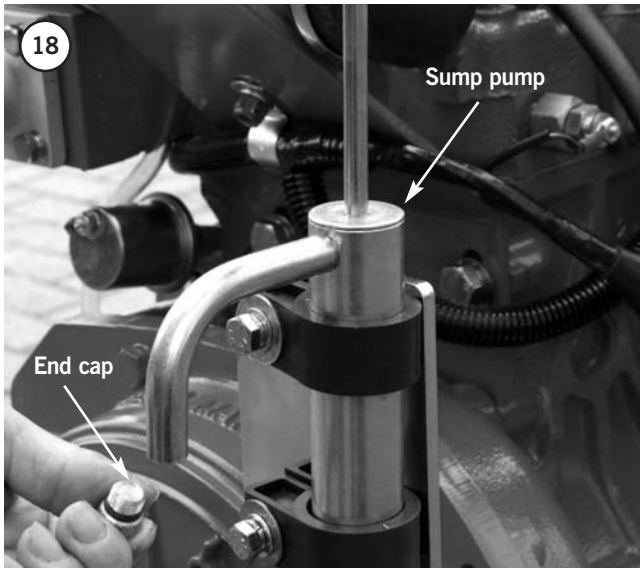

Checking Gearbox oil level

- 1) The gearbox is fitted with a dipstick and oil filler plug, see photo 20.
- 2) Each engine is supplied with a gearbox 'operators manual' which specifies the type of lubricating oil to be used, the capacity and frequency of changing of the oil.
- 3) New engines are normally supplied with the gearbox topped up with lubricant but **check the level before starting the engine for the first time.**
- 4) The oil can be changed via the drain plug at the bottom of the box or sucked out with a hand pump via the filler plug.
- 5) A guide to the type of oil to be used is as follows:

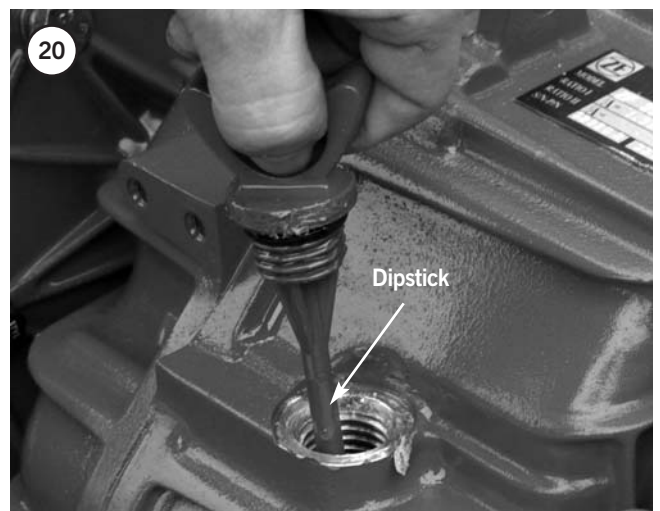

Gearbox	Lubricant	Capacity (approx.)
TMC60	Use ATF Oil	0.50 litres
TMC60A	Use ATF Oil	0.80 litres
TMC260	Use ATF Oil	1.20 litres
TM345	Use ATF Oil	1.60 litres
TM93	Use ATF Oil	2.40 litres
ZF25 (Hydraulic)	Use ATF Oil	2.00 litres
ZF25-A (Hydraulic)	Use ATF Oil	1.80 litres
PRM150	Use ATF Oil	1.40 litres
PRM260	Use Engine Oil 15W40	1.70 litres
PRM500	Use Engine Oil 15W40	2.50 litres

Note: ATF is Automatic Transmission Fluid. For additional information please ask.

Fuel System

Important

- **Always fit a fuel / water separator in the fuel supply system.** Water in the fuel can seriously damage the injection system and a replacement fuel injection pump is expensive.
- If a fuel supply shutoff valve is fitted do not use a taper tap, only use a ball valve tap. The ball valve type are more reliable and less likely to let air into the fuel system.
- Be sure to use a strainer when filling the fuel tank. Dirt or sand in the fuel may cause trouble in the fuel injection pump.
- Always use diesel fuel. Do not use paraffin / kerosene, which is very low in cetane rating, and adversely affects the engine.
- Low sulphur diesel fuel - regulations changed recently reducing the sulphur content by 99%, in many countries. The European standard is EN590:2009, and in the USA ASTM D975-09. The engine is designed to run on low sulphur fuel, and this is now preferred.
- Most diesel fuels now contain up to a maximum limit of 7% Biodiesel and this does not affect the engine warranty.

The recent changes to fuel specifications allow the addition of FAME (fatty acid methyl ester) biodiesel EN14214:2009, to diesel fuel, but please be aware that biodiesel does allow bacteria to grow more easily in the fuel and this can clog your fuel tank, pipes and filters.

If you experience an outbreak of bacterial growth you can either empty and clean out your fuel pipes and tank, or use biocide additives and filtering.

- We know that some customers are using 100% Biodiesel fuel, if you use a higher percentage of Bio-diesel fuel you must fit an electric lift pump into the fuel supply line, and the fuel filter and oil filter must both be changed together when the oil filter is normally replaced. **Important: Beta Marine warranty will not cover fuel equipment when more than 7% Biodiesel is used.**
- Be careful not to let the fuel tank become empty, or air can enter the fuel system, necessitating bleeding before next engine start.
- The fuel lift pump will only lift fuel through 0.25m. If this is insufficient then an electric fuel lift pump must be fitted. Drawing 202-06421, illustrating recommended wiring for this pump is included in the back of the manual.

Fuel Filter Replacement


1. The fuel filter is a spin on type. Remove by turning anti-clockwise when viewed from below.
2. Replace the fuel filter cartridge every 750 hours or every 2 years. See photo 21.
3. Apply fuel oil thinly over the gasket and tighten into position - hand tight.
4. Bleed as detailed - see 'initial start up'.
5. Check for leaks.
6. Do not get fuel on the flexible mounts, this will degrade the rubber.




Filling the Freshwater System

New engines are supplied with the freshwater drained off. The following instructions must be followed to fill the system.

- (a) Mix up in a clean bucket a 50% antifreeze to 50% freshwater solution (see page 10). For the volume required see technical specification page 4.
- (b) With Beta 43 & Beta 50, check that the drain tap or plug is turned off, see photo 23. The Beta 60 is not fitted with a drain tap (if required drainage can be achieved by removing the oil cooler water pipe next to the lift pump).

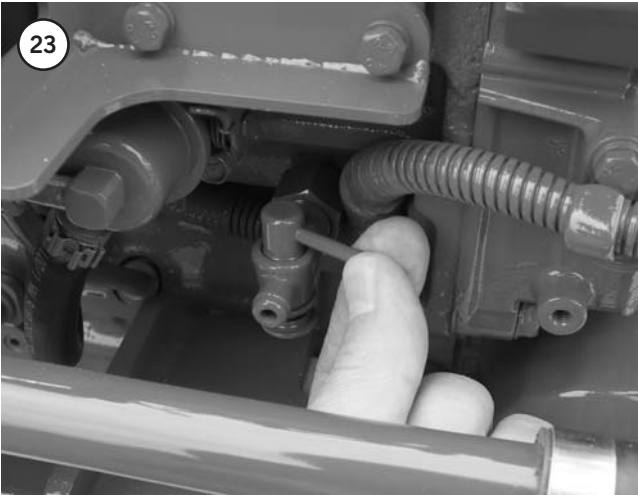

- (c) Fill engine with freshwater / anti-freeze solution through the top of the heat exchanger or header tank with the filler cap removed. See photo 24.

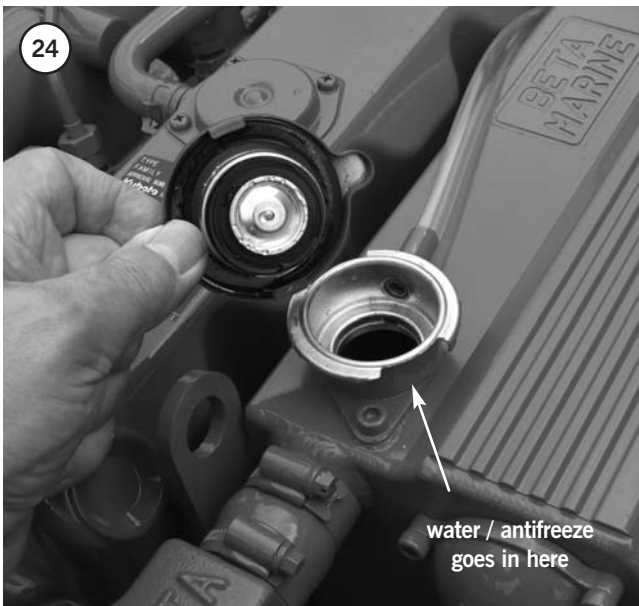


- (d) Fill header tank to the top of the filler neck and replace cap. Press down firmly on filler cap and hand tighten in a clockwise direction.
- (e) Run the engine for 5 minutes on no load (out of gear) and check coolant level. Top up as necessary.
- (f) Check system for leaks.
- (g) If a calorifier is fitted care must be taken to see that this is also full of coolant and all the air is expelled. (See calorifier fitting notes under Section 1).
- (h) Run the engine on one third load for 15 minutes, preferably with the boat tied up. As the system warms up coolant may be expelled from the overflow pipe into the bilge. Stop the engine and allow the engine to cool down before removing the pressure cap and top up the coolant to 1" below the filler neck.

Important: Removal of the pressure cap when the engine is hot can cause severe injury from scalding hot water under pressure. Always allow the engine to cool and then use a large cloth when turning the cap anti-clockwise to the stop. This allows the pressure to be released. Press firmly down on the cap and continue to turn anticlockwise to release the cap.

- (i) Repeat (h) if coolant level is more than 1 inch below the base of the filler neck when the engine has cooled down.
- (j) Run engine on $\frac{2}{3}$ full load for 20 minutes, check for leaks and repeat (i).
- (k) Anti-freeze solutions should be drained off every 2 years and replaced with a new solution.

Note: When draining fresh water system, ensure the engine has cooled sufficiently to prevent scalding from hot pressurised water. Prior to draining a cold engine, remove the filler cap from the header tank and then open the water drain tap. This allows the water to drain freely from the system.

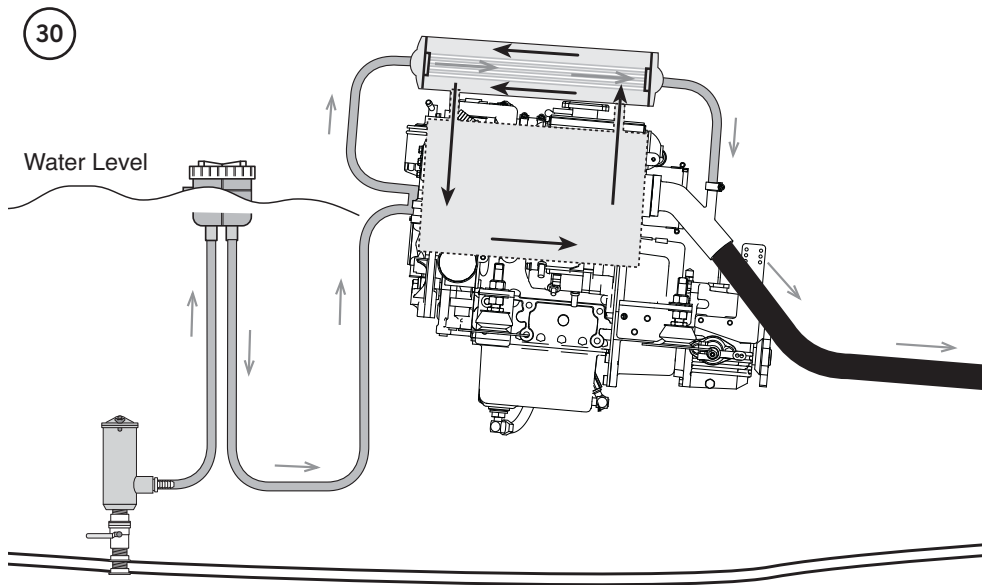

Heat Exchanger Cooled

Fresh water 'coolant' circulates through the engine and then the heat exchanger body where the engine heat is transferred to the sea water that is pumped through the heat exchanger cooling tubes (tube stack). The heated sea water is then injected into the exhaust system (see diagram).

Yachts and Launches with Heat Exchanger Cooling

It is essential that a solution of fresh water and anti-freeze is used as engine coolant. The ratio of anti-freeze must be 50% anti-freeze and 50% water. This not only stops 'freezing up' in winter, but it prevents overheating and corrosion.

**The warranty is invalid unless the correct ratio is used.
The concentration of ethylene must NOT exceed 50%.**



The anti-freeze in the fresh water system enables the boiling point of water to rise to 124°C with a 13 psi pressure cap fitted.

The water temperature alarm switch will however be activated at 95°C to 100°C. If no anti-freeze or a very weak solution is used, then the water temperature switch may not be activated before coolant is lost.

Cleaning the Heat Exchanger Tube Stack and Replacing 'wasting zinc anode'

- (1) The wasting zinc anode should be checked regularly at least every six months and replaced every year or sooner, as necessary. The anode is attached to the bolt inserted in the end cap of the heat exchanger. See photo 31. On most engines this is on the aft end.
- (2) Unscrew the bolt and replace the complete unit with a new one, 209-61840. Check for leaks.
- (3) It is possible for fine sea weed and other debris to get past the inlet filter and into the tube stack. This should be removed and cleaned. See photo 32.



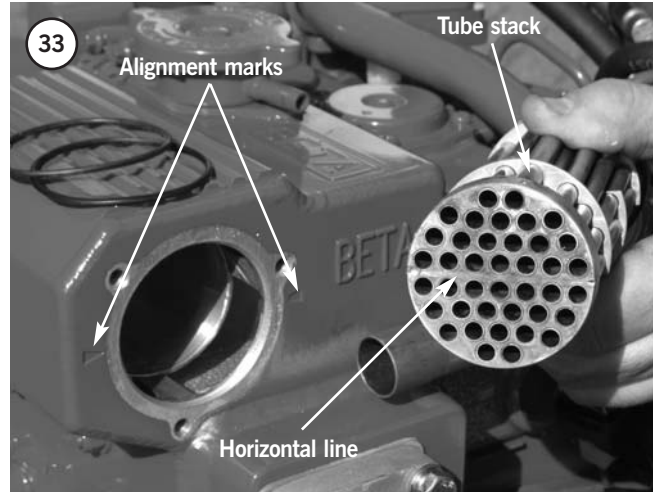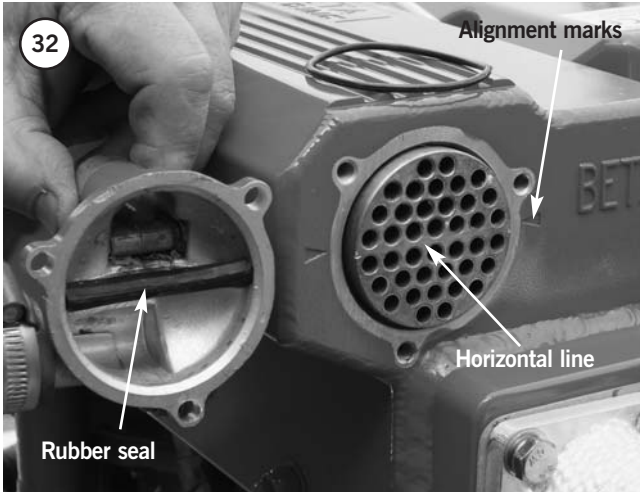

- (4) Drain off coolant into a bucket.
- (5) Unscrew the 6 end cap retaining bolts using a 5 mm Hex key (3 each end of the heat exchanger). Remove the 'O' rings and slide out tube stack. Carefully clean tube stack and end caps.
- (6) Re-assemble using new 'O' rings 212-07273.
Important: The tube stack can be fitted either way

around but must be aligned correctly with the horizontal line and rubber seal between the alignment marks at the exhaust end of the heat exchanger. (This ensures correct coolant flow in the heat exchanger) Do not over tighten end cap bolts.

- (7) Re-fill engine with coolant (water / anti-freeze solution) and run engine up to temperature to check for leaks.



Sea Water Pump and Cooling System

(Heat exchanger-cooled engines)

Caution: Before working on the sea water system ensure that the **sea cock is in the off position**.

- 1) It is very important that the correct sea water flow is maintained to cool the closed circuit system of the engine. The key component in this system is the sea water pump impeller. This should be checked every year by removing the circular plate. See photo 34.
- 2) Withdraw the rubber impeller from its drive shaft as shown. See photo 35.
- 3) Check impeller for cracks in the rubber, excessive wear or lost vanes. Replace with a new impeller as necessary.

Note: If any pieces of rubber impeller are missing then they must be found as they are most likely to be trapped in the entrance to the heat exchanger cooling stack. See 'Cleaning Tube Stack'.

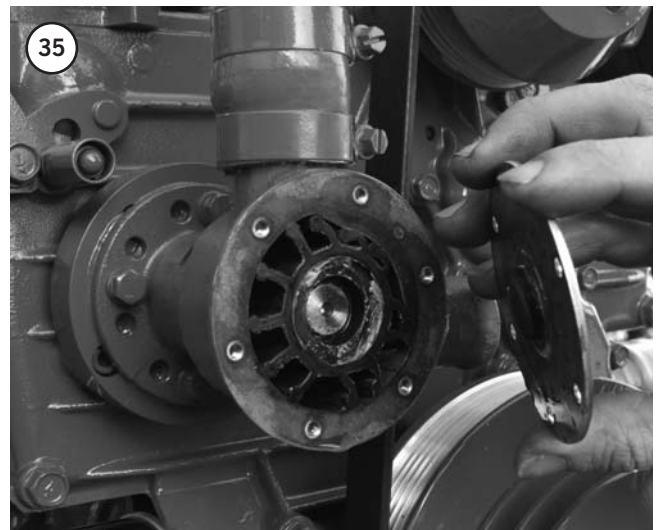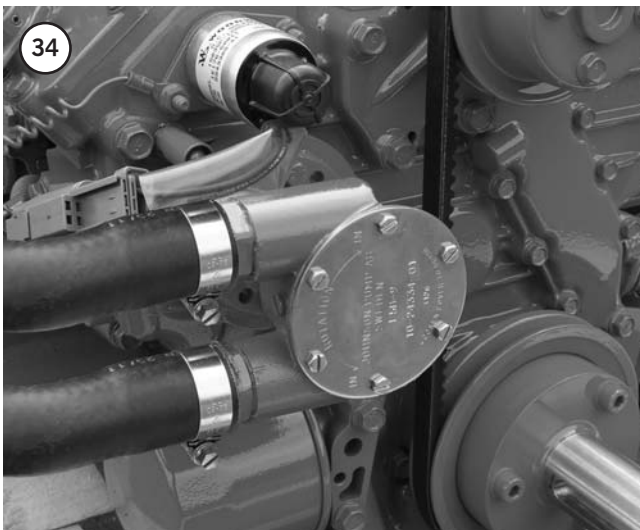

Belt Tension

65 Amp alternator (heat exchanger cooled)



Warning: Belt tension must only be checked with the engine switched off.

- (1) On heat exchanger cooled engines a single 65 amp is fitted as standard. This alternator is adjusted as follows.
- (2) The belt tension is adjusted by swinging the alternator outboard as it pivots on its support bolts. See photo 29.
- (3) With the engine stopped, loosen the support bolts and the link adjusting bolt.

- (4) Push alternator outboard to tension and tighten link bolt. Check that the depression of the belt at position shown is approximately $\frac{1}{2}$ " or 12 mm when pushed down firmly by thumb. Tighten support bolts. See photo 30.
- (5) Belt tension should be regularly checked especially during the first 20 hours of running in a new belt, as stretching occurs.

100 Amp alternator (option)

The same method applies as outlined above, but final tensioning must be by hand only. Over tensioning will cause premature failure of components.

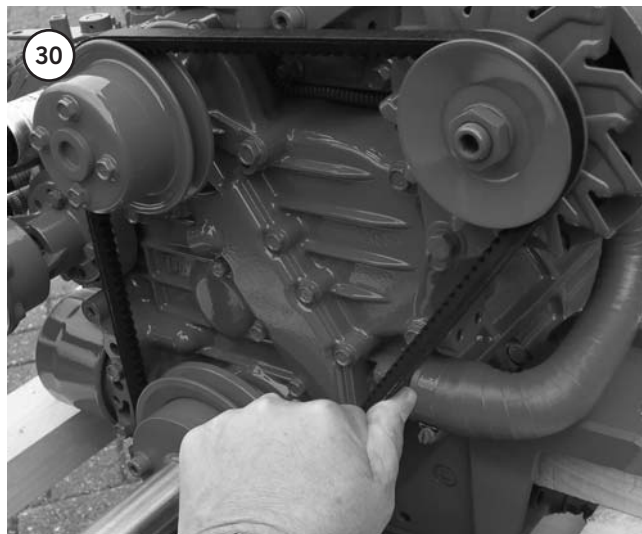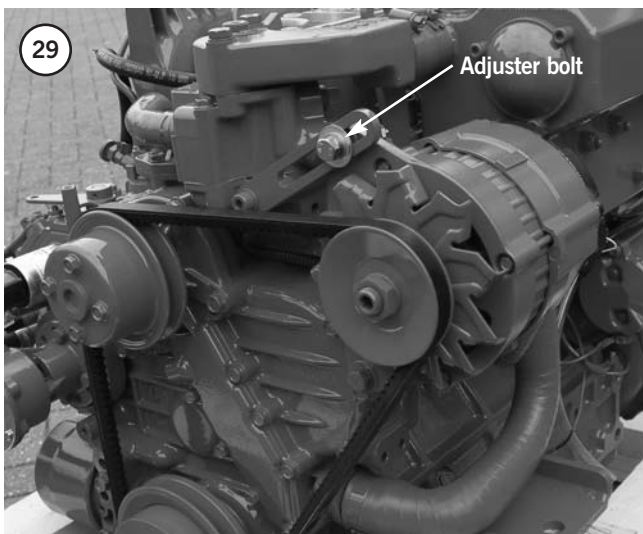

Air Filter Intake

These engines are fitted with an air intake filter which should be checked every season and changed every 2 years or sooner if badly clogged. If badly clogged check more often.



Maintenance - Electrical



Warning:

Under no circumstances should the battery be disconnected or switched off when the engine is running. This will seriously damage the alternator.

Panels and Wiring

See installation notes, page 30.

General Maintenance

- (1) The panel must be protected from rain and sea water, see installation. Sea water entering the key switch will eventually cause corrosion and could result in the starter motor being permanently energised and burning out. Spray key switch every month with WD40 or equivalent; or apply 'vaseline'.
- (2) Check batteries for acid level and top up if required. For low maintenance and 'gel' batteries see manufacturers instructions.
- (3) Loose spade terminal connections are the most common cause for electrical faults - check on a regular bases (see maintenance instructions).

Winterising and Laying up

Heat Exchanger Cooled Engines Left Afloat and Ashore

- (a) The engine oil and oil filter should be changed at the end of the season rather than in the spring. See section 2.
- (b) The closed circuit system should contain a solution of 50% antifreeze to 50% water (this also applies to warm and tropical climates).
- (c) For cold climates where the air or water temperatures can fall below 3°C, the sea water circuit must be protected in addition to the fresh water system. This is best achieved as follows:
 - (d) Close the inlet seacock to the engine (engine stopped).
 - (e) Disconnect the sea water inlet pipe and dip it into a small bucket containing 50/50 anti-freeze solution.
 - (f) Start the engine (out of gear) and run for 5 to 10 seconds until the anti-freeze is used up and can be seen coming out of the exhaust outlet.
 - (g) Shut engine off and reconnect the inlet pipe to the seacock. The sea water or raw water circuit is now protected by anti-freeze.
 - (h) Ensure instrument panel is well protected and give the key switch a spray of WD40 or equivalent.
 - (i) With the engine stopped, disconnect the battery (always disconnect the negative cable first and re-connect the negative cable last) and take it ashore for trickle charging and top up as necessary. If AC power is available then this can be done on the boat.
 - (j) Fuel tanks should be kept full during the lay up period to eliminate water condensation in the tank. Water entering the fuel injection system can cause considerable damage.

Laying up Ashore

- a) Change the engine oil before the boat is taken out of the water. Remember that warm engine oil is much easier to pump than cold!
- b) Cooling system - As above in 'Winterising and Laying up' paragraphs (b) to (f) should be followed.
- c) If the engine is to be laid up for more than 6 months then remove the sea water pump impeller.
 - d) If the engine will not be used or run for periods longer than 6 months we recommend that the engine is 'inhibited' - this means involves running the engine for about 5 minutes to:

Replace all the diesel fuel in the fuel system and injection pump by running the engine with 'calibration fluid' (fuel pump test oil ISO 4113).


Allow 'Ensis' to circulate around the lubricating oil system by draining out the standard lubricating oil and replacing it with a rust preventative oil such as 'Ensis' or similar.

Trouble Shooting

Beta diesels are very reliable if installed and serviced correctly, but problems can occur and the following list gives the most common ones and their solution.

Problem: Engine does not start but starter motor turns over OK	
Possible Cause	Solution
No fuel:	Turn fuel cock on and fill tank.
Air in fuel system:	Vent air (see initial start-up)
Water in fuel:	Change fuel filter and bleed system.
Blocked fuel pipe:	Clean out and bleed system.
Fuel filter clogged:	Change filter and bleed system.
Fuel lift pump blocked:	Remove and replace.
Blocked injector:	Remove and clean.
Fuel return not fed back to the tank:	Re-route fuel return pipe.
Heater plugs not working:	Check wiring to the plugs, and replace plugs if they are burnt out.
Stop solenoid stuck in off position:	Check solenoid is free to return to run position.

Problem: Starter motor will not turn or turns over very slowly	
Possible Cause	Solution
Battery discharged:	Charge battery or replace. Check alternator belt tension.
Starter motor flooded with sea water:	Remove and clean or replace.
Wiring disconnected or loose:	Check circuit for loose connections.
Water in cylinders:	Incorrect installation. This is serious - check engine oil for signs of water (creamy-coloured oil). Ring your dealer.
Engine harness fuse blown:	Replace fuse located by starter motor (or above flywheel housing) and check for wiring faults.

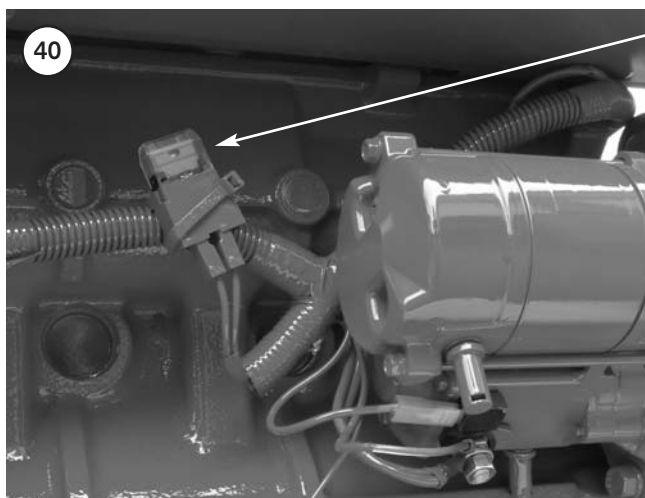

Fuse.

Note: For convenience, some engines are supplied with a spare fuse and holder attached to the main engine fuse holder.

Problem: Low power output

Possible Cause	Solution
Propeller is too big:	Change or depitch.
Check gearbox reduction ratio relative to propeller size:	Change.
Blocked fuel filter:	Replace.
Blocked air filter:	Replace.
Air in fuel system:	Check system and bleed
Governor spring incorrectly mounted:	Dealer to adjust.
Single lever control not operating correctly:	Disconnect speed control cable and move the lever by hand. Adjust cable.
The electrical load is too large on start up:	Disconnect or reduce the load.

Problem: Erratic running / hunting

Possible Cause	Solution
Air in fuel supply:	Check supply system for leaks and fix.
Fuel lift pump faulty:	Replace.
Clogged fuel filter:	Replace.
Fuel return not fed back to the fuel tank, or blocked pipe:	Re-route pipe or clean.
Air filter blocked:	Replace.
Worn or blocked injector:	Service injectors.
Engine rpm in gear is too low, this must be 850 min:	Increase engine tick over speed.
Faulty stop solenoid:	Disconnect wiring to solenoid. If running improves check for a wiring fault.
Broken fuel injection pump spring:	Replace, this is usually caused by water in the engine oil/fuel
Fuel suction head is too much:	Fit electric fuel lift pump.

Problem: Hunting at idle

Possible Cause	Solution
Idle adjustment screw may need adjusting:	Speak to Beta Marine for advice with idle adjustment - discuss problem.

Problem: Hunting at higher speeds

Possible Cause	Solution
Fuel supply problem:	Change fuel filters and check fuel supply.

Problem: White or blue exhaust gas

Possible Cause	Solution
Engine oil level too high:	Reduce the level.
Blocked injector:	Service injectors.
Piston ring and bore worn or con rod bent due to water ingress, giving a low compression:	Get compression checked by your dealer or Kubota service agent. He will advise action to be taken.
Check that the breather pipe is clear and not obstructed:	Remove and clean out

Problem: Black exhaust gas

Possible Cause	Solution
Blocked air filter element:	Inspect and replace.
Over pitched propeller - engine will not reach its full rpm:	Get the propeller re-pitched if necessary.
Accumulated debris on hull:	Inspect and clean if required.

Problem: Low oil pressure warning light on when underway

Possible Cause	Solution
Oil frothing due to high installation angle or too high oil level:	Refer to Beta Marine for advice

Problem: Low oil pressure warning light on when engine speed is reduced to tick over

Possible Cause	Solution
Faulty switch sender:	Replace.
Engine running too hot:	Check cooling water flow (see section 2 Cooling).
Oil relief valve stuck partially open with dirt:	Remove and clean.
Blocked oil filter:	Change.
Wiring fault:	Check circuit.
Insufficient oil:	Top up and check for leaks.
Problem:	Panel rev counter not working (when fitted).

Problem: High oil consumption

Possible Cause	Solution
Oil leaks:	Check for leaks.
Piston rings worn:	Overhaul required.
Valve stem and guide worn:	Overhaul required.
Piston rings gap facing the same direction:	Shift ring gap position. Service Agent to check.

Problem: Water in lubricating oil - general

Possible Cause	Solution
Core plug pushed out due to frozen block:	Service Agent to check and replace.
Water pump seal damaged:	Service Agent to check and replace.

Problem: Water in lubricating oil - heat exchanger cooled

Possible Cause	Solution
Oil goes "milky" due to seawater entering exhaust manifold:	Check installation - has anti-siphon valve been fitted? Change engine oil and run engine for 10 minutes each time to eliminate any water. Get fuel injection pump and compression checked by Service Agent.

Problem: Water in lubricating oil - keel cooled

Possible Cause	Solution
Oil goes "milky" due to water entering exhaust manifold and then into the sump:	Check installation - has dry exhaust system been fitted correctly, and ensuring rain water cannot enter the exhaust port and run back? (See Dry Exhaust System). Change engine oil and run engine for 10 minutes each time to eliminate any water. Get injection pump checked by Service Agent.

Problem: Engine overheats

Possible Cause	Solution
Check coolant level:	Top up.
Pressure cap loose:	Tighten correctly or replace.
Switch sender faulty:	Replace.
Insufficient restrictions in pipe to calorifier:	Clamp off pipe to confirm.
High exhaust back pressure:	Beta 10 to Beta 25 maximum 70 mmHg; Beta 30 to Beta 60 maximum 80 mmHg, and Beta 75 to Beta 105 maximum 90 mmHg.
Keel cooler insufficient size:	Contact boat builder

Problem: Engine overheats - Heat exchanger only

The most common cause of overheating is insufficient seawater flow due to a blocked intake (weed or a plastic bag!). If this happens then clear the blockage. If the problem is not cured then check the system for sea water flow which should be 15 litres / minute minimum at 1,500 rpm as follows:

- With the boat tied up and out of gear run the engine up to 1500 rpm. Hold a plastic bucket over the exhaust outlet for 10 seconds and measure the amount of water collected*. Multiply this value by 6 to give the flow in litres/min. Repeat twice and take an average. If the flow rate is noticeably less than the 15 litre per minute minimum at 1,500 rpm, then:
 - Check impeller in sea water pump - if worn replace.
 - If impeller has a vane missing then this will be lodged either in the pipe to the heat exchanger or in the end of the exchanger. This must be removed.
 - Check flow again as in (a).

***Note:** This operation must only be done in safe conditions, in port and with two assistants. Working from a rubber dinghy is best. The person holding the bucket should take precautions against breathing in the exhaust gasses.

Problem: Engine overheats - Keel cooling only

Sometimes overheating is caused by:

- Not fully venting the engine cooling system of air. It is necessary to remove all air from the cooling system - including the "skin" tanks and (if fitted) the Calorifier and associated piping.
- Incorrectly sized "skin" tanks that have been sized for 'usual' canal use (rather than maximum engine output that can sometimes be required) on fast flowing rivers. An additional "skin" tank may need to be fitted; please refer to our website: Inland waterways - Guidelines: keel cooling tank sizes.

Problem: Battery quickly discharges

Possible Cause	Solution
High load and insufficient running:	Reduce load or increase charging time. Large domestic battery banks subject to high electrical loads will take a considerable time to recharge from a single alternator.
Low electrolyte level:	Top up.
Fan belt slipping - black dust in engine compartment, engine compartment temperature too high:	Adjust tension / replace belt with a high temperature type and / or improve engine compartment ventilation.
Alternator defective:	Check with Agent.
Battery defective:	Replace.
Poor wiring connection:	Check wiring system.

Problem: Morse control cable will not fit

Possible Cause	Solution
Incorrect fitting:	Cables are being fitted the wrong way around, switch over and fit the opposite way.

Problem: Panel rev counter not working (when fitted)

Possible Cause	Solution
No W connection to alternator:	Check output from 'W' connection. Should be about 9V AC
Wiring fault:	Check circuit

Problem: Transmission noise

Possible Cause	Solution
Check gearbox oil level:	Top up.
"Singing" propeller:	Check with propeller supplier about 'harmonics'.
Drive plate rattle at tickover:	Check engine rpm (must be 850rpm min. in gear).
Worn drive plate:	Change.
Propeller shaft hitting the Gearbox half coupling:	Move shaft back to give 5mm - 10mm clearance (Type 12/16 couplings only).
Propeller torsionals causing gears to rattle at low rpm:	Fit a torsional flexible coupling such as Centa type 16 or equivalent.

Problem: Vibrations

Possible Cause	Solution
Poor alignment to shaft:	The alignment must be accurate even if a flexible coupling is used (see section 1, Alignment).
Flexible mounts not adjusted correctly to take even weight:	Check relative compression of each mount.
Flexible mount rubber perished:	Replace. (Diesel or oil will eventually perish most rubbers.)
Loose securing nut on flexible mount:	Check alignment and then tighten the nuts.
Insufficient clearance between the propeller tip and the bottom of the boat:	There must be at least 10% of the propeller diameter as tip clearance between the propeller and the bottom of the boat. Reduce propeller diameter / increase pitch.
Loose zinc anode on the shaft:	Tighten or replace.
Worn cutless bearing or shaft:	Replace.
Weak engine support/bearers:	Check for cracked or broken feet.

Problem: Knocking noise

Possible Cause	Solution
Propshaft touching gearbox output coupling through split boss or Type 16 coupling:	Adjust, giving correct clearance give 5mm - 10mm between gearbox and propeller shaft
Flexible mount stud touching engine bed:	Adjust stud to clear
Drive plate broken:	Replace / repair
Engine touching engine bed:	Re-align engine / modify bed
Injectors blocked through excess carbon caused by water in the fuel:	Remove and check injector nozzles, replace if required.

Electrical Fault Finding & Trouble Shooting - Engines built after July 2005 only

The following chart is compiled to aid diagnosis of electrical faults, based on the Beta 10 - 90hp range of engines. If your engine was built before July 2005, contact Beta Marine for the relevant electrical trouble shooting guide.

Note: our standard control panels are for earth return installations only (where battery negative cable is connected directly to engine ground). For insulated earth (where battery negative cable is isolated from engine ground) different harnesses, alternators, switches for oil pressure and engine temperature are fitted.

Standard sea specification engines (heat exchanger cooled) are supplied with a single alternator, mounted port side, supplying power to starter battery and control panel.


Standard canal specification engines (keel cooled) are supplied with twin alternators:

- 1st alternator, mounted port side, supplying power to starter battery and control panel
- 2nd alternator, the standard mounting position for this is above the engine on the starboard side (or below 1st alternator on 75 and 90hp), supplying power to the domestic battery system.

Both of these alternators work independently, if the domestic battery system is disconnected, the engine will still run correctly but:

- Domestic charge warning lamp will not function
- Warning buzzer will remain on at all times


Note: The two way plug on panel loom will only have a corresponding socket to connect into from the engine if a 2nd alternator is fitted which requires this connection. Engines with only one alternator do not utilise this connection.

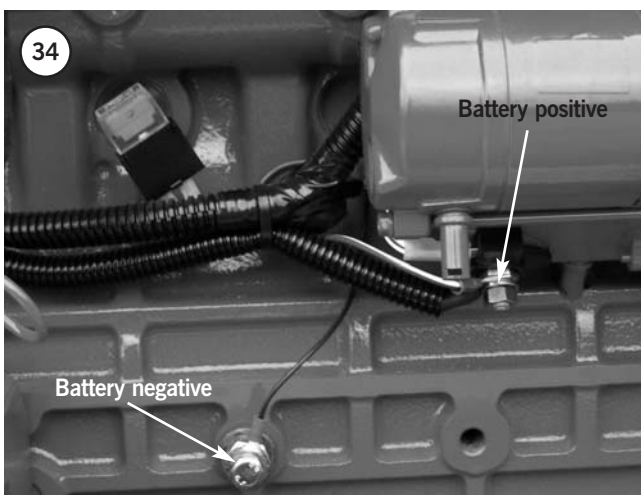

Standard Keyswitch Control Panels are supplied with four or five lamps.

Four lamp panels: A, ABV, B these panels utilise bulbs inside sealed lamp holders.

Five lamp panels: AB and C; these panels also utilise bulbs inside sealed lamp holders, having an additional lamp for 'domestic battery charge'.

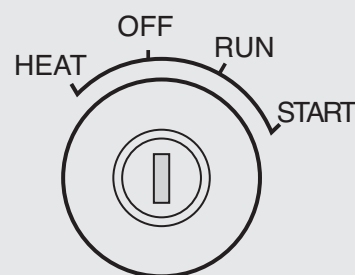


With keyswitch* in run position and engine off:

- Red lamp for 'low oil pressure' should function
 - Red lamp for 'high engine temperature' should not function (when engine is cold/cool/warm). This lamp will only ever function if the engine is over temperature.
 - Red lamp for 'no starter battery charge' should function
 - Red lamp for 'no domestic battery charge' should function (**Note:** this will only function if a second alternator is fitted to the engine and connected to a charged battery)
 - Green lamp for 'panel power on' should function
- Buzzer should sound

Electrical Fault Finding & Trouble Shooting - Engines built after July 2005 only

ABVW - Keyless four lamp panel (without keyswitch)

This panel controls the engine with three water resistant push buttons instead of a keyswitch, and is less prone to damage and corrosion from sea water spray. This panel utilises bulbs inside sealed lamp holders

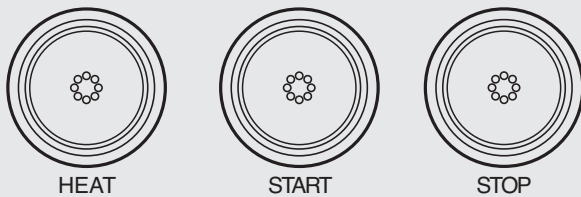

- 1) Press and hold 'HEAT' button for ten seconds maximum.



Red lamp for 'low oil pressure' should function



Red lamp for 'high engine temperature' should not function (when engine is cold/cool/warm). This lamp will only ever function if the engine is over temperature.



Red lamp for 'no starter battery charge' should function



Green lamp for 'panel power on' should function

Buzzer should sound.

- 2) Press 'START' button and hold in position until engine fires (see initial start-up section for maximum time starter can be operated). Release button (when engine has started).



All red warning lamps should extinguish and buzzer should stop sounding. The oil pressure lamp may take a few seconds to switch off and the charge fail lamp may remain on until engine rpm is increased to approximately 1,000rpm if the engine was started at tickover.



Green lamp for 'panel power on' should still function.

- 3) To stop the engine press the 'STOP' push button, hold in until engine stops. This button also switches the power off to the gauges, engine and power on lamp. Before investigating any specific electrical problem, always check:

- Connection between panel harness and panel loom. It must be clean, dry and secured with a cable tie.
- Check the start battery is connected to the correct terminal on the starter motor.
- Check the domestic battery is switched on and connected to the correct terminals for the 2nd alternator.
- Battery connections, inspecting condition of cables from battery to engine. If in doubt measure the voltage at the engine.
- If alternator charge problem, measure battery voltage with engine off and again with engine running, if there is an increase alternator is functioning correctly, if not refer to check list.

Electrical Fault Finding - All Lamp Panels

Problem	Possible Cause and Solution
No warning lamps or buzzer functioning, engine will not start or stop	<ul style="list-style-type: none"> • Battery isolation switch in off position - switch on • Starter battery discharged - charge • Engine fuse blown - check fuse (above starter motor or flywheel housing) and replace if necessary. • Check for wiring faults.
Non function of warning lamp. The water temperature lamp will not function unless engine is overheating or there is a wiring fault	<ul style="list-style-type: none"> • Disconnect switch wire to non-functioning lamp: green/blue –water temperature, white/brown –oil pressure, brown/yellow –alternator charge. Reconnect wire temporarily to another warning lamp that is functioning; if wire switches lamp on replace faulty lamp. • Disconnect positive feed to non-functioning lamp. Reconnect temporarily with wire from another warning lamp that is functioning, if wire switches lamp on rewire with new connection. • If none of the above, check continuity of connections from panel to engine.
Water temperature warning lamp on when engine is not over temperature (Not B or C deluxe panel see table on following page)	<p>If engine is cold:</p> <ul style="list-style-type: none"> • Faulty wiring, check connection and continuity (small green/blue) from switch to panel lamp. Ensure this connection is not shorting to earth (ground). • Faulty temperature switch –if lamp switches off on removal of connection to switch unit, replace. <p>If engine is warm:</p> <ul style="list-style-type: none"> • Switch wire connected to large sender terminal of switch/sender unit. Remove and refit to smaller (switch) terminal.
Buzzer not functioning. The buzzer will not sound for green 'power on' lamp	<ul style="list-style-type: none"> • If lamp is functioning but buzzer not sounding, check connection and continuity from illuminated warning lamp (red not green) to buzzer board. • Faulty warning panel buzzer board - replace.
Starter battery charge lamp not functioning	<p>If tacho not functioning:</p> <ul style="list-style-type: none"> • Alternator not connected properly, check continuity of small brown wire from rear of alternator to 'AC' position on keyswitch. • Alternator connected properly, faulty alternator - replace <p>If tacho functioning correctly:</p> <ul style="list-style-type: none"> • Check continuity of small brown/yellow wire from rear of alternator to no charge warning lamp on rear of panel. • If alternator connected properly, faulty panel warning lamp - replace
If tacho not functioning	<ul style="list-style-type: none"> • Check connections on rear of tacho, especially black/blue wire, terminal '4' • Check connection of black/blue wire on rear of 1st alternator (W connection, usually a bullet on flying lead, or lowest connection on alternators with 3 pin coupler) • Check continuity of black/blue wire from alternator to tacho • Measure voltage from alternator W connection to earth (ground), should be approx. 7.5 - 9.0 volts AC
Domestic charge lamp not functioning, buzzer remains on with engine running	<ul style="list-style-type: none"> • Domestic battery not connected • Domestic battery not connected correctly: B+ to domestic isolation block on starboard rail (port on 75 - 95hp) B- to engine earth (ground) • Domestic battery flat • Panel relay faulty / incorrectly wired: Check voltage at relay terminal 86, white wire is positive feed for warning lamp from AC position of keyswitch.
Domestic charge lamp not functioning, buzzer switching off with engine running. This lamp will only function if a second alternator is fitted to the engine	<ul style="list-style-type: none"> • No second alternator fitted to engine, domestic lamp not used • D+ (charge indication) lamp connection at rear of alternator not connected • Two way plug and socket disconnected between engine harness and panel loom

Electrical Fault Finding - C Deluxe and Water Temperature Function on B Panels

In addition to the fault finding detailed on the previous table, the following is specific for the deluxe panel (Also applicable for the B panel with Murphy water temperature gauge)

Problem	Possible Cause and Solution
Oil pressure warning lamp not functioning, oil pressure gauge showing maximum deflection. Engine off and keyswitch in run position	<ul style="list-style-type: none"> Faulty wiring - check wire connection and continuity (small white/brown) from sender to panel lamp. Ensure this connection is not shorting to earth (ground).
Oil pressure gauge showing no movement - even when engine is started. Warning lamp functioning correctly	<ul style="list-style-type: none"> Faulty wiring - check oil pressure sender wire (small white/brown) is connected.
Oil pressure showing no movement, Warning lamp not functioning correctly	<ul style="list-style-type: none"> Check connection to oil pressure gauge, if plug is not connected to socket on rear of gauge, reconnect. If all connections are correctly made, possible faulty sender unit - check resistance to earth (ground) approx. 50 Ω . Replace if no reading or short-circuited. If adjusted correctly & buzzer still sounding, possible faulty switch gauge unit - replace.
Oil pressure showing normal operating pressure (0.75 - 5 bar). Buzzer sounding and lamp illuminated.	<p>Engine warm:</p> <ul style="list-style-type: none"> Incorrectly calibrated switching point for warning lamp, adjust on rear of gauge to 0.5 bar (minimum adjustment on gauge). If adjusted correctly & buzzer still sounding, faulty switch gauge unit - replace.
Water temperature gauge showing 120°C / 250°F. This also applies to the B Panel with Murphy gauge	<p>Engine cold / cool:</p> <ul style="list-style-type: none"> Faulty wiring, check water temperature sender wire is not shorting to earth (ground). Faulty sender unit, - check resistance to earth (ground), approx. 3.5k Ω (cold) – 0.5k Ω (warm). Replace if notably less.
Water temperature gauge showing normal operating temperature (85°C). Buzzer sounding and lamp illuminated. This also applies to the B Panel with Murphy gauge	<p>Engine warm:</p> <ul style="list-style-type: none"> Incorrectly calibrated switching point for warning lamp adjust on rear of gauge to 100°C / 210°F. If adjusted correctly & buzzer still sounding, faulty switch gauge unit – replace.
Water temperature gauge showing no movement, lamp not illuminated, engine warm. This also applies to the B Panel with Murphy gauge	<ul style="list-style-type: none"> Check connection to sender, if disconnected gauge will not function. Check connection to temperature gauge, if plug is not connected to socket on rear of gauge reconnect.
Water temperature gauge showing no movement, lamp not illuminated, engine warm. This also applies to the B Panel with Murphy gauge	<ul style="list-style-type: none"> Check connection to sender, if disconnected gauge will not function. Check connection to temperature gauge, if plug is not connected to socket on rear of gauge reconnect. If all connections are correctly made, faulty sender unit - check resistance to earth (ground), approx. 3.5k Ω (cold) – 0.5k Ω (warm). Replace if no reading.

Electrical Fault Finding – Non-Beta Panels

Engines can be supplied wired up to suit VDO switch senders, usually fitted to a non-Beta control panel. If so refer to our wiring diagram 200-60971/01 (also part number for replacement harness)

- Loom is configured differently in the 11-way plug to accommodate the extra wiring.
- Small brown wire (battery sensed alternator feed) fitted with bullet connection beside harness plug.
- Oil pressure and water temperature switch / senders fitted to engine, requiring individual connections for driving gauges and warning lamps.

Note: Water temperature switch/sender (Part number 200-01133)

Large spade is sender connection	(green/blue)
----------------------------------	--------------

Small spade is switch connection	(blue/yellow)
----------------------------------	---------------

Oil pressure switch/sender (Part number 200-62680)

G	Gauge wire	(white/brown)
---	------------	---------------

M	Earth (ground)	(black)
---	----------------	---------

WK	Warning lamp	(green/yellow)
----	--------------	----------------

Electrical Fault Finding – Extension Harnesses

Some installations require one of the panel extensions 11 way connectors to be removed to allow the cable to be passed through bulkheads etc.

If any panel problems are experienced, after this may have been carried out, visually check all 11 way connections on engine harness to panel extension (**and panel extension to panel on C 'Deluxe'**) to ensure wire colours to each terminal match up to the correct colour in its corresponding terminal.

Extra attention must be given to black (ground) and black/blue (tacho), also brown (switched positive to alternator) and brown/yellow (charge fail) as these connections are harder to distinguish between in poorly lit areas. Whilst doing this check integrity of each connection to ensure terminals have not become damaged. Once checked, re-fit cable tie around each connection to keep them secure.

Electrical Fault Finding – Insulated earth

If your application is wired as insulated earth return and the engine will not operate correctly, always check starter battery negative is connected to the correct terminal on the isolating solenoid.

It should be connected to the terminal which is also used for all the small black wires, **NOT the terminal with the single black wire connected directly to engine ground.**

Spanner Torque Settings

Tightening Torques for general use bolts and nuts


ITEM	Size x Pitch	kgf m	lbf ft (ft lbs)	N m
M6 (7T) : 6mm (0.24in)	-	1.0~1.15	7.2~8.3	9.8~11.3
M8 (7T) : 8mm (0.31)	-	2.4~2.8	17.4~20.3	23.5~27.5
M10 (7T) : 10mm (0.39in)	-	5.0~5.7	36.2~41.2	49.0~55.9
M12 (7T) : 12mm (0.47in)	-	7.9~9.2	57.1~66.5	77.5~90.5

Tightening Torques for special use bolts and nuts


Head Bolts	M11 x 1.25	9.5~10.0	68.7~72.3	93.1~98.0
Bolts, Connecting Bolts	M8 x 1.0	4.5~5.0	32.5~36.2	44.1~49.0
Bolts, Flywheel	M12 x 1.25	10.0~11.0	72.3~79.5	98.0~107.8
Bolts 1, Bearing Case	M9 x 1.25	4.7~5.2	34.0~37.6	46.1~50.9
Bolts 2, Bearing Case	M10 x 1.25	7.0~7.5	50.6~54.2	68.6~73.5
Nozzle Holder Assembly	M20 x 1.5	5.0~7.0	36.2~50.6	49.0~68.6
Caps Nuts, Head Cover	M8 x 1.25	0.7~0.9	5.1~6.5	6.9~8.8
Glow Plugs	M10~1.25	2.0~2.5	14.5~18.1	19.6~24.5
Oil Switch	PT 1/8	1.5~2.0	10.8~14.5	14.7~19.6
Nuts, Rocker Arm Bracket	M8 x 1.25	2.4~2.8	17.4~20.3	23.5~27.5
Bolts, Idle Gear Shaft	M8 x 1.25	2.4~2.8	17.4~20.3	23.5~27.5
Nut, Crank Shaft	M30 x 1.5	14.0~16.0	101.2~115.7	137.3~156.9
Nut, Injection Pipe	M12 x 1.5	2.5~3.5	18.1~25.3	24.5~34.3

Index - Wiring Diagrams and General Arrangements

1. Typical starter motor ratings		Page 10
2. Suggested engine starter battery size		Page 10
3. Keyswitch terminations		Page 10
4. Standard engine harness (65 Amp)	200-05451/05	Page 39
5. Standard engine harness (100 Amp)	200-06015	Page 40
6. Diagram of extension harness	200-04588	Page 41
7. Starter relay wiring - over 4 metres	300-58520/01	Page 42
8. Electric fuel lift pump	202-06421	Page 43
9. Diagram of A panel & cut-out	200-06516 & 200-06305	Page 44 & 45
10. Diagram of AB panel & cut-out	200-06517 & 200-06304	Page 46 & 47
11. Diagram of ABV panel & cut-out	200-06519 & 200-06320/01	Page 48 & 49
12. Diagram of ABWW panel & cut-out	200-06333 & 200-06331	Page 50 & 51
13. Diagram of B panel & cut-out	200-06520 & 200-06303	Page 52 & 53
14. Diagram of C 'Deluxe' panel & cut-out	200-06518 & 200-06306	Page 54 & 55
15. GA of Beta 43/50 H/E PRM150	100-05199	Page 56
16. GA of Beta 43/50/60 H/E PRM260	100-07187	Page 57
17. GA of Beta 43 H/E TMC60	100-08616	Page 58
18. GA of Beta 43 H/E TMC60A	100-09087	Page 59
19. GA of Beta 43/50 H/E TMC260	100-05274	Page 60
20. GA OF Beta 60 H/E TM345	100-08707	Page 61
21. GA OF Beta 43/50/60 H/E ZF25A	100-07402	Page 62
22. GA of Beta 43/50/60 H/E 'V' Drive ZF15 MIV	100-06122	Page 63
23. GA of Beta 43/50/60 H/E Saildrive	100-06614	Page 64
24. Declaration of Conformity for Recreational Craft		Page 65
25. Emission durability		Page 66
26. Quick reference parts list		Page 68 & 67
27. Maintenance record and service items		Inside back cover

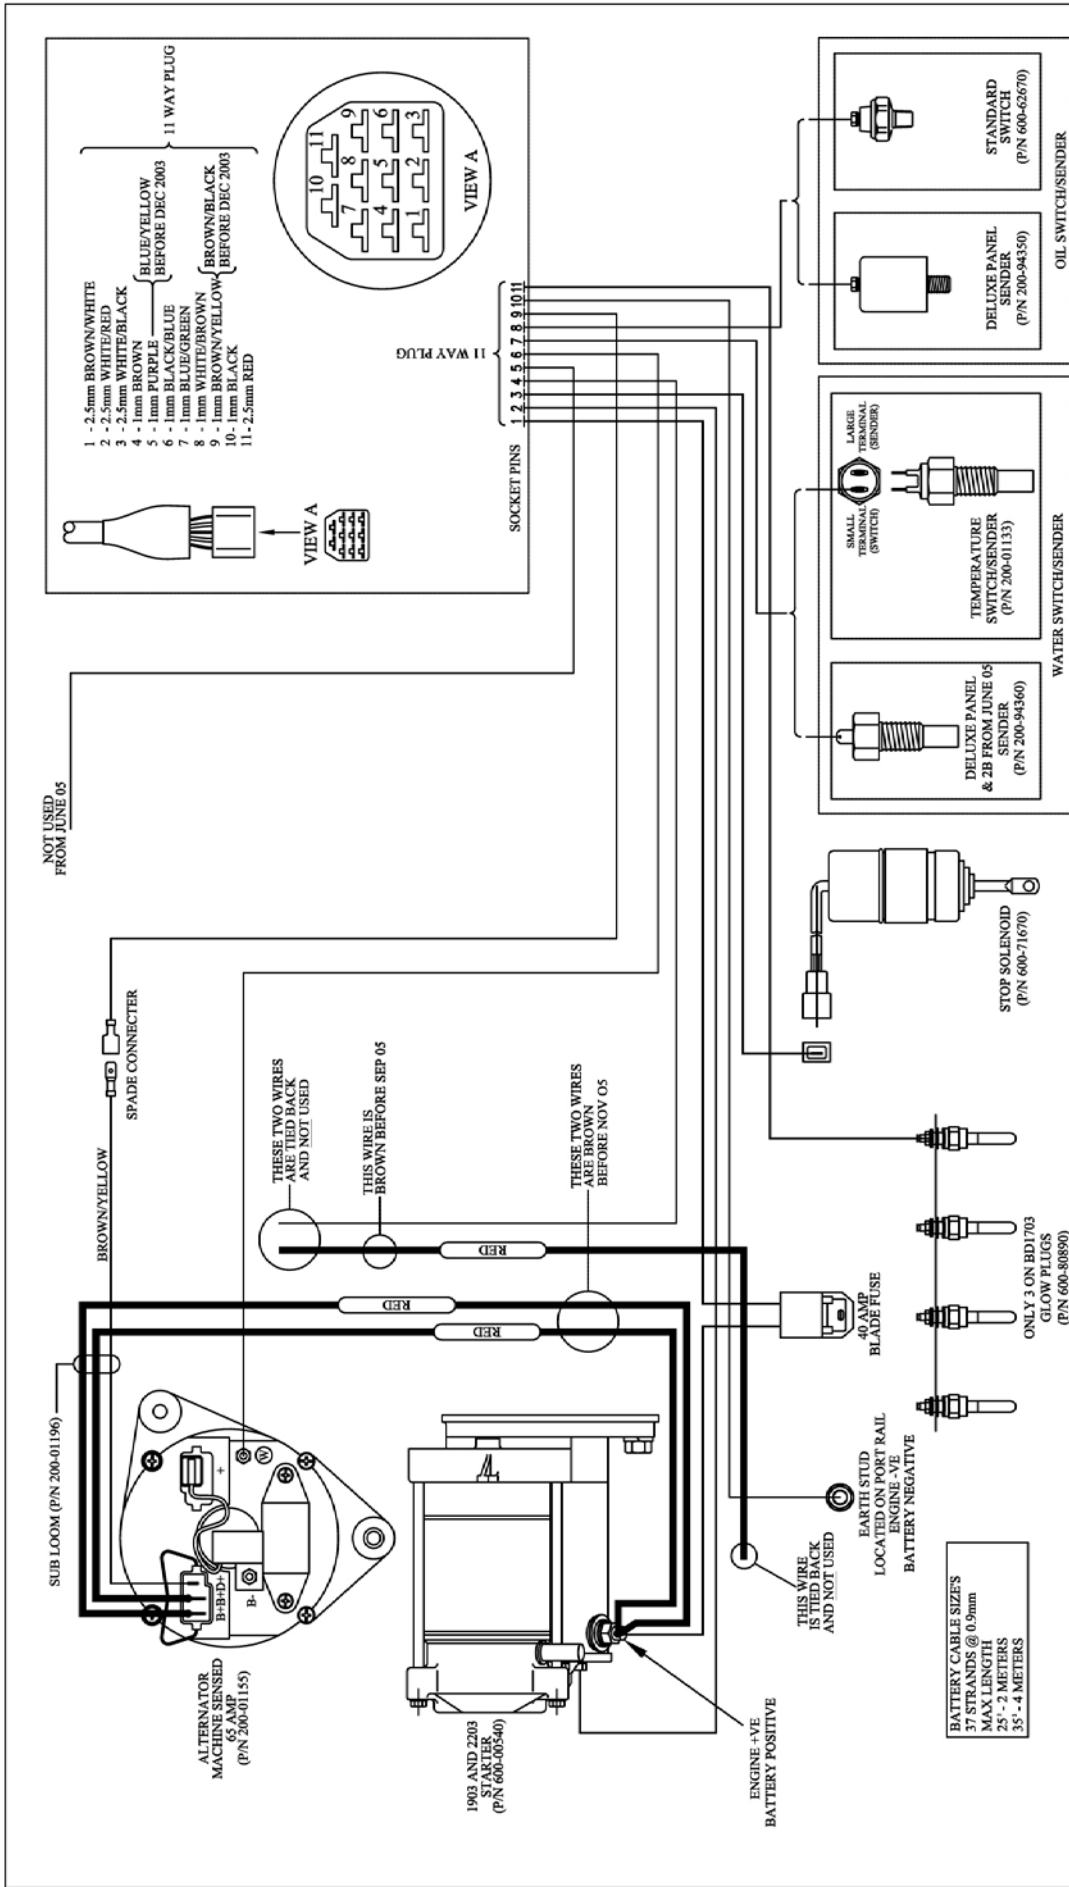

TITLE		BY1903 AND BV2203 HEAT EXCHANGE ENGINE WIRING SCHEMATIC	
SCALE	N/A	PAGE	1 of 1
DATE	11/09/02		REV 05
DRAWN BY:	TW	SIZE	A4
CHECKED BY:		DWG NO.	200-05451
DIMENSIONS IN MM (INCH) DO NOT SCALE BETA MARINE LTD. WATERMILLS, OMFEDGELEY, GLOUCESTER, GL2 2AD, UK TEL: (01452) 723492 FAX: (01452) 729916			

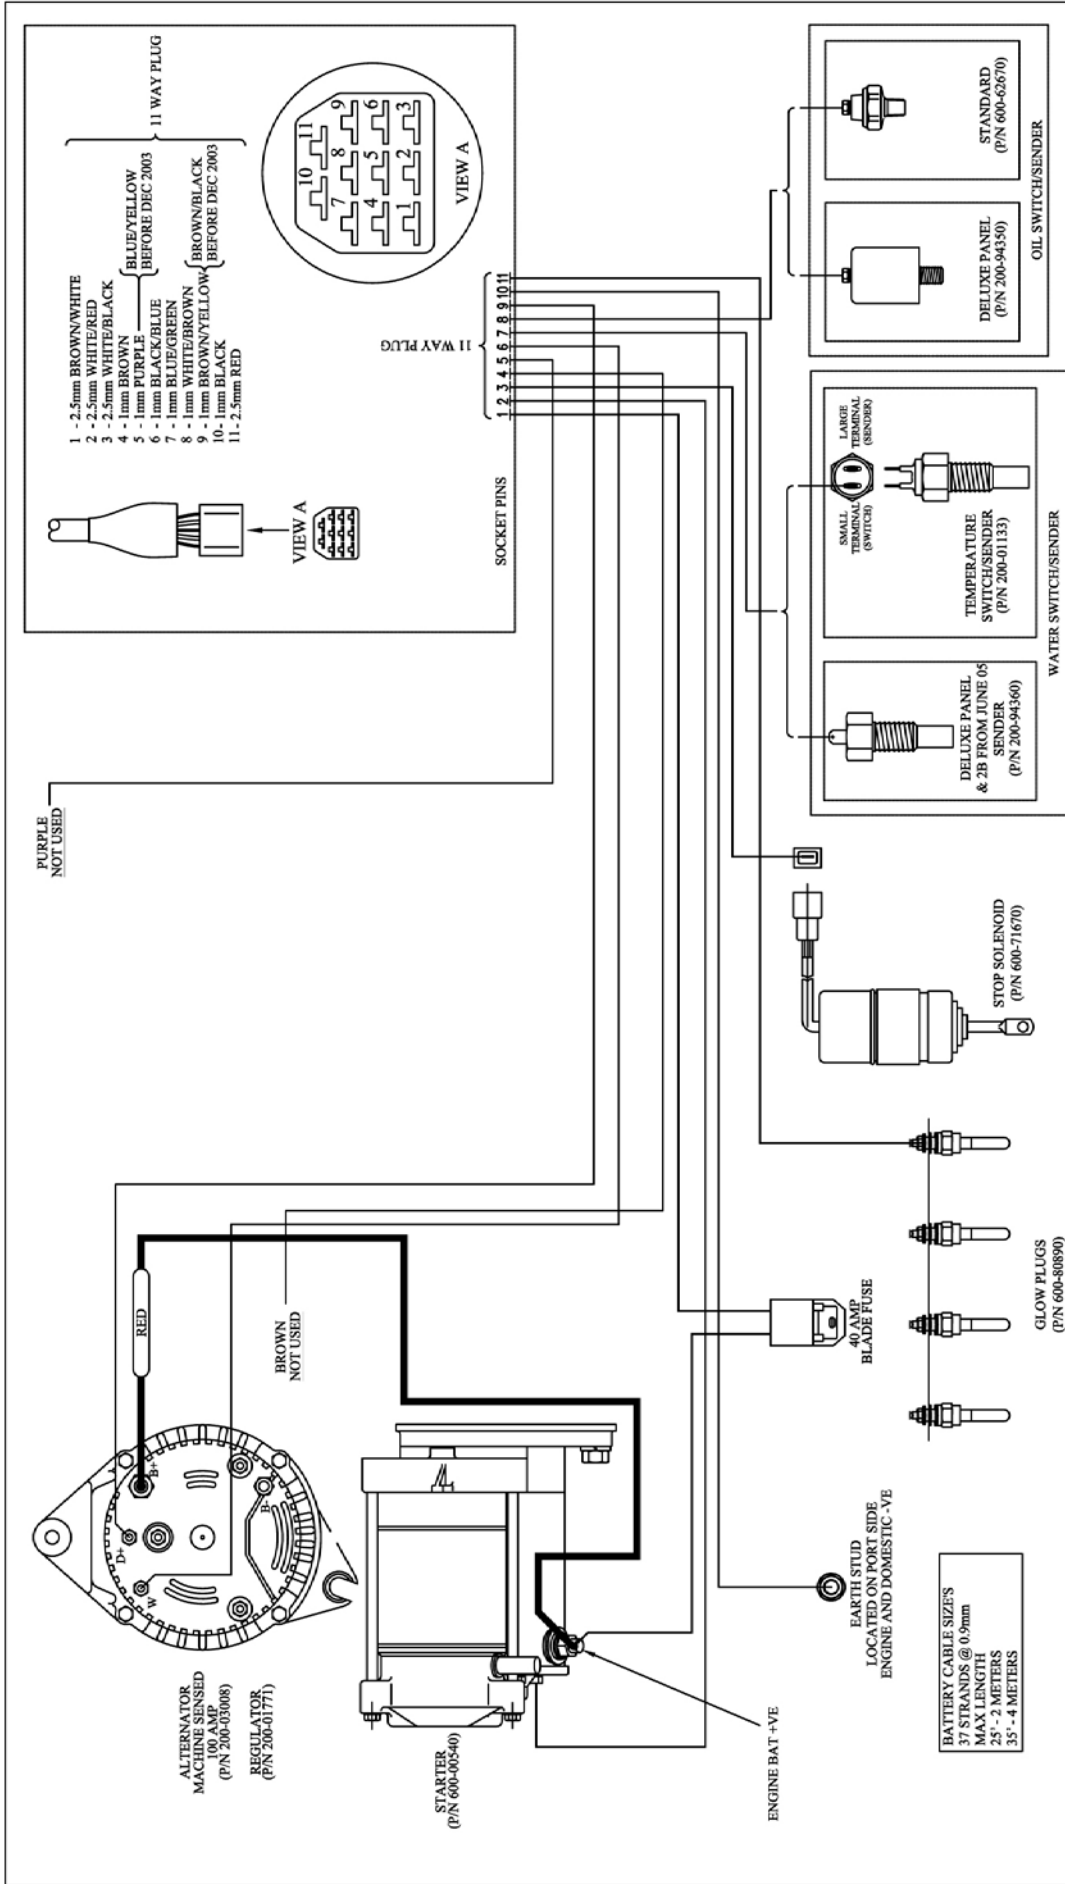

REV	DESCRIPTION	DATE	APP'D	DRAWN	NOTES
01	NOTES REMOVED ISOLATION BLOCK	23/01/06	DM	TW	
02		22/02/06	DM	TW	


TITLE		B43 & B50 HEAT EXCHANGE WITH 100 AMP ALTERNATOR AND WIRING SCHEMATIC	
DRAWN BY: TW	SIZE A4	DWG NO. 100-06015	REV 02
CHECKED BY: PG	SCALE N/A	PAGE 1 of 1	DATE 12/01/04

BETA MARINE
 BETA MARINE LTD.
 DAVY WAY
 WATERWELLS,
 QUEDSELEY,
 GLOUCESTER GL2 2AD UK
 TEL: (01452) 723492 FAX: (01452) 739916

**DIMENSIONS IN MM (INCH)
DO NOT SCALE**


VIEW LOOKING ON CONNECTOR FACE
FITTED WITH FEMALE SPADE/BULLET

- 1 - 2.5mm BROWN/WHITE TRACER
- 2 - 2.5mm WHITE/RED TRACER
- 3 - 2.5mm WHITE/BLACK TRACER
- 4 - 1mm BROWN
- 5 - 1mm PURPLE
- 6 - 1mm BLACK/BLUE TRACER
- 7 - 1mm BLUE/GREEN TRACER
- 8 - 1mm WHITE/BROWN TRACER
- 9 - 1mm BROWN/YELLOW TRACER
- 10 - 1mm BLACK
- 11 - 2.5mm RED
- 12 - 1mm GREEN/YELLOW TRACER
- 13 - 1mm BLUE/YELLOW TRACER
- 14 - 1mm YELLOW

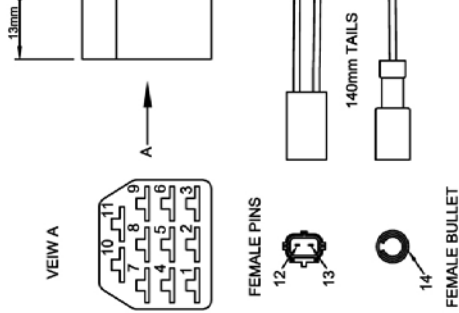

VIEW LOOKING ON CONNECTOR FACE
FITTED WITH MALE SPADE/BULLET

- 1 - 2.5mm BROWN/WHITE TRACER
- 2 - 2.5mm WHITE/RED TRACER
- 3 - 2.5mm WHITE/BLACK TRACER
- 4 - 1mm BROWN
- 5 - 1mm PURPLE
- 6 - 1mm BLACK/BLUE TRACER
- 7 - 1mm BLUE/GREEN TRACER
- 8 - 1mm WHITE/BROWN TRACER
- 9 - 1mm BROWN/YELLOW TRACER
- 10 - 1mm BLACK
- 11 - 2.5mm RED
- 12 - 1mm GREEN/YELLOW TRACER
- 13 - 1mm BLUE/YELLOW TRACER
- 14 - 1mm YELLOW

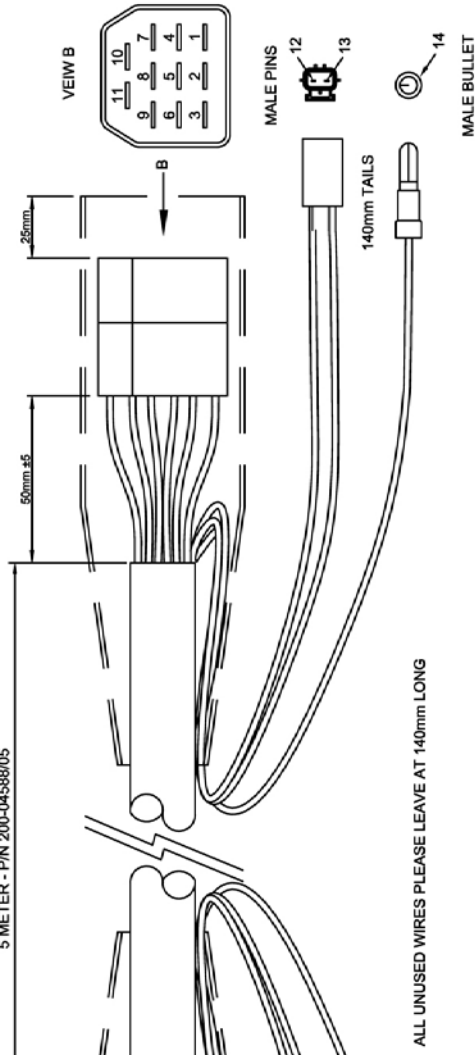


- 1 METER - P/N 200-04588/01
- 2 METER - P/N 200-04588/02
- 3 METER - P/N 200-04588/03
- 4 METER - P/N 200-04588/04
- 5 METER - P/N 200-04588/05

ALL UNUSED WIRES PLEASE LEAVE AT 140mm LONG


REV	DESCRIPTION	DATE	APP'D	DRAWN	NOTES
01					

TITLE EXTENSION HARNESS		SIZE A4	DWG NO. 200-04588	REV 00
SCALE 1 of 1	PAGE 1 of 1	DATE 15/10/04	DRAWN BY: TW	
CHECKED BY: LT		BETA MARINE LTD, DAVY WAY, WATERWELLS, EDGEWATER, GLEZ, RAD, UK		
DIMENSIONS IN MM (INCH) DO NOT SCALE				
BETA MARINE				
TEL: (01452) 723492 FAX: (01452) 729916				

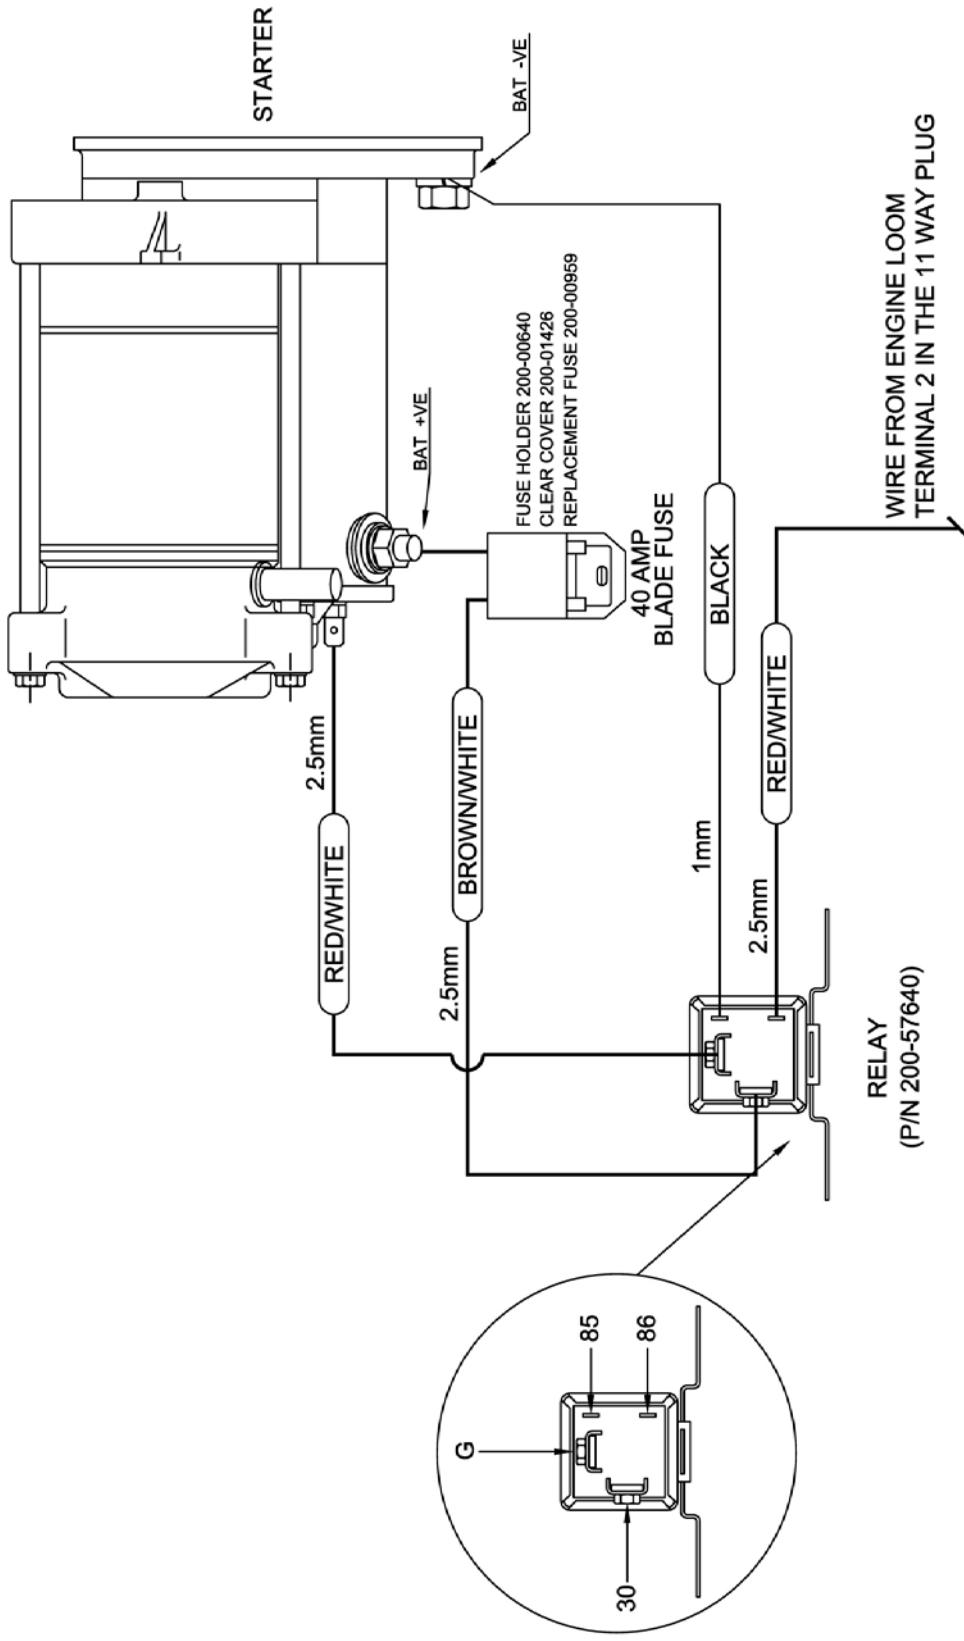


REV	DESCRIPTION	DATE	APP'D	DRAWN	NOTES
01	wiring change	18/01/09	DM	TW	

TITLE					STARTER RELAY FOR EXTENDED HARNESS OVER 4m TOTAL LENGTH	
DRAWN BY:- TW			SIZE A4	DWG NO. 300-58520	REV 01	
CHECKED BY:- DM			SCALE N/A	PAGE 1 of 1	DATE 16/10/02	
DIMENSIONS IN MM (INCH) DO NOT SCALE						
BETA MARINE BETA MARINE LTD. DAVY WAY, WATERWELLS, GLOUCESTER GL2 2AD, UK TEL: (01452) 723492 FAX: (01452) 729916						

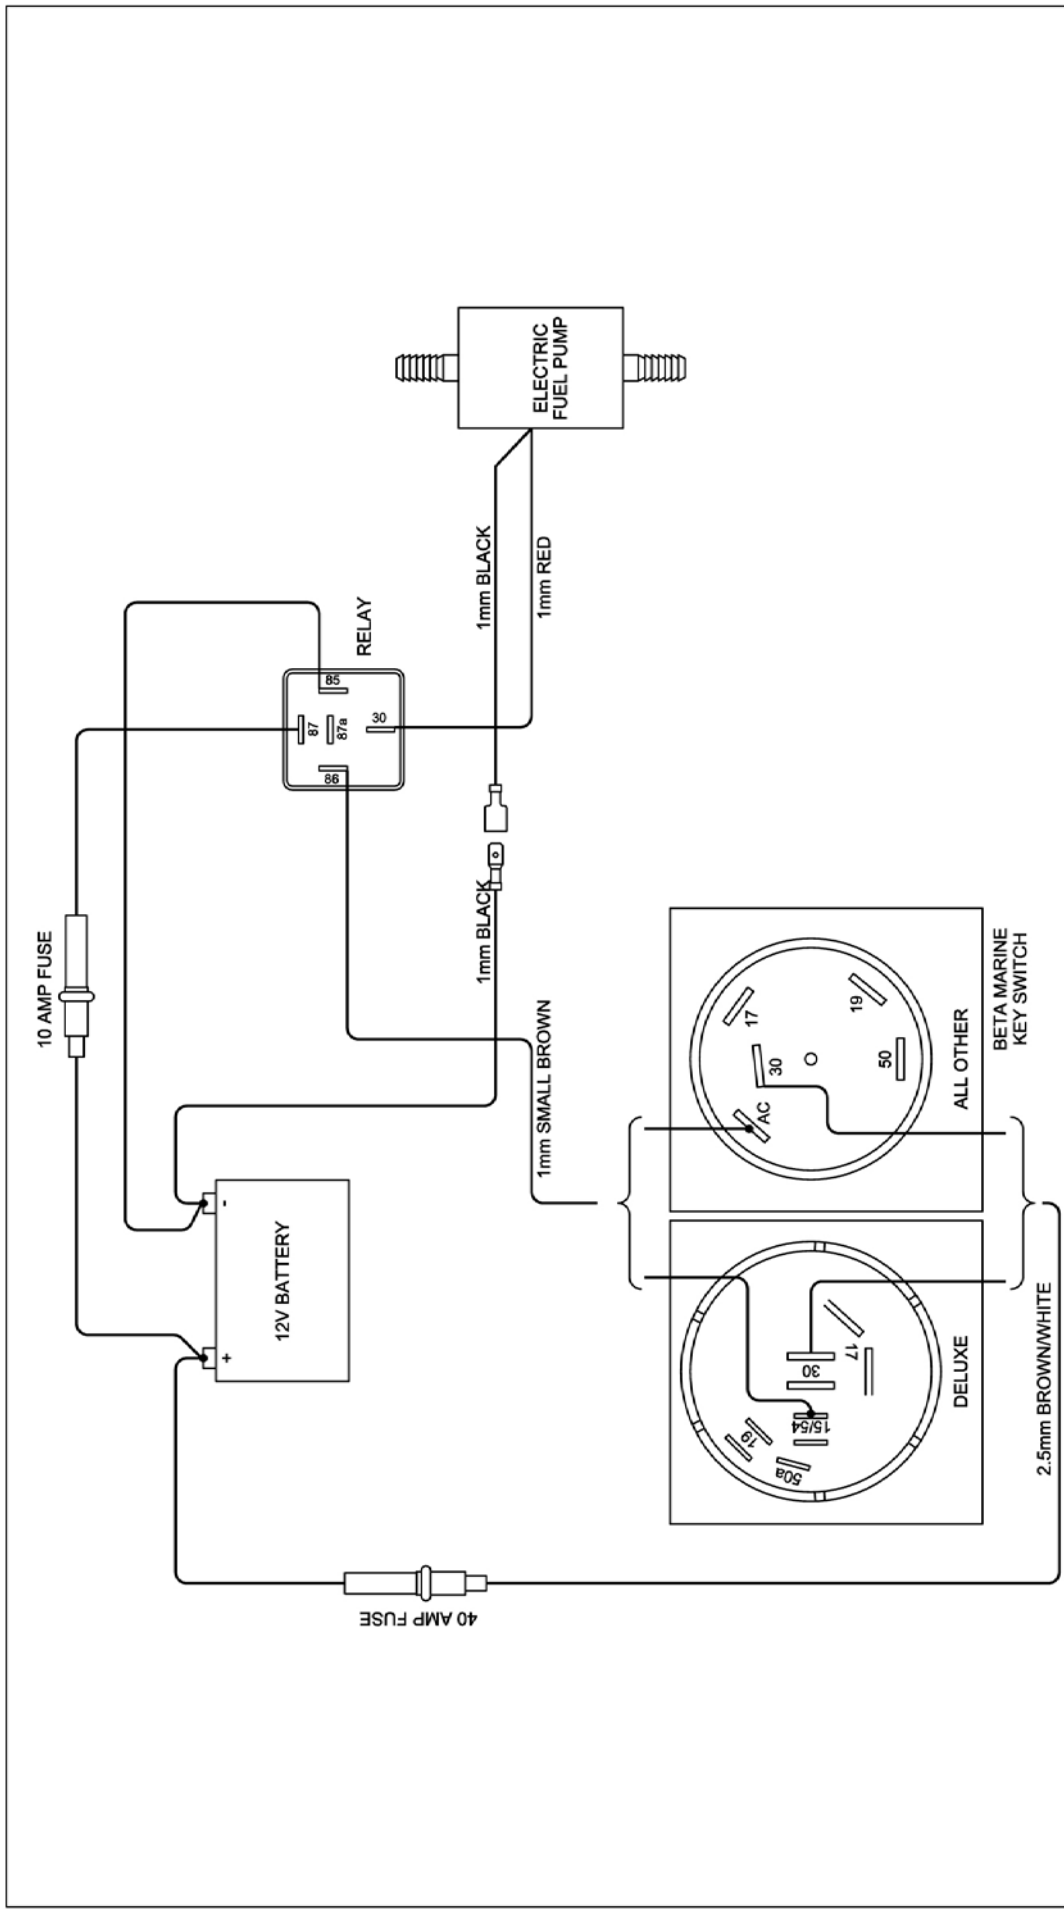


REV	DESCRIPTION	DATE	APP'D	DRAWN	NOTES	TITLE	SCALE	NTS	PAGE	DATE	REV	
01						ELECTRIC FUEL LIFT PUMP WIRING SCHEMATIC	1 of 1	1	11/02/05		00	
							DRAWN BY:- TW	SIZE A4	DWG NO. 200-06421			
							CHECKED BY:- LT	SCALE	NTS	PAGE 1 of 1	DATE 11/02/05	REV 00
							DIMENSIONS IN MM (INCH) DO NOT SCALE BETA MARINE LTD. DAWY WAY, MIMMSHURST, QUEDDELEY, GLOUCESTER, GL2 2AD, UK TEL: (01452) 723492 FAX: (01452) 729916					
							BETA MARINE					

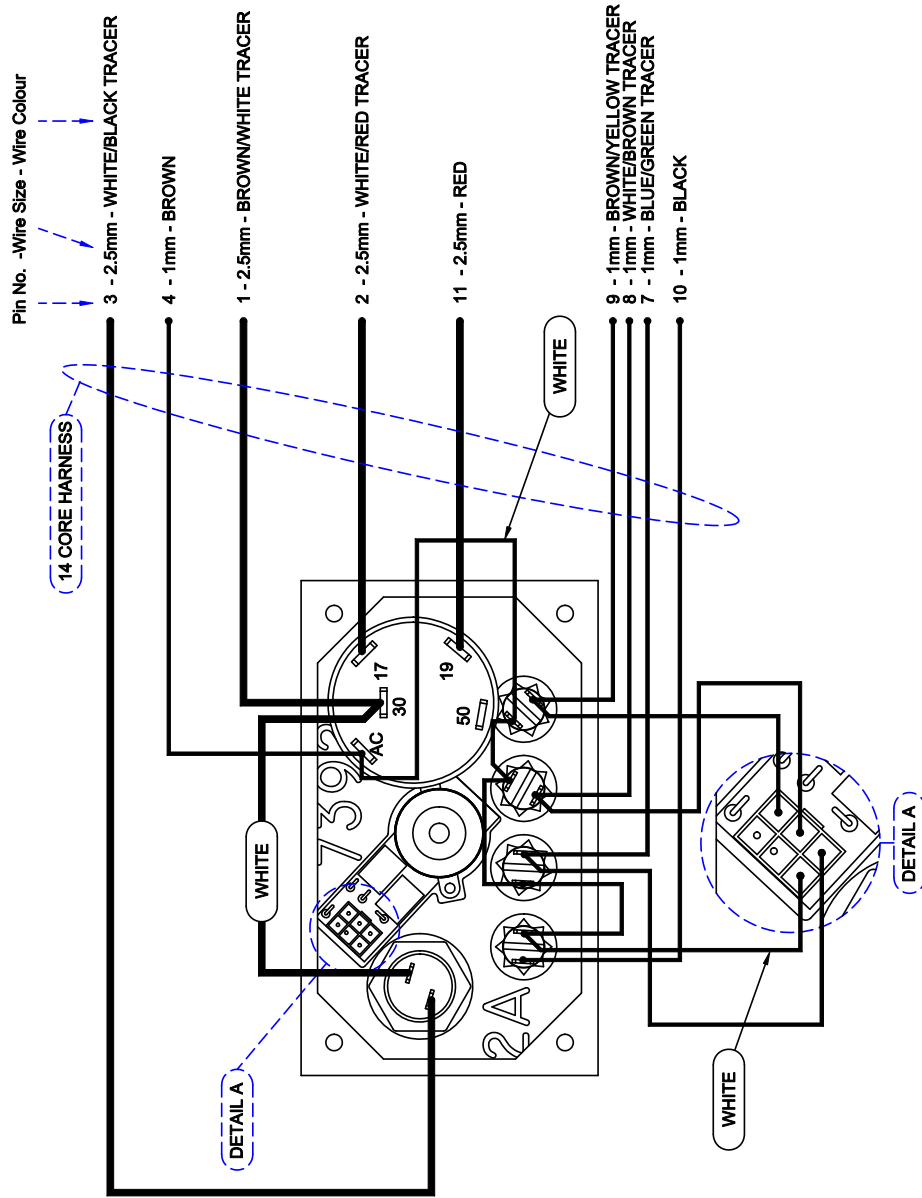


PINS 5 AND 6 ARE NOT USED IN THIS ARRANGEMENT. THERE ARE SOME SPARE CORES UNUSED IN THE HARNESS.

REV	DESCRIPTION	DATE	APP'D	DRAWN	NOTES	TITLE	SCALE	N/A	PAGE	DATE	REV
.						FOR PART LIST AND PANEL SIZE SEE DRAWING 200-06305 PANEL PART NUMBER 200-00852	A4	N/A	1 of 1	15/05/05	
						BETA MARINE LTD. DAVY WAY, WATERWELLS, QUEDGELEY, GLOUCESTER GL2 2AD UK	DM				
						DIMENSIONS IN MM (INCH) DO NOT SCALE					
						BETA MARINE					
						TEL +44 (0)1452 723492 FAX +44 (0)1452 883742					
						DRAWN BY:- TW					
						CHECKED BY:- DM					
						DWG NO. 200-06516					

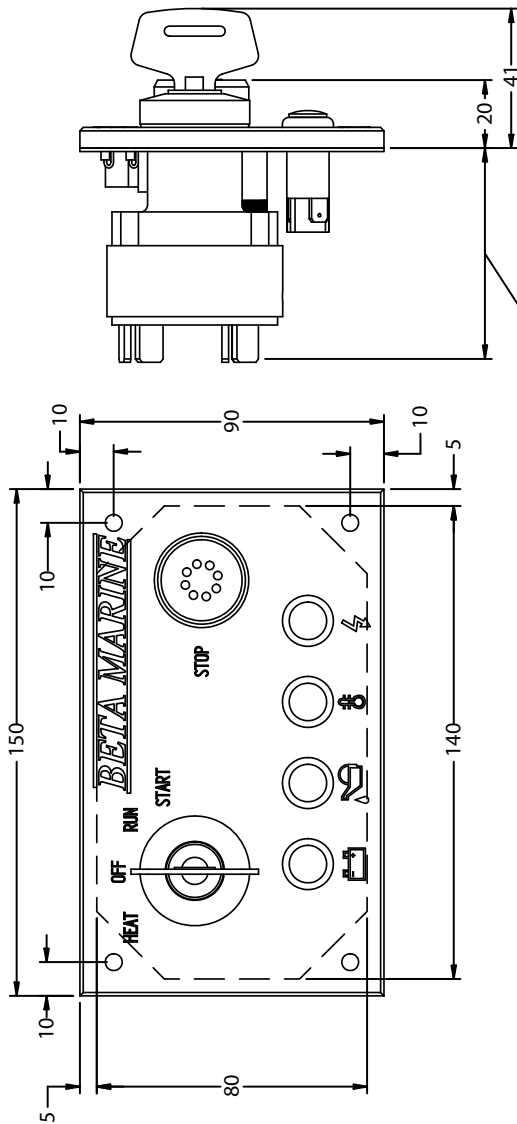



62 ADD 30mm FOR WIRES

REV	DESCRIPTION	DATE	APPD	DRAWN	NOTES	TITLE			
01	CHANGED KEY SWITCH	05/09/08	LT	TW		A PANEL			
						DRAWN BY:	SIZE	DWG NO.	REV
						TW	A4	200-06305	01
						CHECKED BY:	SCALE	NTS	DATE
						LT	LT	2 of 2	05/09/2008
						BETA MARINE LTD. DAVY WAY, WATERWELLS, QUEDGELEY, GLOUCESTER GL2 2AD UK			
						MATERIAL:			
						BETA MARINE TEL +44 (0)1452 723492 FAX +44 (0)1452 883742 <small>DIMENSIONS IN MM (INCH) DO NOT SCALE</small>			

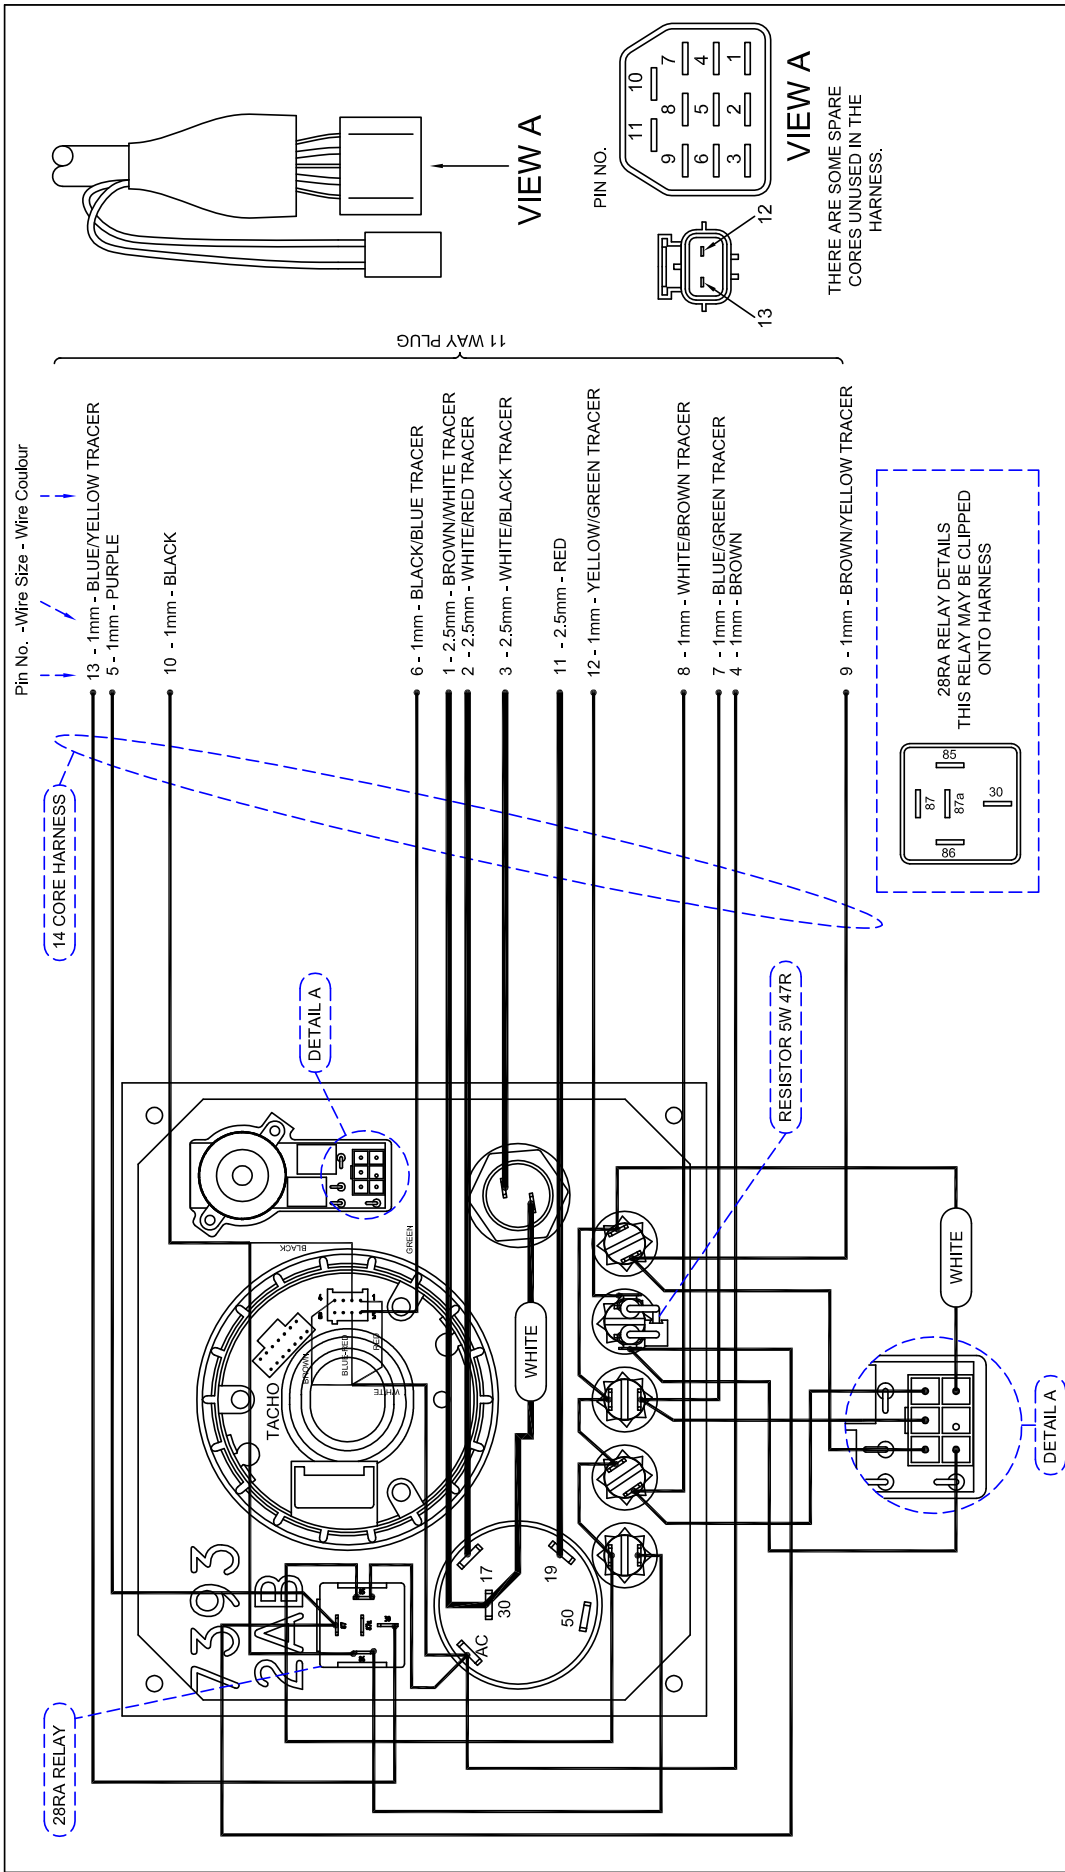


REV	DESCRIPTION	DATE	APP'D	DRAWN	NOTES
01	TACHO AND DOMESTIC WIRING	22/04/11	DM	TW	

TITLE		WIRING SCHEMATIC FOR AB PANEL AFTER MAY 2011	
FOR PART LIST AND PANEL SIZE SEE DRAWING 200-06304	DRAWN BY:-	SIZE	DWG NO.
PANEL PART NUMBER 200-00850 (THIS EXCLUDES TACHO)	TW	A4	200-06517
	CHECKED BY:-	SCALE	PAGE
	DM	N/A	1 of 1
DIMENSIONS IN MM (INCH) DO NOT SCALE		DATE	
 BETA MARINE LTD. DAWAY WAY, WATERWELLS, QUEDGELEY, GLOUCESTER GL2 2AD UK TEL +44 (0)1452 723492 FAX +44 (0)1452 883742		22/04/11	
		REV	01

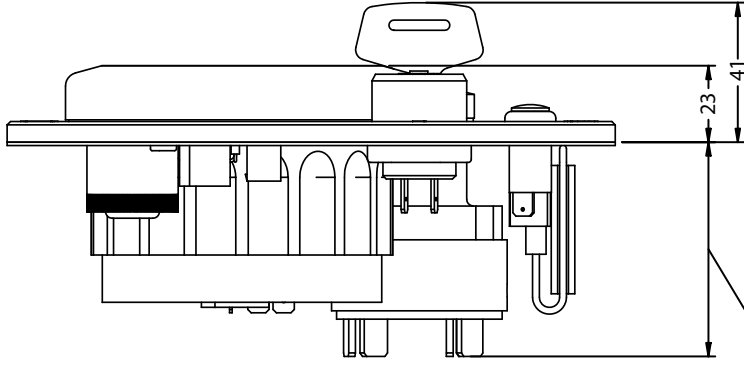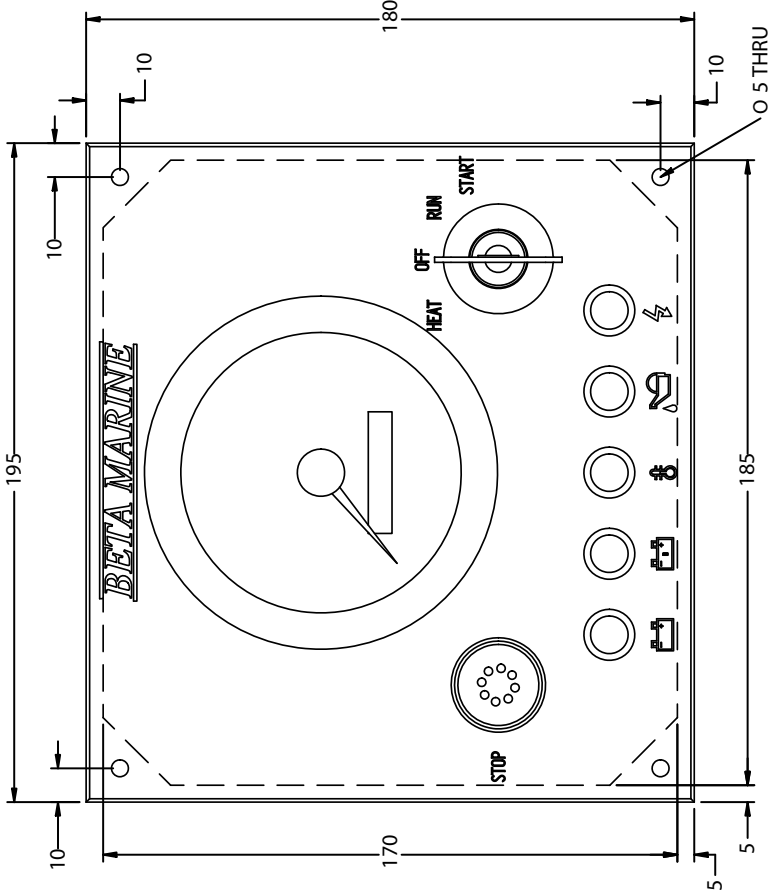


63 ADD 30mm FOR WIRES


REV	DESCRIPTION	DATE	APPD	DRAWN	NOTES	TITLE				
01	CHANGED KEY SWITCH	05/09/08	LT	TW		AB PANEL				
						DIMENSIONS IN MM (INCH) DO NOT SCALE				
						MATERIAL: BETA MARINE				
						BETA MARINE LTD. DAVY WAY, WATERWELLS, QUEDGELEY, GLOUCESTER GL2 2AD UK				
						DRAWN BY: TW	SIZE: A4	DWG NO: 200-06304	REV: 01	
						CHECKED BY: LT	SCALE: NTS	PAGE: 2 of 2	DATE: 05/10/2007	

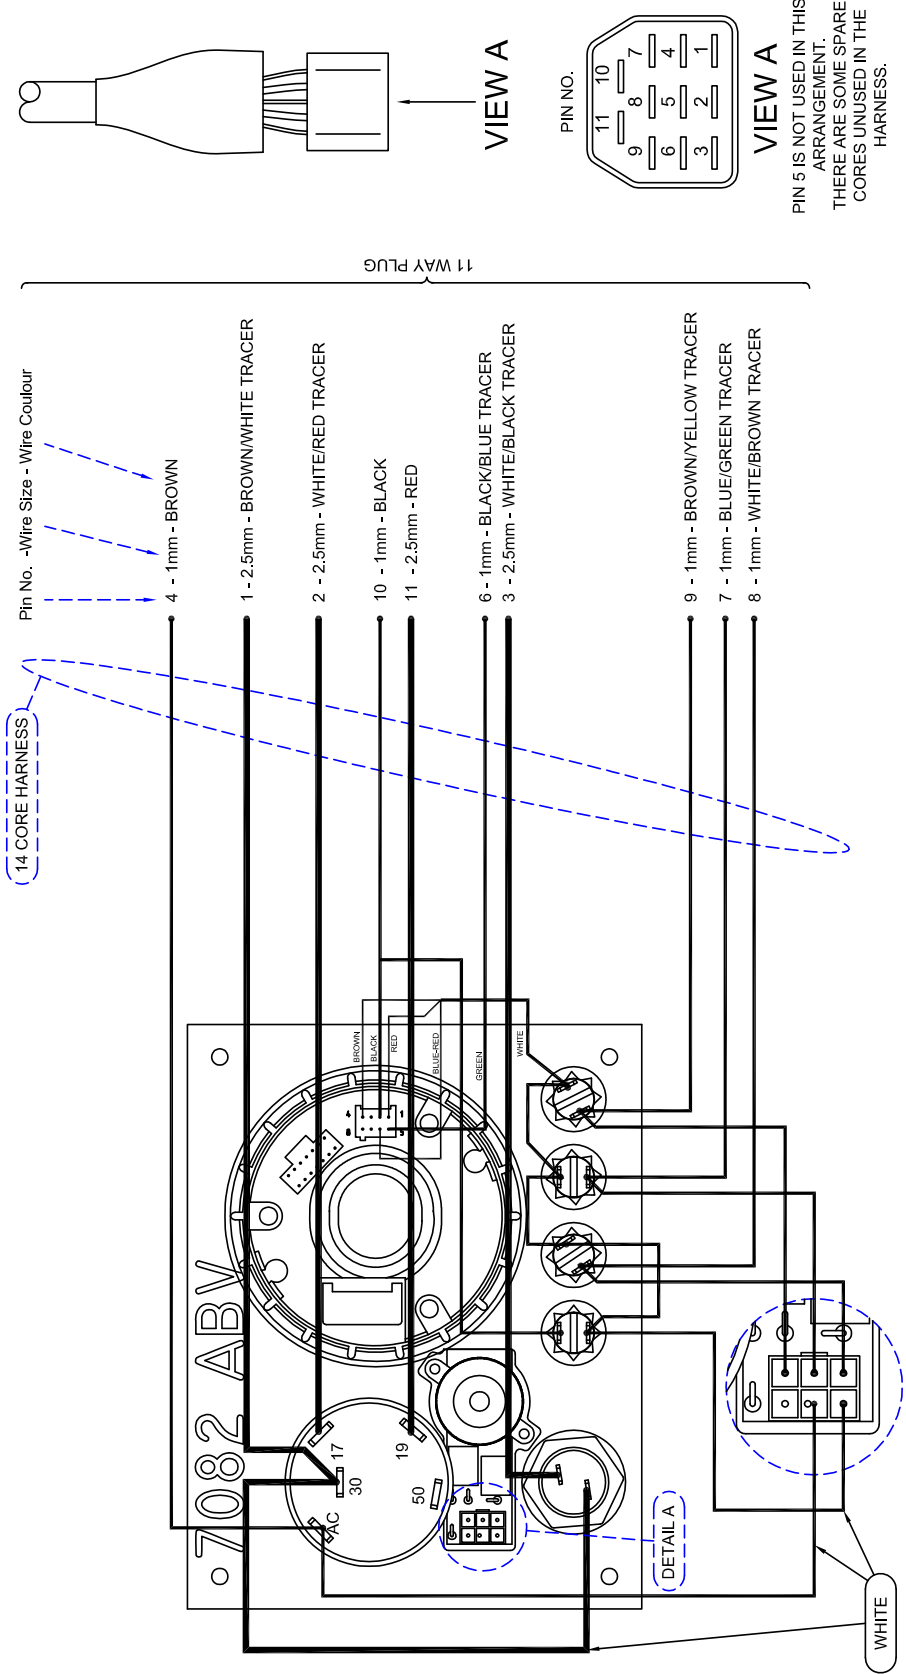

REV	DESCRIPTION	DATE	APP'D	DRAWN	NOTES	TITLE	DWG NO.	SCALE	PAGE	DATE	
01	TACHO	22/04/11	DM	LT#:	FOR PART LIST AND PANEL SIZE SEE DRAWING 200-06320 PANEL PART NUMBER 200-89421 THIS EXCLUDES TACHO	WIRING SCHEMATIC FOR ABV PANEL AFTER MAY 2011	DM	N/A	1 of 1	22/04/11	
							DRAWN BY:- TW	SIZE A4			REV 01
							CHECKED BY:- DM				200-06519
							DIMENSIONS IN MM (INCH) DO NOT SCALE BETA MARINE LTD. DAVY WAY WATERWELLS, QUEDGELEY GLOUCESTER GL2 2AD UK TEL +44 (0)1452 723492 FAX +44 (0)1452 883742				

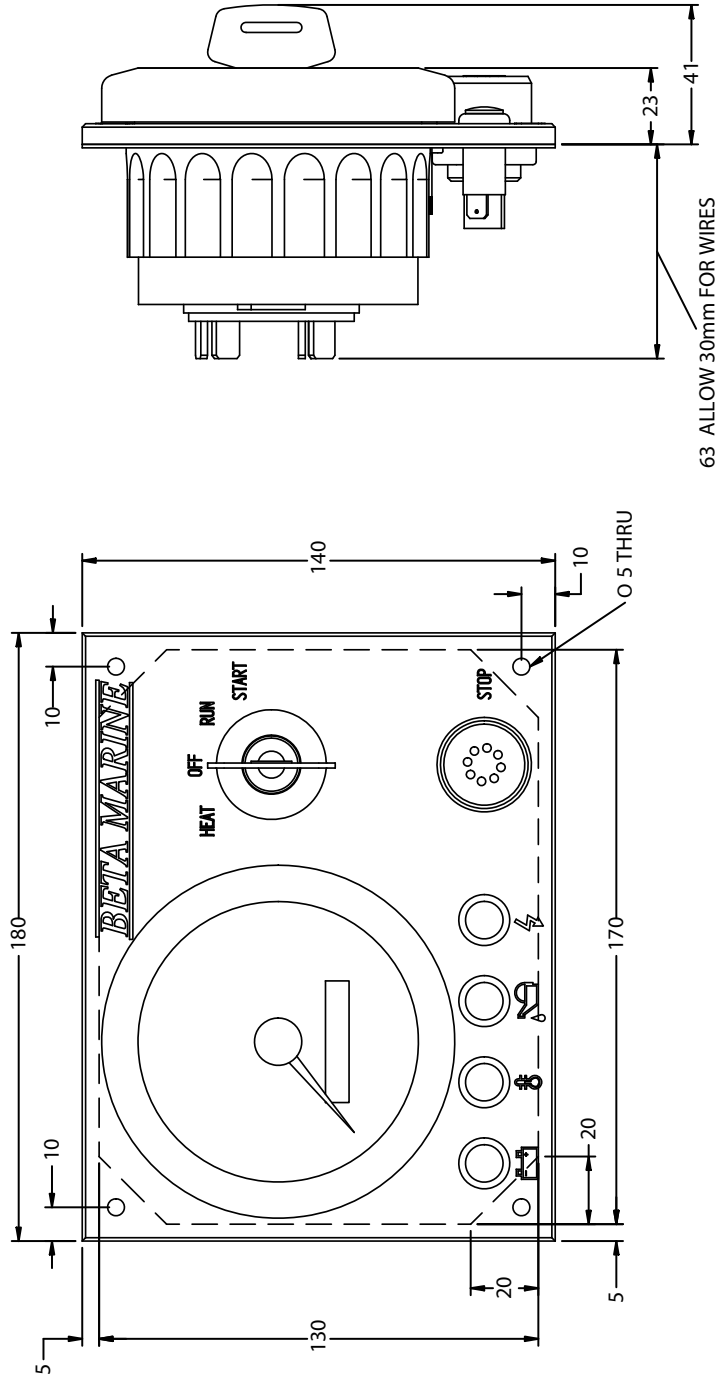


REV	DESCRIPTION	DATE	APPD	DRAWN	NOTES	TITLE
01	CHANGED KEY SWITCH	05/09/08	LT	TW		ABV PANEL
					DIMENSIONS IN MM (INCH) DO NOT SCALE	
					DRAWN BY: timw CHECKED BY: LT	
					BETA MARINE LTD. DAYWAY WATERWELLS, QUODESLEY, GLOUCESTER GL2 2ND UK	
					TEL +44 (0)1452 723492 FAX +44 (0)1452 883742	
					DWG NO. 200-06320/01 REV 00	
					SCALE N.T.S PAGE 2 of 2	
					DATE 05/10/2007	

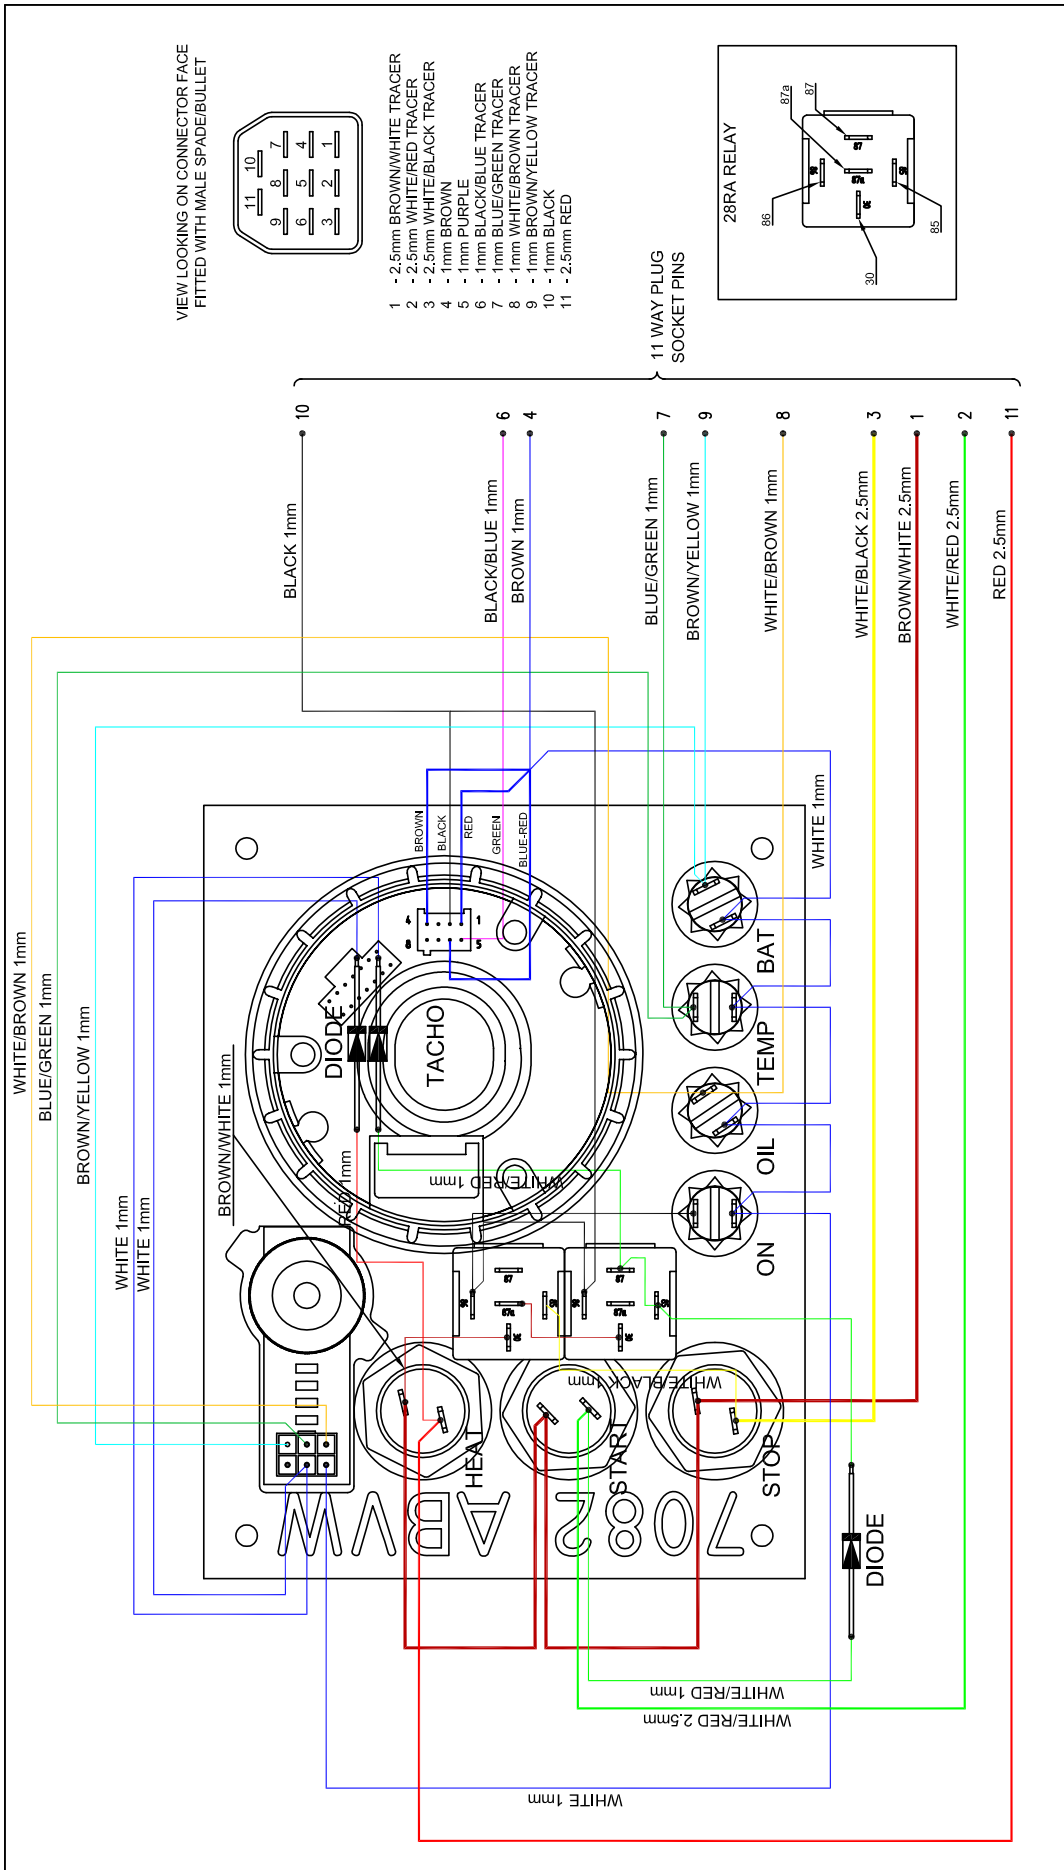

REV	DESCRIPTION	DATE	APP'D	DRAWN	NOTES	TITLE	SCALE	N/A	PAGE	1 of 1	DATE	03/12/04
01	MIRE COLOURS	15/10/04	DM	TW		WIRING SCHEMATIC FOR ABVV PANEL	A4	N/A	1	03/12/04	02	
02	MOVED BROWN/YELLOW WIRE	20/01/06	DM	TW								
03	TACHO	22/04/11	DM	TW								


DIMENSIONS IN MM (INCH)
DO NOT SCALE

BETA MARINE
BETA MARINE LTD.
DAVY WAY, WATERWELLS,
QUEDGELEY, GLOUCESTER
GL2 2AD UK
TEL +44 (0)1452 723492 FAX +44(0)1452 883742

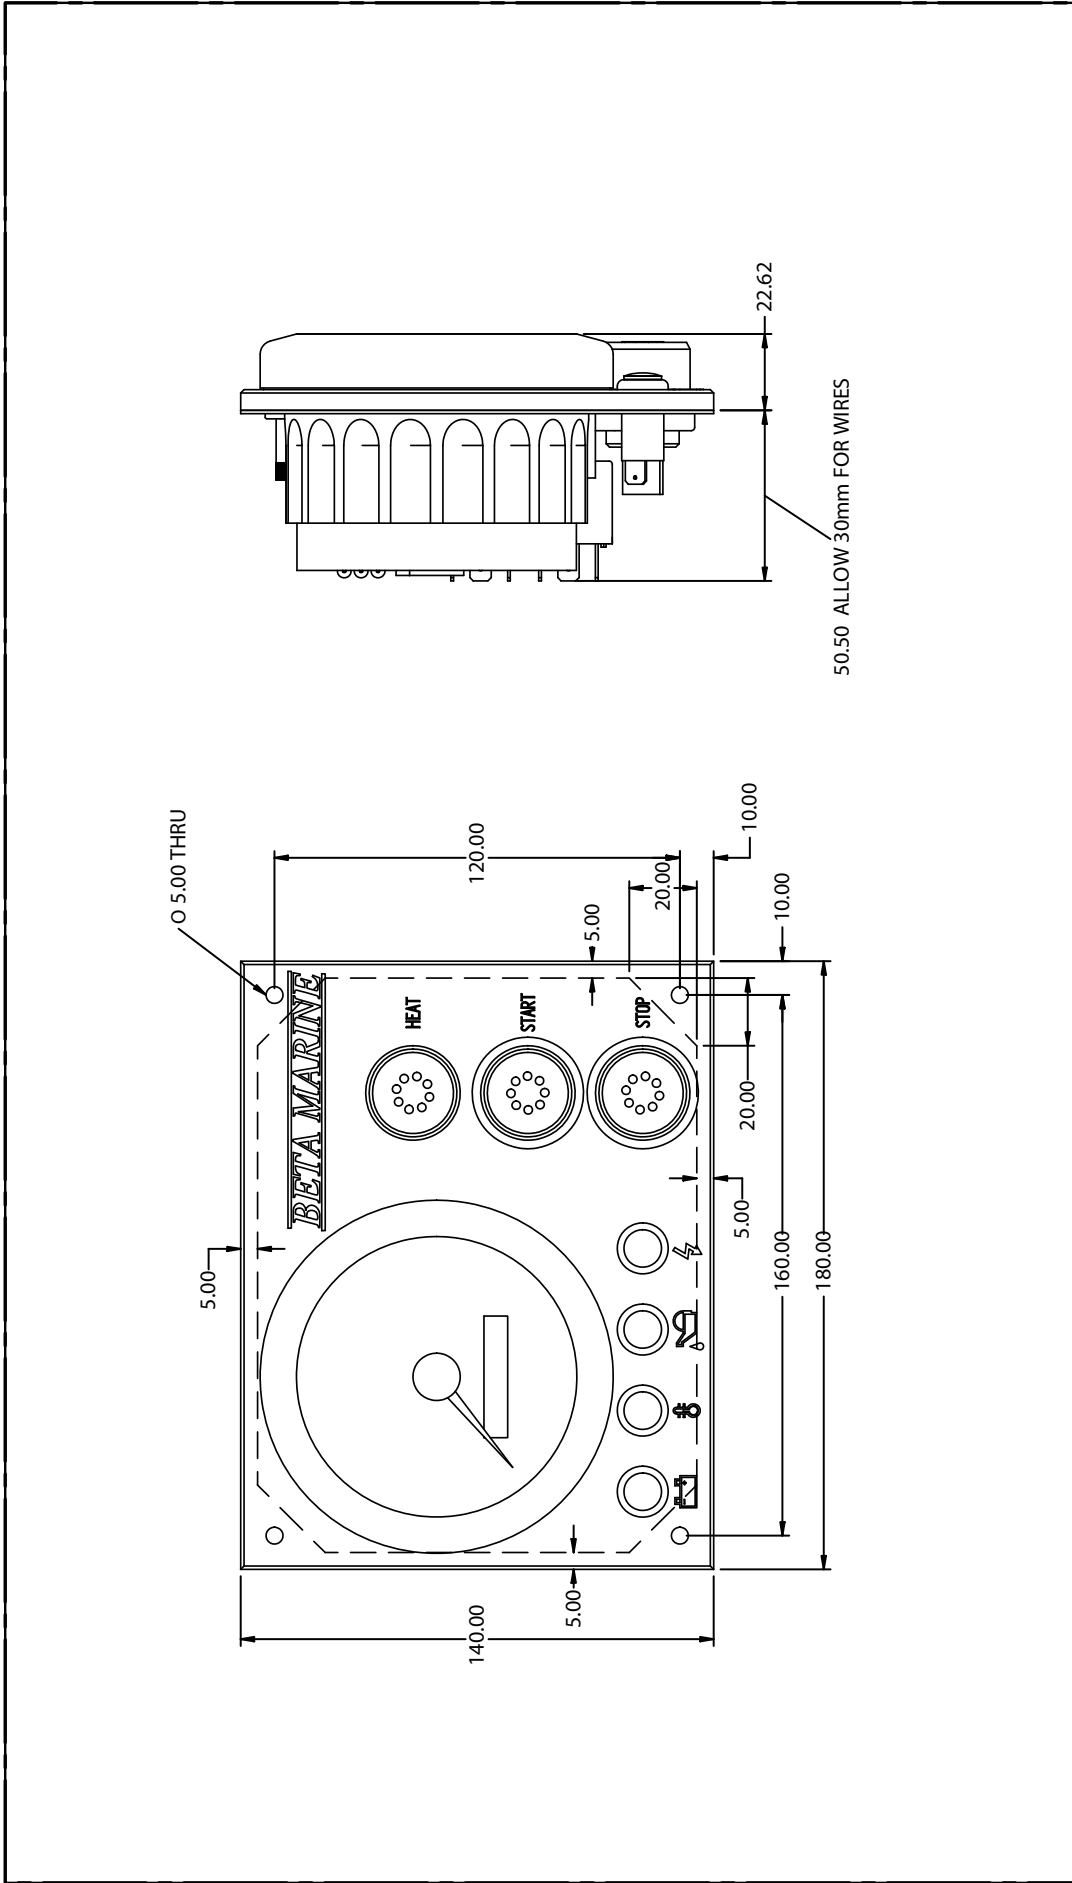

REV	DESCRIPTION	DATE	APPD	DRAWN	NOTES	TITLE
01						ABWW SPLASH PROOF PANEL

		DIMENSIONS IN MM (INCH) DO NOT SCALE		MATL:	
BETA MARINE TEL +44 (0)1452 73492 FAX +44 (0)1452 883742		BETA MARINE LTD. DAWY WAY, WATERWELLS, QUEDGELEY, GLOUCESTER GL2 2AD UK		DRAWN BY: TW	CHECKED BY: LT
SIZE A4	DWG NO. 200-06331	SCALE NTS	PAGE 2 of 2	REV 00	DATE 05/10/2007

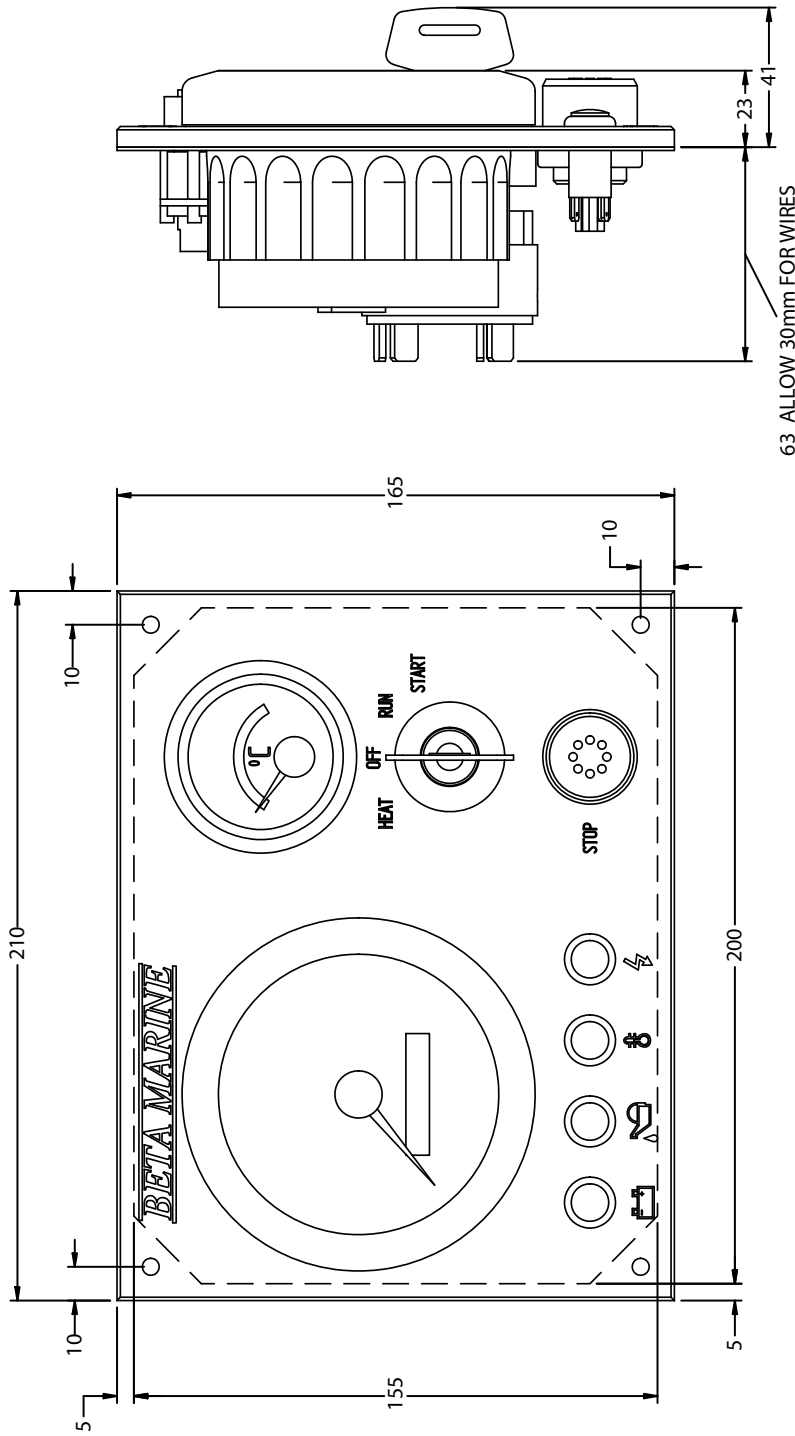


REV	DESCRIPTION	DATE	APPD	DRAWN	NOTES	TITLE
01	CHANGED KEY SWITCH	05/09/08	LT	TW		B PANEL

DRAWN BY: TW
 CHECKED BY: LT
 SIZE: A4
 SCALE: LT
 DWG NO: 200-06303
 NTS: 2 of 2
 REV: 01
 DATE: 05/10/2007


DIMENSIONS IN MM (INCH)
 DO NOT SCALE

BETA MARINE
 BETA MARINE LTD.
 DAVY WAY, WATERWELLS,
 QUEDGELEY, GLOUCESTER
 GL2 2AD UK
 TEL: +44 (0)1452 723492 FAX: +44 (0)1452 883742

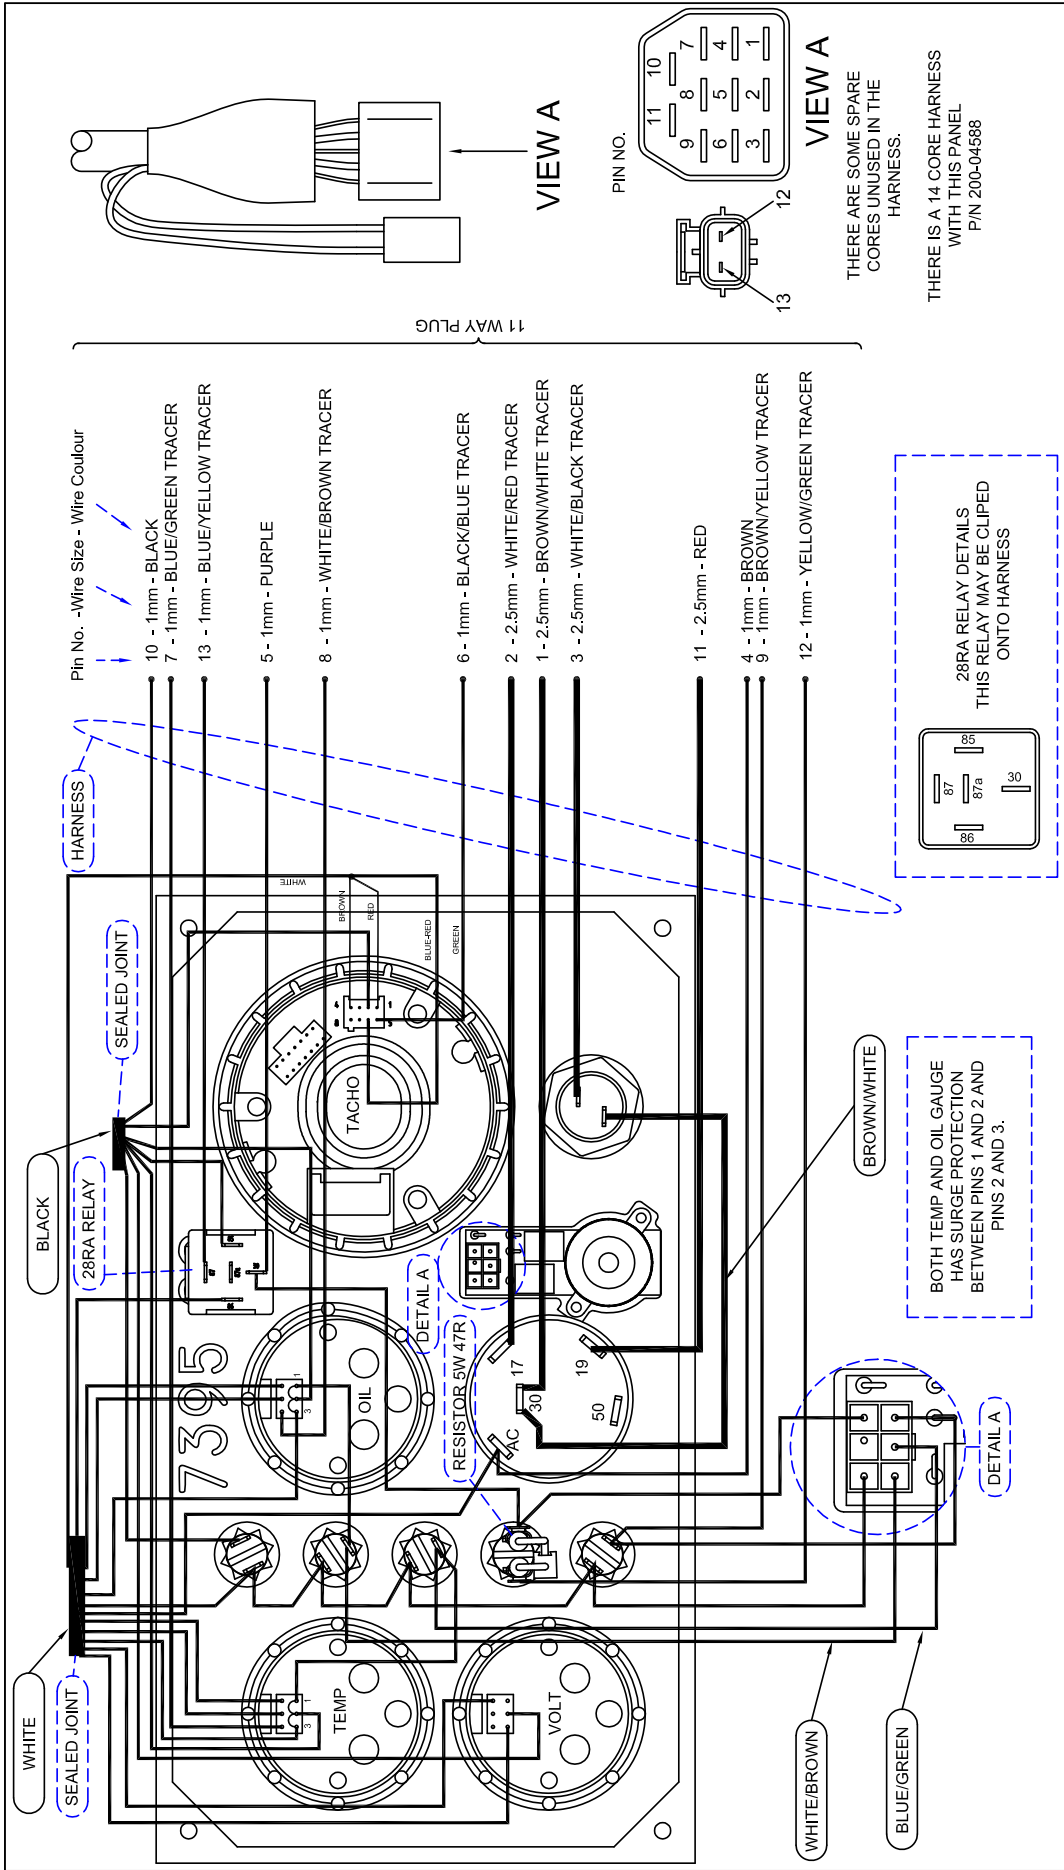


REV	DESCRIPTION	DATE	APP'D	DRAWN	NOTES
01	CHANGED WHITE & BLACK AROUND	19/09/05	DM	TW	
02	TACHO AND DOMESTIC WIRES	22/04/11	DM	TW	

TITLE WIRING SCHEMATIC FOR C PANEL (DELUXE) AFTER MAY 2011				DRAWN BY:- TW	SIZE A4	DWG NO. 200-06518	REV 02
FOR PART LIST AND PANEL SIZE SEE DRAWING 200-06306 PANEL PART NUMBER 200-05445 (THIS EXCLUDES GAUGES)				CHECKED BY:- DM	SCALE N/A	PAGE 1 of 1	DATE 15/05/05
DIMENSIONS IN MM (INCH) DO NOT SCALE							
BETA MARINE LTD. DAVY WAY, WATERWELLS, QUEDGELEY, GLOUCESTER GL2 2AD UK TEL: +44 (0)1452 723492 FAX: +44 (0)1452 883742							

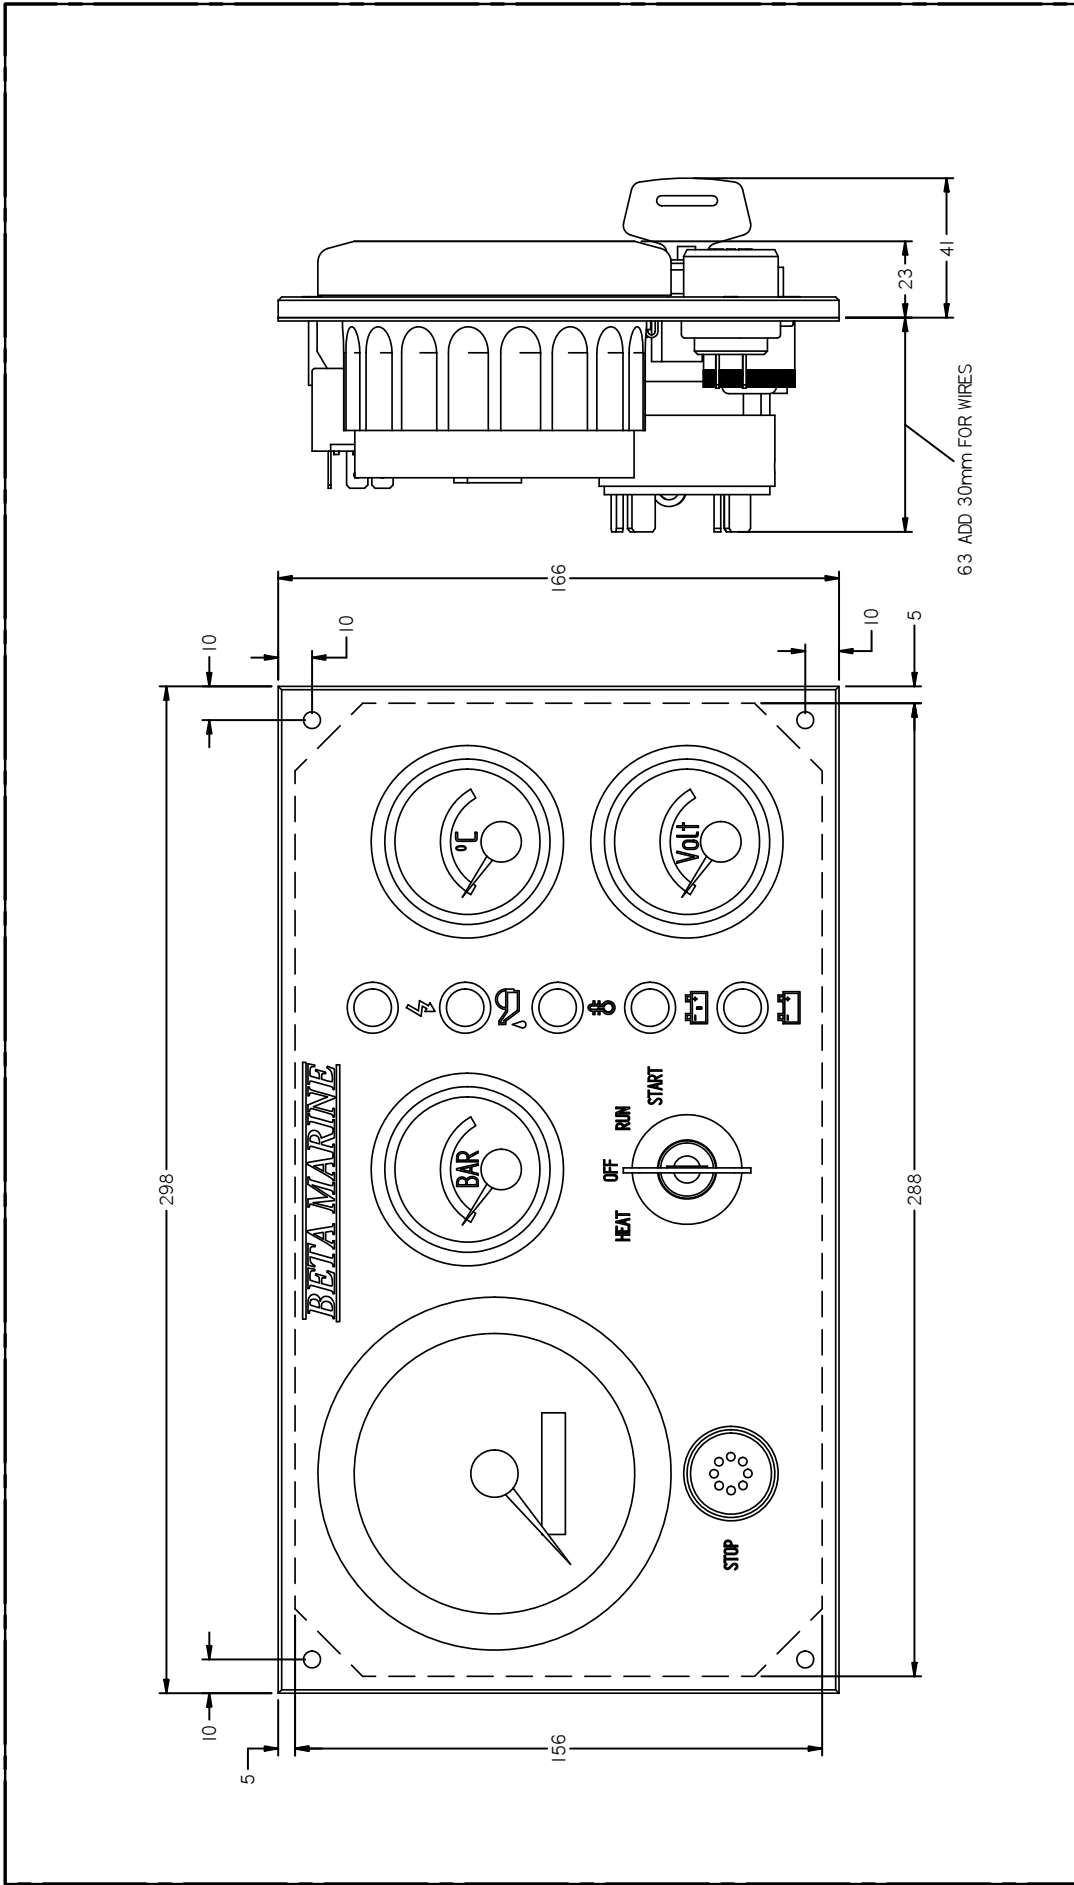


REV		DESCRIPTION	DATE	APP'D	DRAWN	NOTES	TITLE		
01		CHANGED KEY SWITCH	05/09/08	LT	TW		C PANEL		
							DRAWN BY:-	DWG NO.	REV
							TW	200-06306	01
							CHECKED BY:-	SCALE	DATE
							LT	NTS	06/10/2007
								PAGE	
								2 of 2	
							BETA MARINE LTD, DAVE WAY, WATERMILLS, OUEDGELEY, GLOUCESTER, GL2 2AD, U.K.		
							MATERIAL:		
							BETA MARINE		
							TEL: (01453) 835282 FAX: (01453) 835284		
							DIMENSIONS IN MM (INCH) DO NOT SCALE		

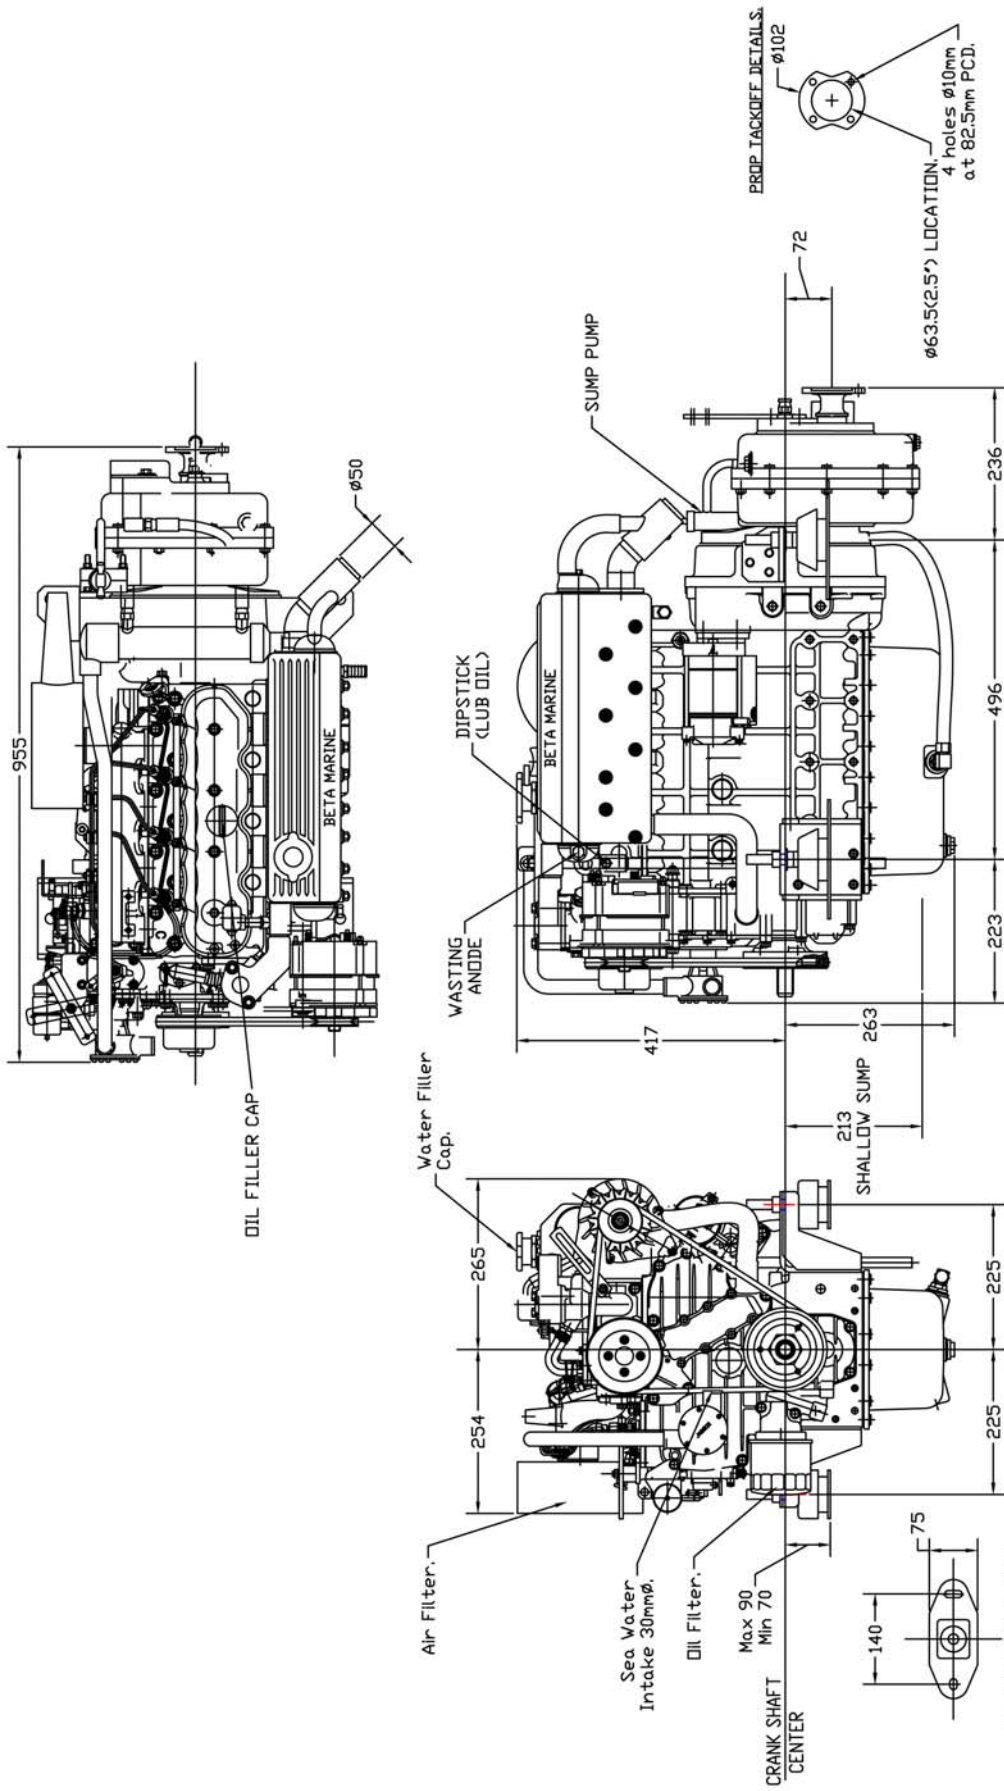


REV	DESCRIPTION	DATE	APP'D	NOTES	COMPLETE UNIT
					DRAWN BY: TW
					CHECKED BY: --
					TITLE: B43 AND B50 HEAT EXCHANGE WITH PRM150 GEARBOX
					SIZE: A4
					DWG NO.: 100-05199
					SCALE: NTS
					PAGE: 15/01/02
					DATE: 15/01/02
					REV: 00


BETA MARINE
 BETA MARINE LTD.
 DAVYWAY WATERWELLS,
 QUEDGELEY, GLOUCESTER,
 GL2 2AD UK
 TEL: +44 (0)1452 723492 FAX: +44 (0)1452 883742

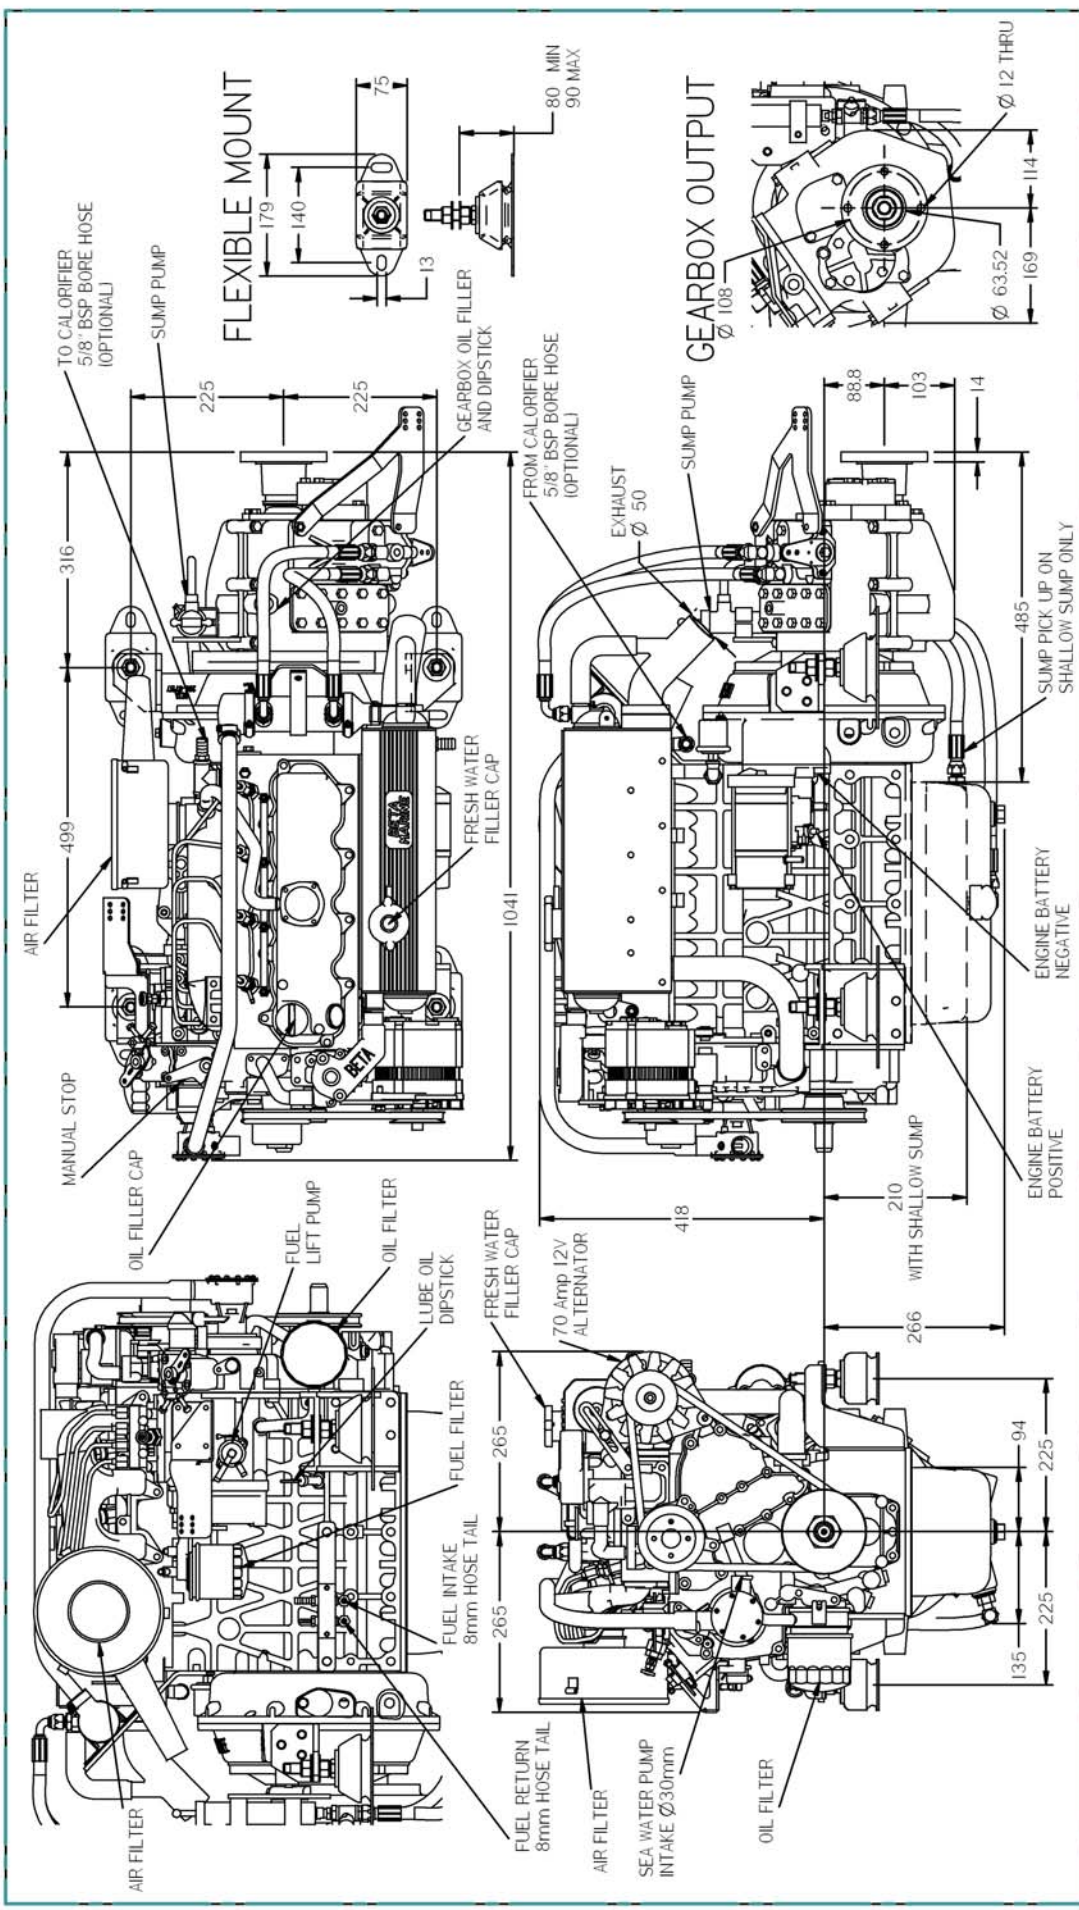

REV	DESCRIPTION	DATE	APPD	DRAWN	NOTES	TITLE	SCALE	NTS	PAGE	1 of 1	DATE	REV
01						BETA 43-60 HEAT EXCHANGE PRM260 GEARBOX	LT				12/08/2009	00
DIMENSIONS IN MM (INCH) DO NOT SCALE							DRAWN BY: timw CHECKED BY: LT					
BETA MARINE LTD. WATERMILLS, QUEDSELEY, GLOUCESTER, GL2 2AD, UK TEL: (01452) 723492 FAX: (01452) 729916							SIZE: A4 Dwg No: 100-07187 SCALE: 1 of 1 DATE: 12/08/2009					
BASE ENGINE BV2403							TITLE: BETA 43-60 HEAT EXCHANGE PRM260 GEARBOX					

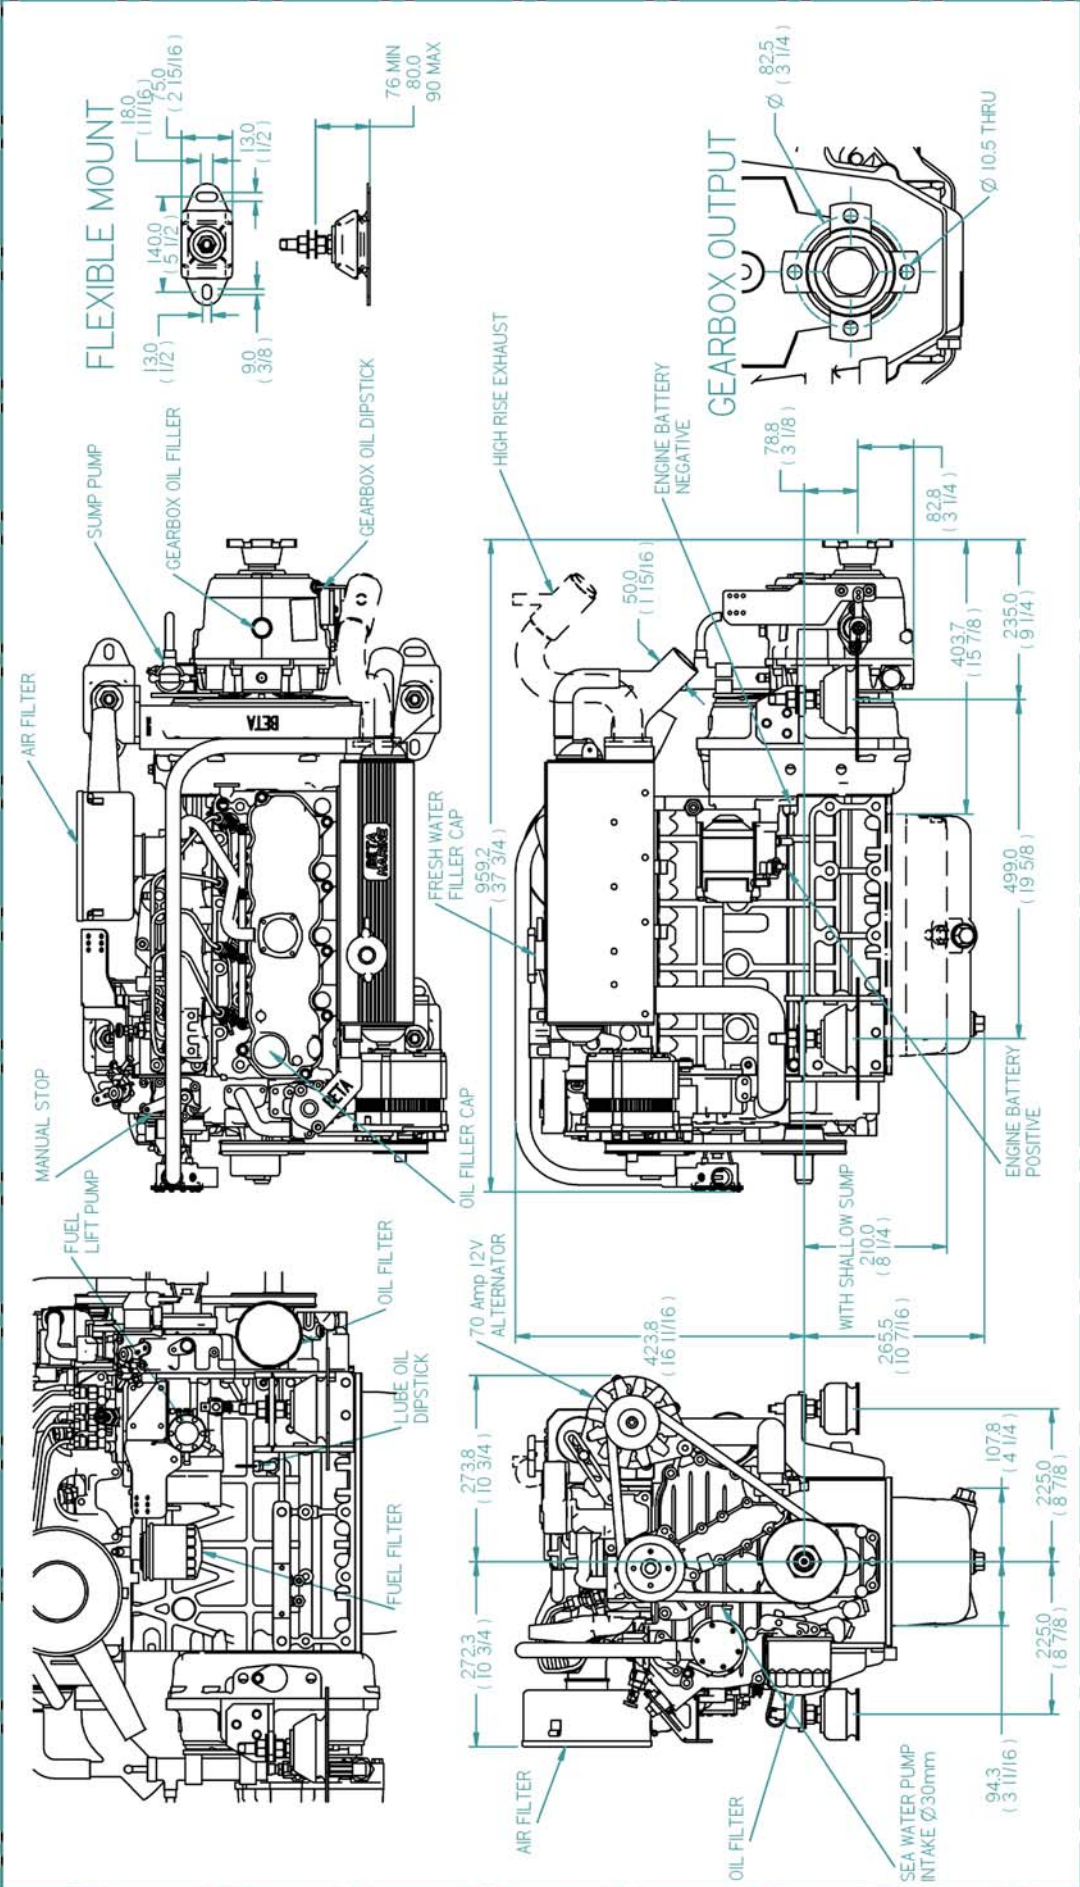

REV	DESCRIPTION	DATE	APPD	DRAWN	NOTES
01					
TITLE: BETA 43/50 (BV2003-BV2203) HEAT EXCHANGE TMC60 GEARBOX					
DIMENSIONS IN MM (INCH) DO NOT SCALE					
BETA MARINE BETA MARINE LTD. DANBY WAY, WINDLEDALE, GLoucester, GL2 2AD, UK TEL: (01452) 72462 FAX: (01452) 72916					
DRAWN BY: TW		SIZE: A4		DWG NO: 100-08616	
CHECKED BY: LT		SCALE: 1 of 2		PAGE: 1 of 2	
				DATE: 12/08/2009	
				REV: 01	

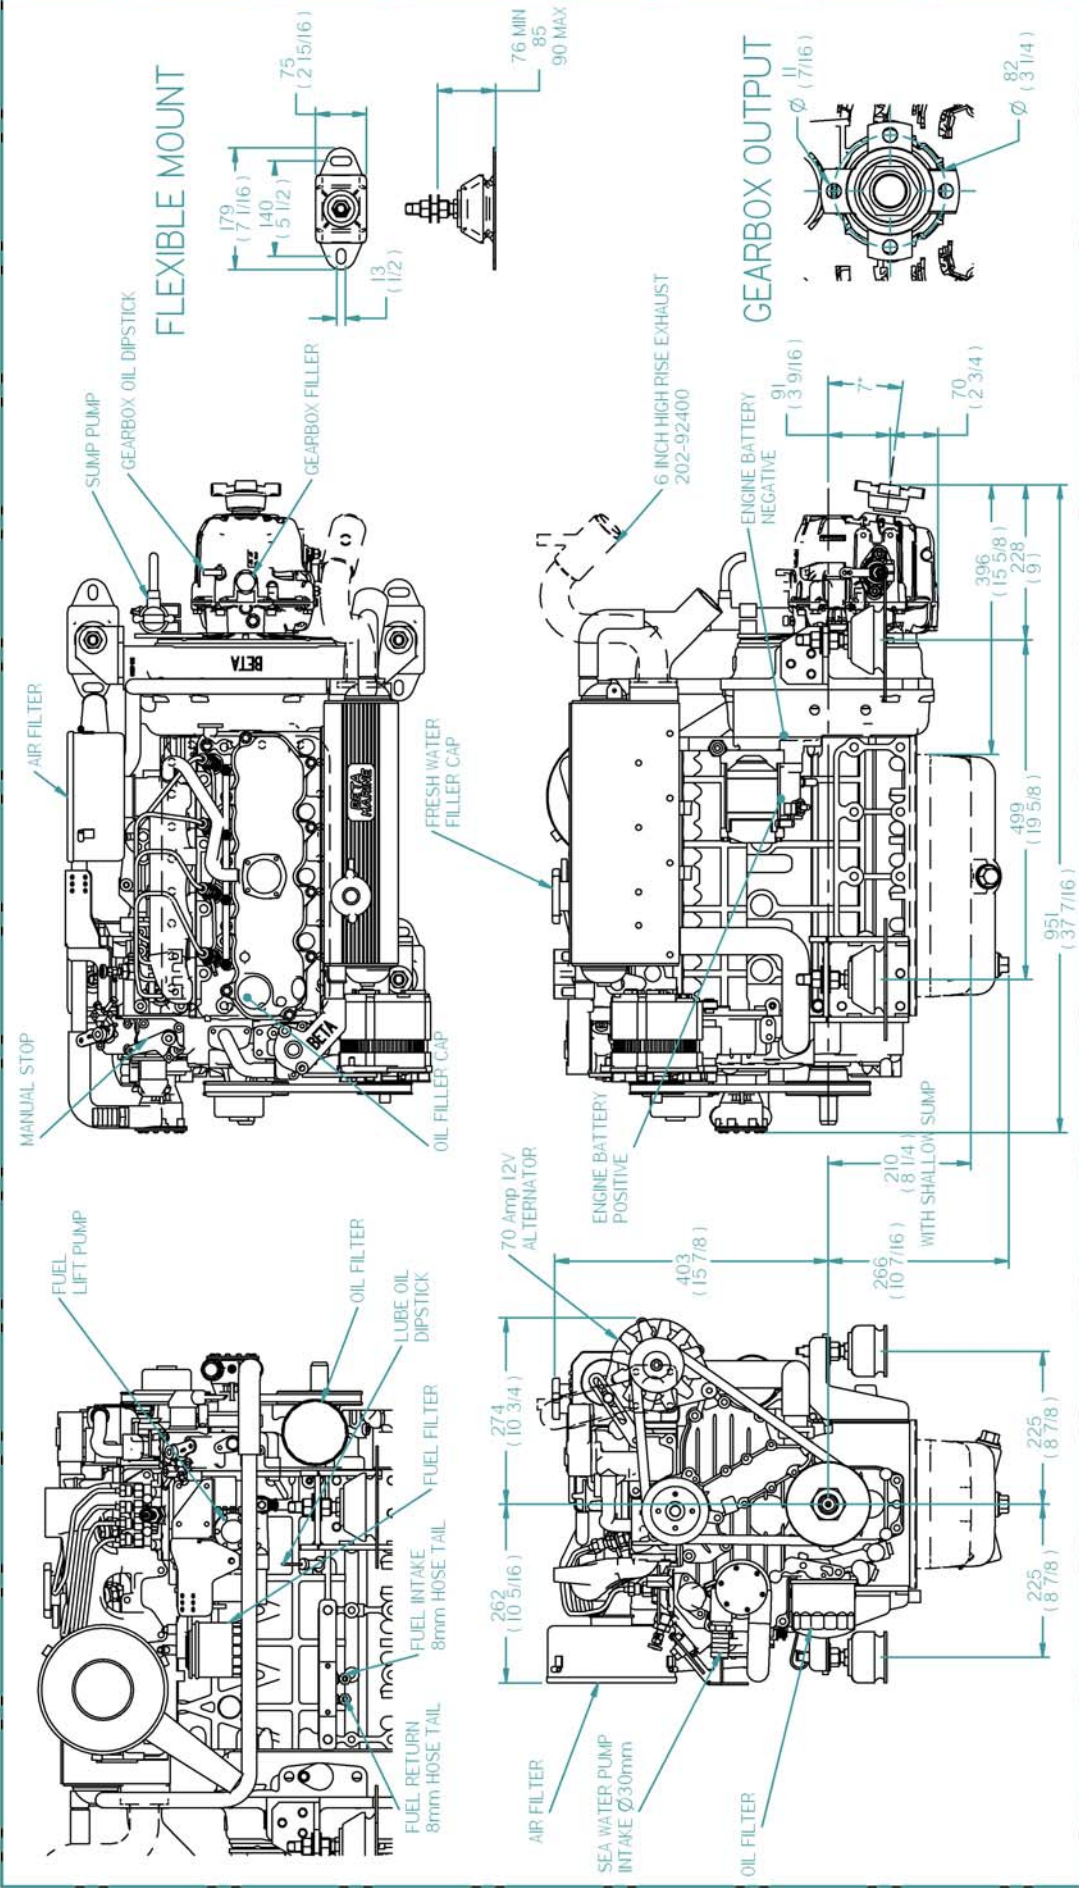

REV	DESCRIPTION	DATE	APPD	DRAWN	NOTES	TITLE
01	New sea water pump	06/11/10	LT	TW		

BETA MARINE
 TEL: (01452) 723492
 FAX: (01452) 729916

BETA MARINE LTD.
 DAVY WAY,
 WATERWELLS,
 QUEDGELEY,
 GLOUCESTER, GL2 2AD, UK


BETA 43 HEAT EXCHANGE TMC60A GEARBOX

DRAWN BY: TW
 CHECKED BY: LT

SIZE: A4
 SCALE: LT

DWG NO: 100-09087
 NTS: PAGE 1 of 1

REV 00
 DATE 17/11/2010

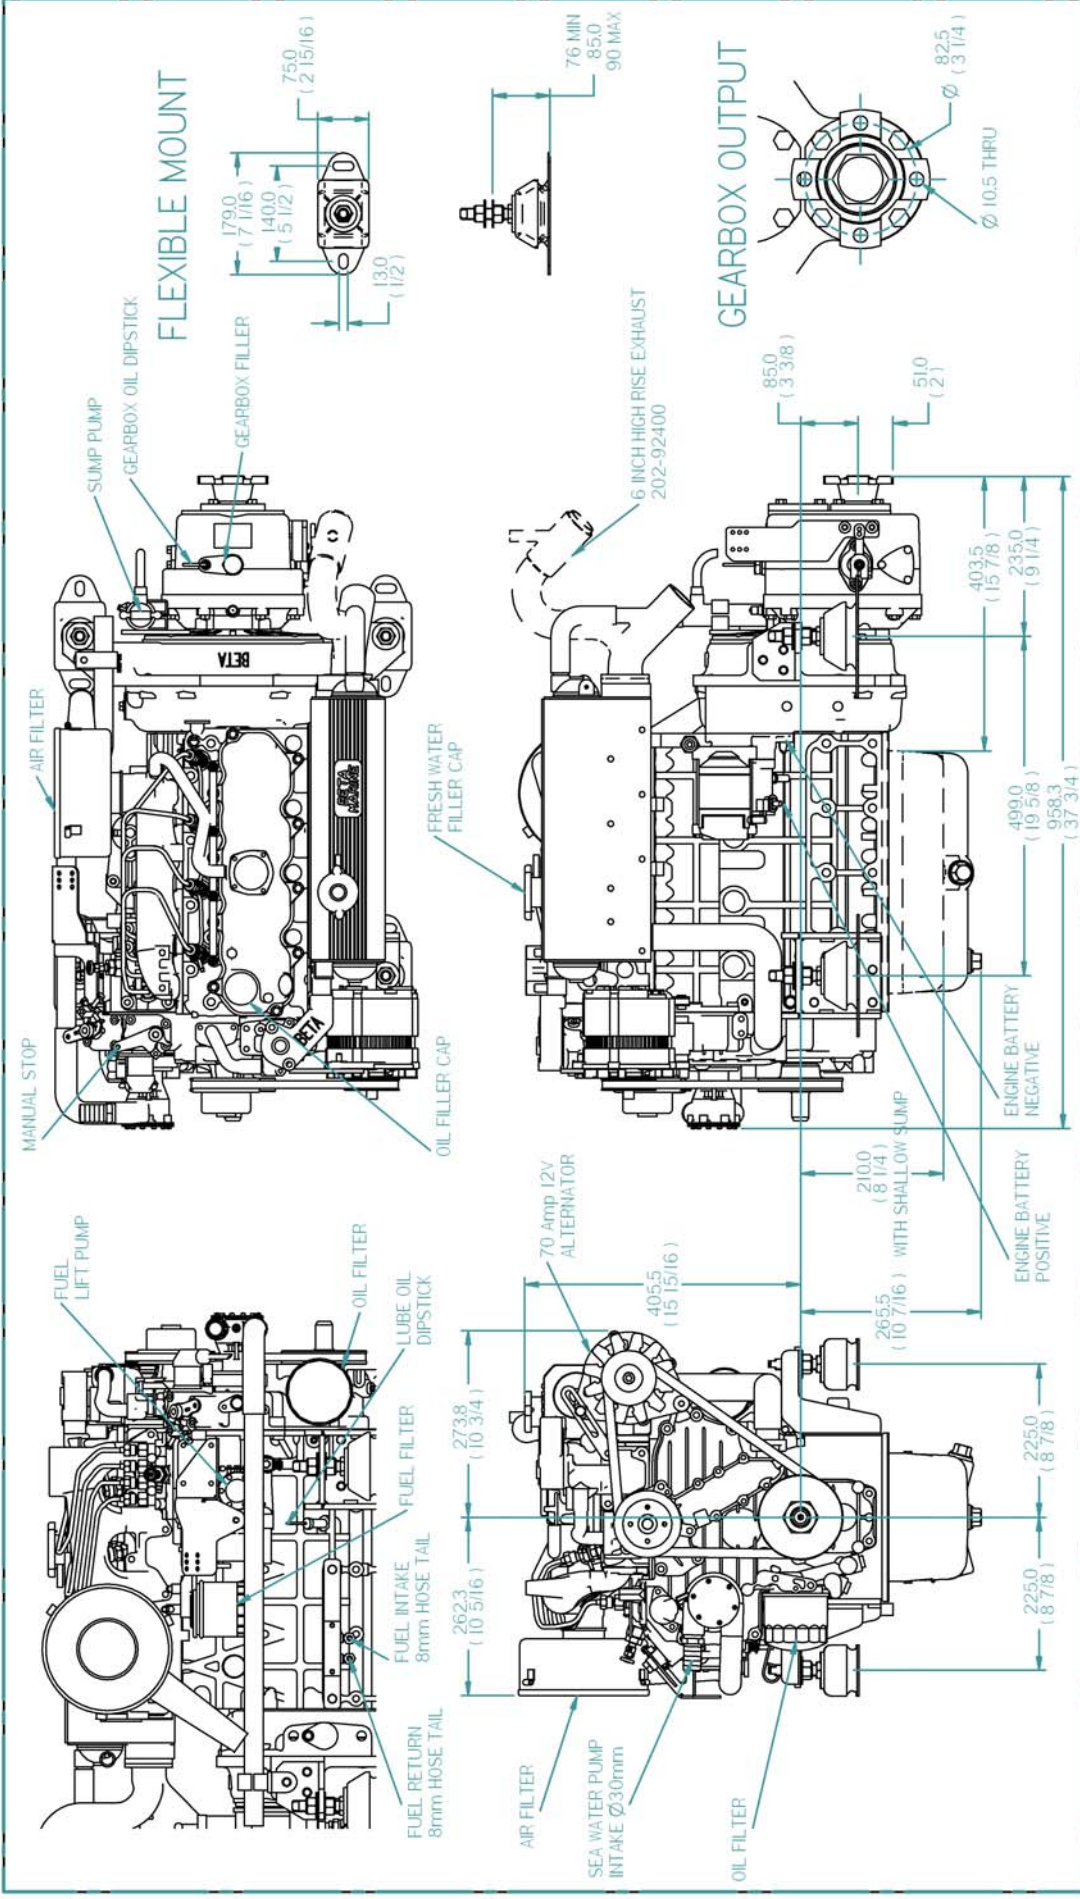


REV	DESCRIPTION	DATE	APPD	DRAWN	NOTES
01	New sea water pipe	06/11/10	LT	TW	

TITLE:		BETA 43-50 HEAT EXCHANGE TMC260 GEARBOX	
DRAWN BY:	SCALE:	DWG NO.:	REV:
TW	LT	100-05274	01
CHECKED BY:	NTS	PAGE:	DATE:
		1 of 1	12/08/2009

DIMENSIONS IN MM (INCH)
 DO NOT SCALE

BETA MARINE
 BETA MARINE LTD.
 DAWY WAY,
 WATERWELLS,
 GLOUCESTER, GLS 2AD, UK
 TEL: (01452) 723492 FAX: (01452) 729916


PART FILE NAME: 100-05274 BETA50 HE TMC260.asm

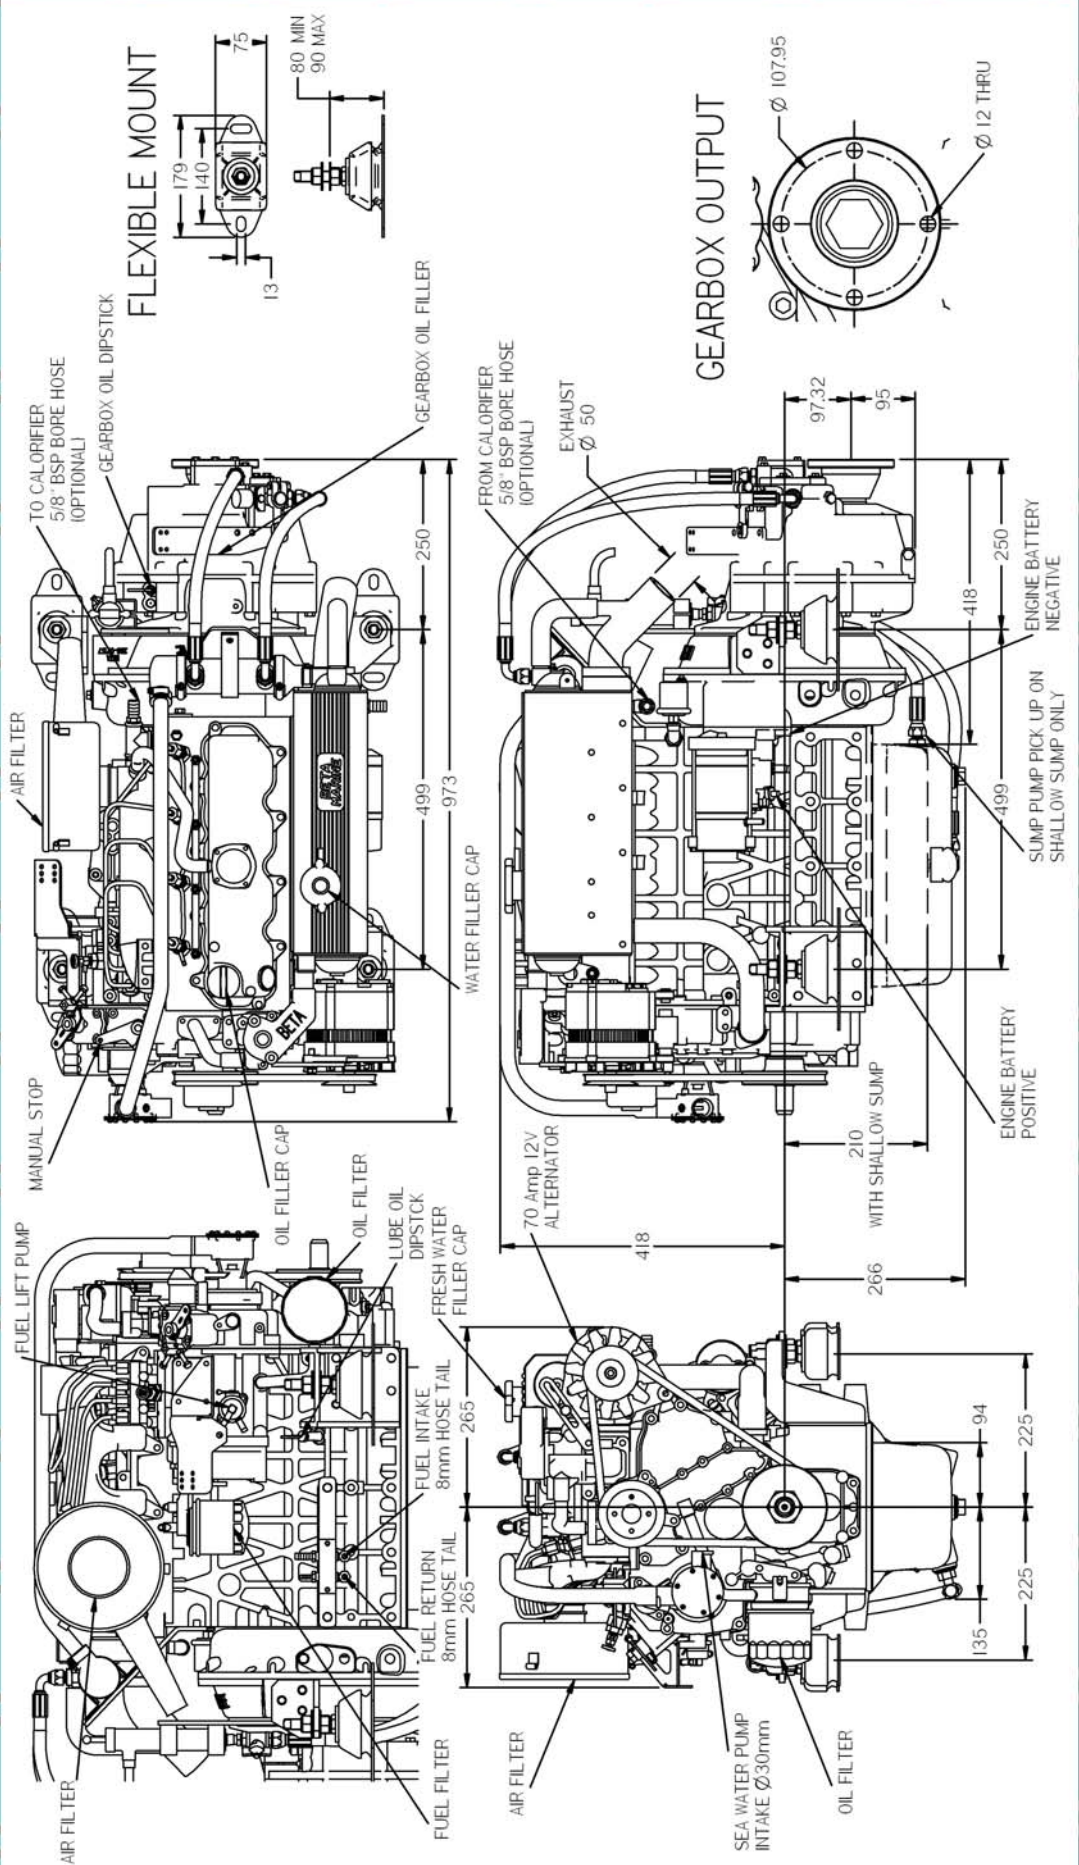

REV	DESCRIPTION	DATE	APPD	DRAWN	NOTES
01					


**BETA 60 HEAT EXCHANGE
TMC345 GEARBOX**

DIMENSIONS IN MM (INCH) DO NOT SCALE		PART FILE NAME: BETA 60 (BV2403) HE TMC345.asm	
DRAWN BY:	SIZE	DWG NO.	REV
TW	A4	100-08707	00
CHECKED BY:	SCALE	NTS	PAGE
LT	1 of 1	1	12/08/2009
BETA MARINE BETA MARINE LTD. DAVY WAY, WATERWELLS, QUEDGELEY, GLOUCESTER, GL2 2AD, UK TEL: (01452) 723492 FAX: (01452) 729916			

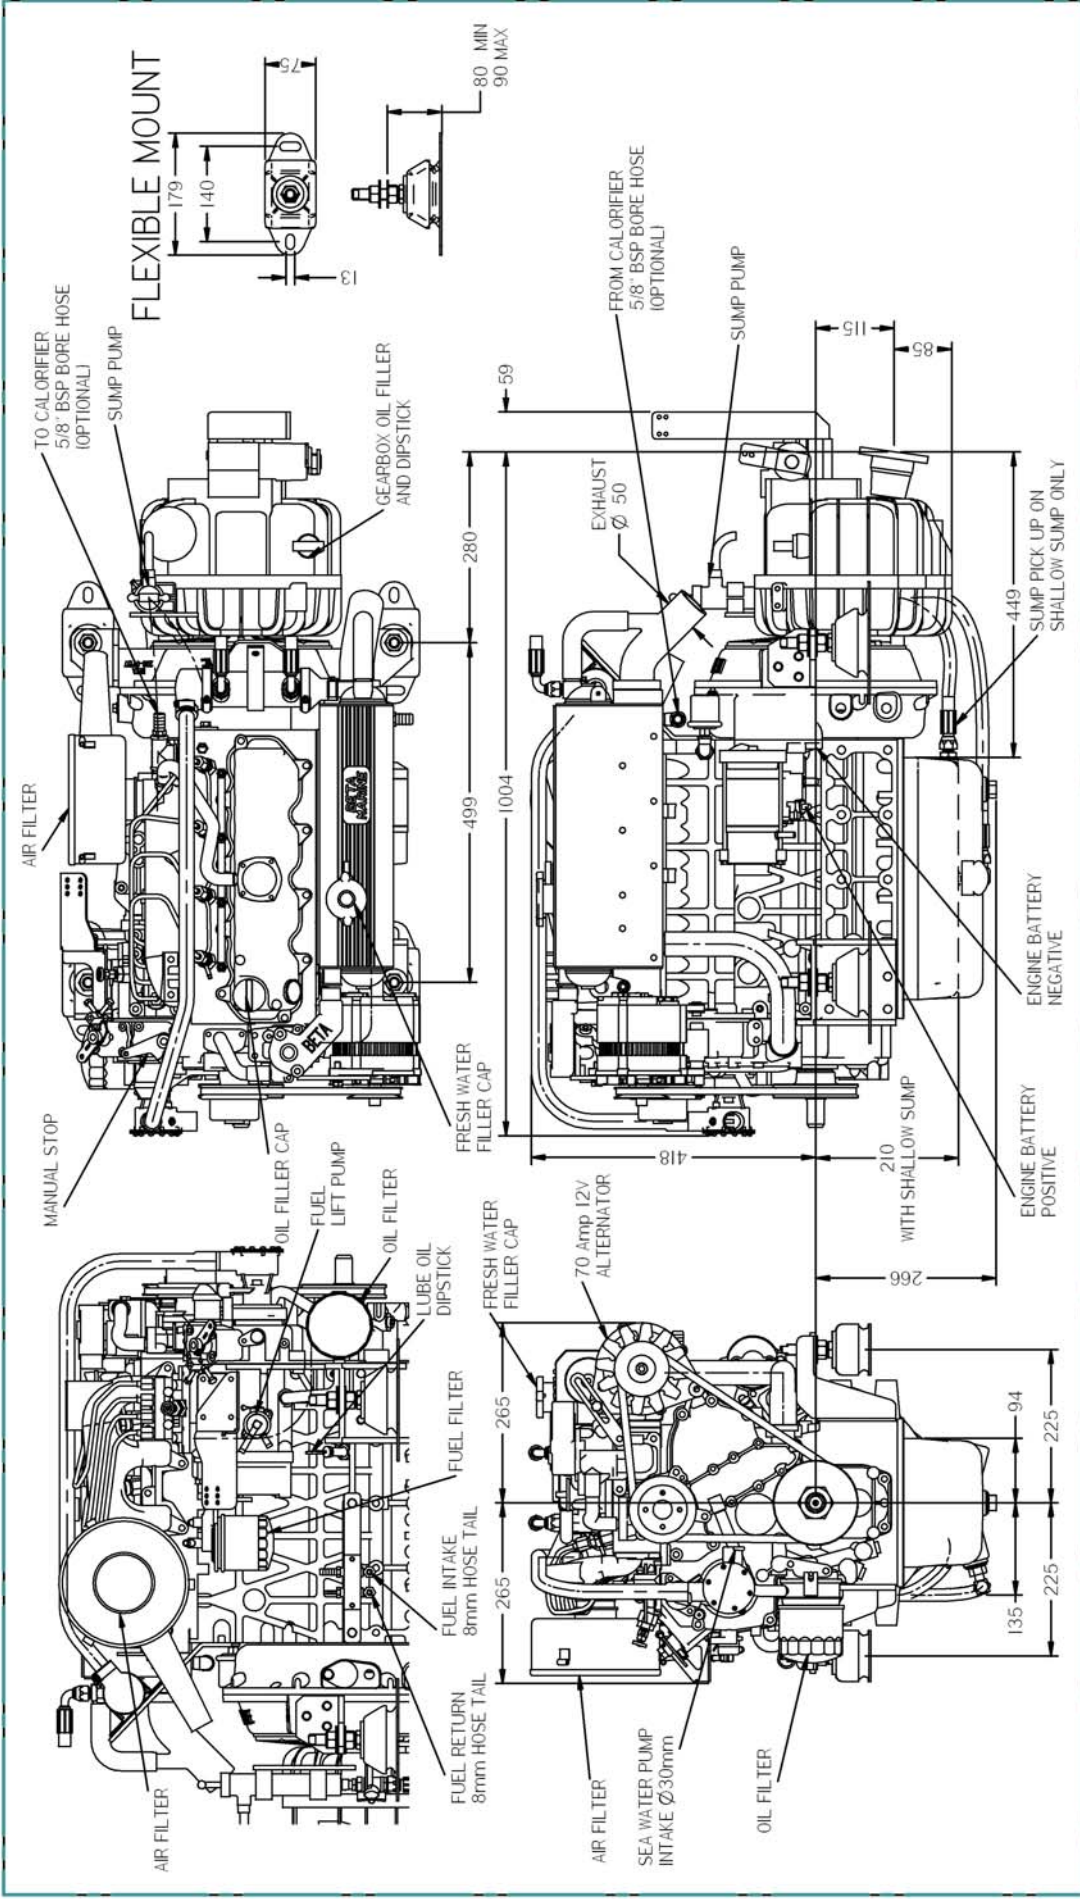









REV	DESCRIPTION	DATE	APPD	DRAWN	NOTES
01					

BASE ENGINE BV2403					
TITLE:					
BETA 60 (BV2403) HEAT EXCHANGE ZF25A GEARBOX					
DIMENSIONS IN MM (INCH) DO NOT SCALE					
PART FILE NAME: 100-07402 BV2403 HE ZF25A.asm					
BETA MARINE LTD. DAVY WAY, WATERWELLS, BRISTOL GL2 2AD, UK TEL: (01452) 723492 FAX: (01452) 729916					
DRAWN BY:	TW	SIZE:	A4	DWG NO:	100-07402
CHECKED BY:	LT	SCALE:	NTS	PAGE:	1 of 1
					REV:
					00
					DATE:
					28/05/2008

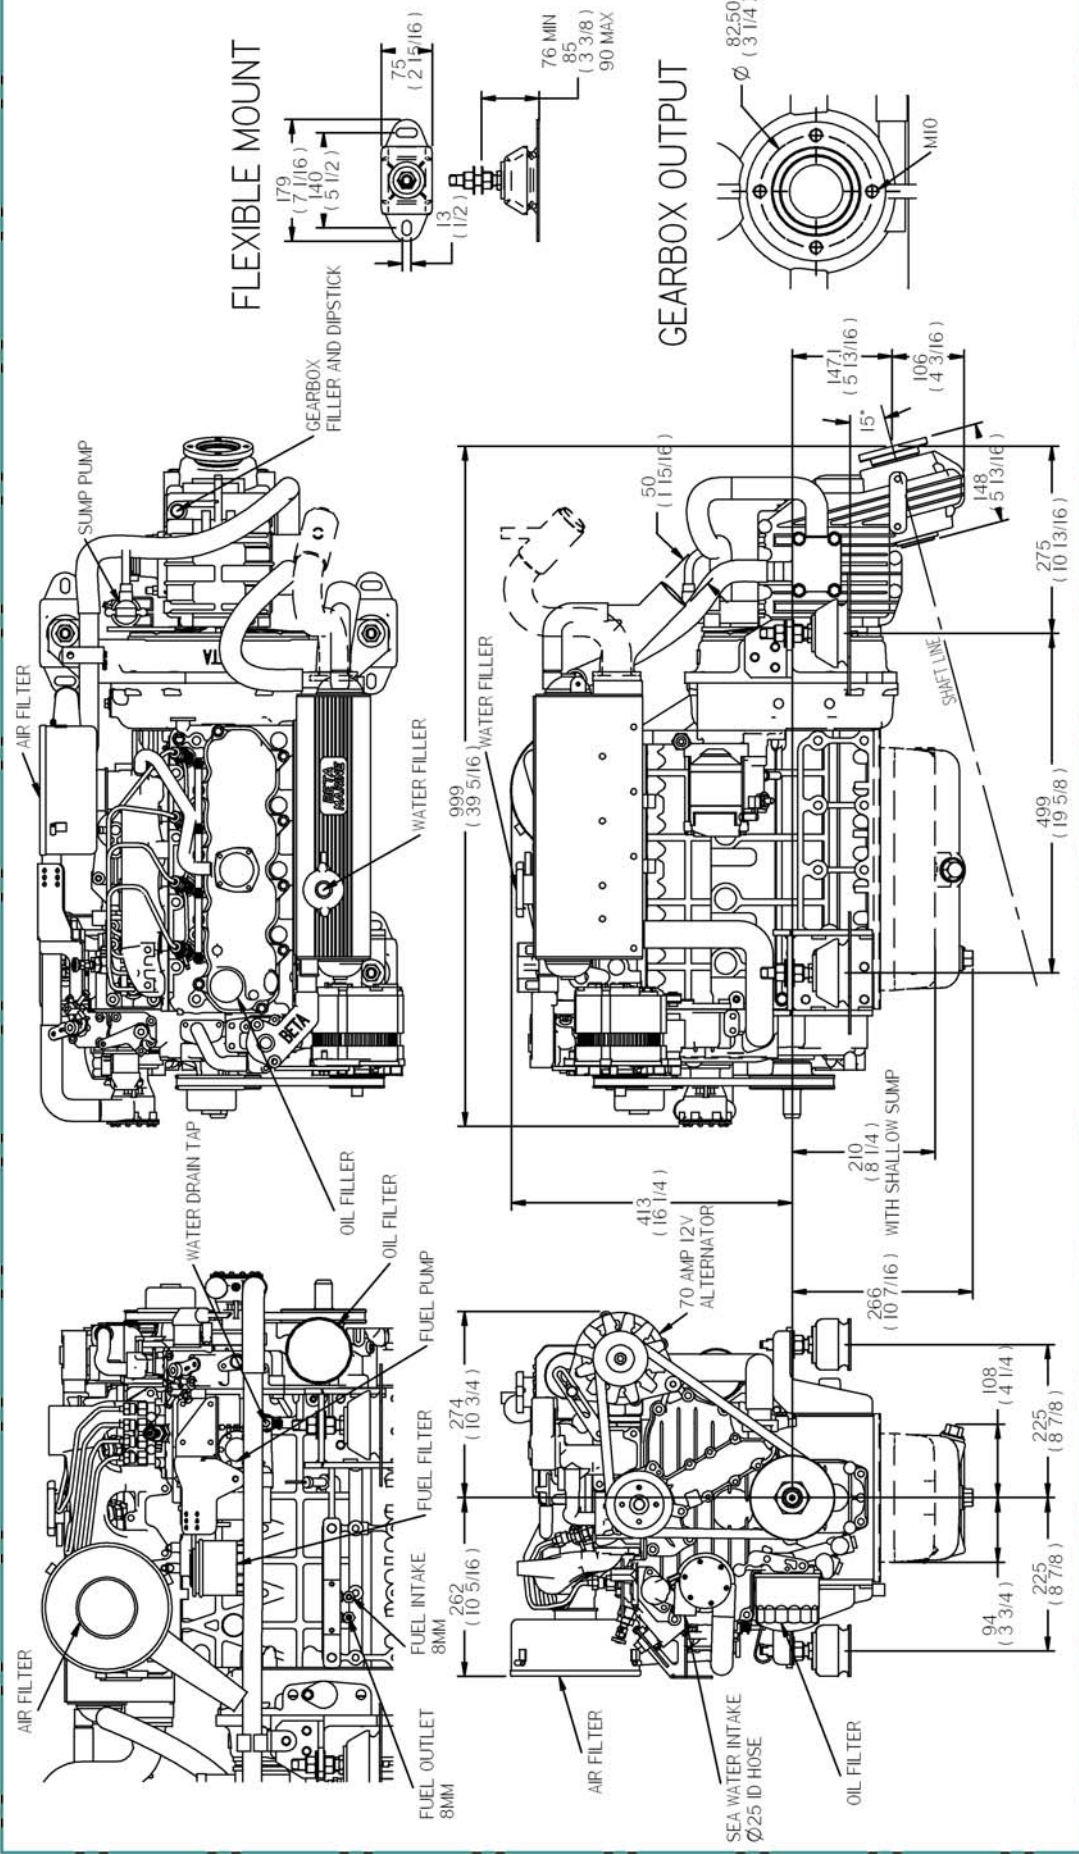

REV	DESCRIPTION	DATE	APP'D	DRAWN	NOTES	TITLE
01	NEW WATER PUMP AND G-BOX COOLER	20/07/10	LT	TW		BETA 43 AND 50 HEAT EXCHANGE ZF15MIV GEARBOX

SCALE	NTS	PAGE	1 of 1	DATE	12/08/2009
CHECKED BY:	LT	DRAWN BY:	TW	SIZE	A4
DRAWING NO. 100-06122		REV	01	PART FILE NAME: 100-06122 BETA 43-50 HE ZF15MIV.asm	
DIMENSIONS IN MM (INCH) DO NOT SCALE BETA MARINE BETA MARINE LTD. DAVY WAY, WATERWELLS, QUEDGELEY, GLOUCESTER, GL2 2AD, UK TEL: (01452) 723492 FAX: (01452) 729916					

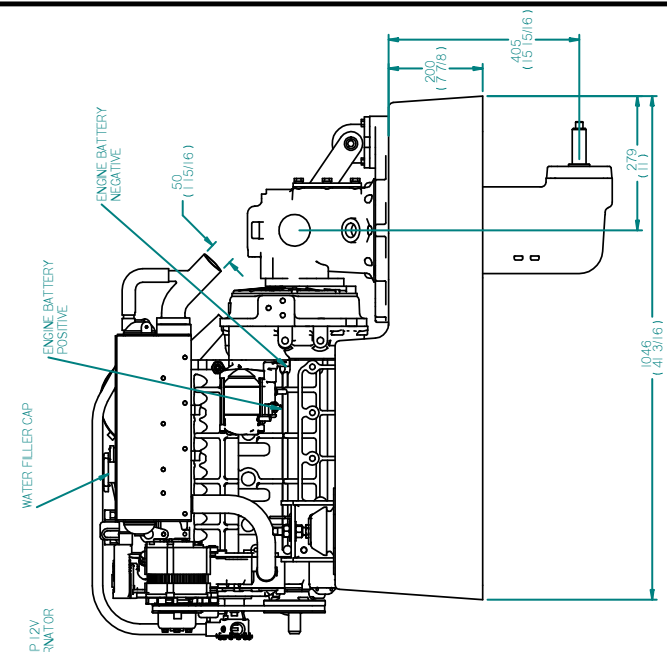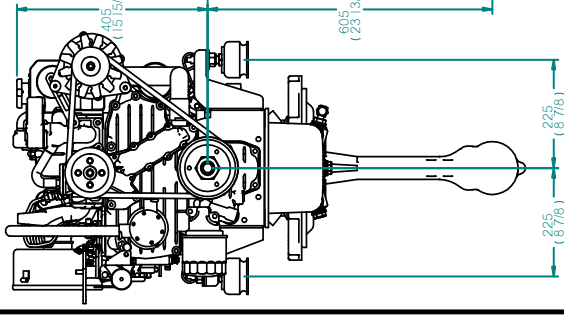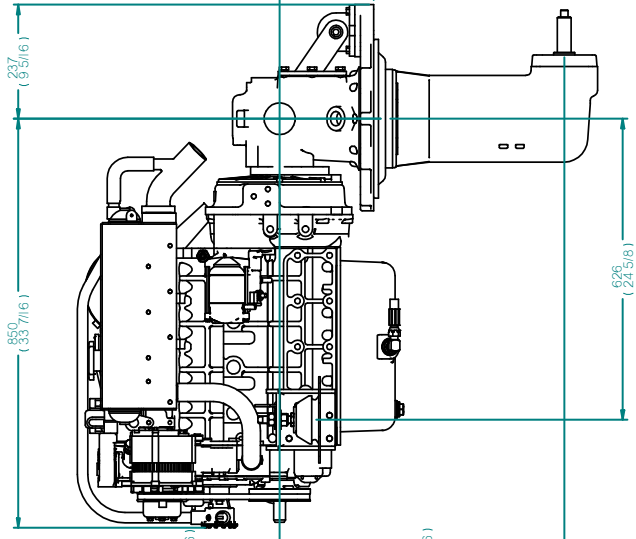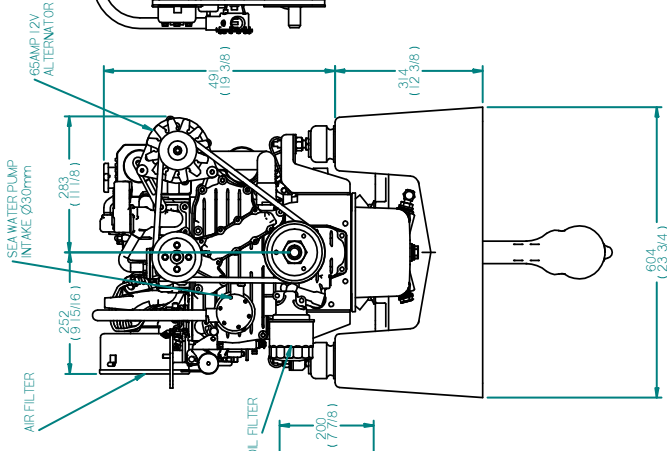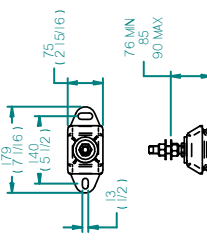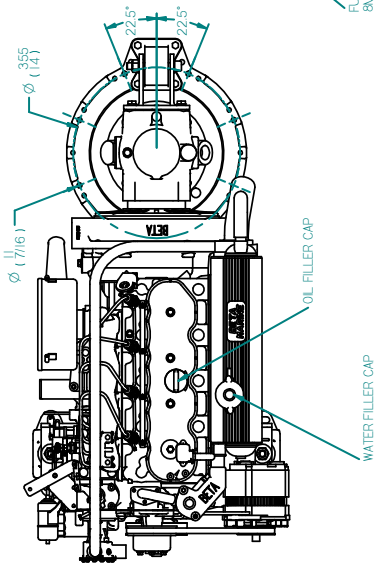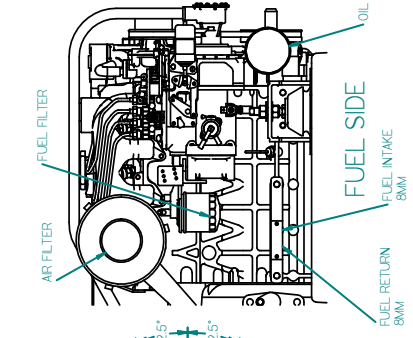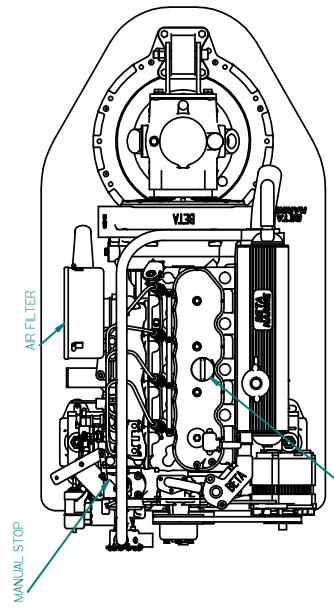

REV.	DATE	APPD.	DRAWN	DESCRIPTION
01				

NOTES

TITLE

BETA43/BETA50 HEAT EXCHANGE
SEA PROP 60

DIMENSIONS IN MM (INCH) PART FILE NAME BDD2015 TECHNODRIVE SEA PROP 60.asm
DRAWN BY: TW
CHECKED BY: LT
SCALE: NTS
PAGE: 1 of 1
DATE: 02/12/2010

REV: 00

SIZE: 30x60
A3
DRAWN BY: TW
CHECKED BY: LT
SCALE: NTS
PAGE: 1 of 1
DATE: 02/12/2010

BETA MARINE
BETA MARINE LTD.
DAVA WAY, 15
WATERLOO ROAD, GUILDFORD, GU1 2AA, UK
TEL: 01483 739116 FAX: 01483 739116

Declaration of Conformity for Recreational Craft Propulsion Engine with the Exhaust emission requirements of Directive 94/25/EC as amended by 2003/44/EC

(Completed by manufacturer of inboard engines without integral exhaust)

Name of engine manufacturer: Beta Marine Limited

Street: Davy Way, Waterwells

Town: Quedgeley, Gloucestershire

Post Code: GL2 2AD

Country: U.K.

Engine type-approved according to: Stage II of Directive 97/68/EC

(Name of Notified Body for exhaust emission assessment: TUV Kraftfahrt GmbH, Flensburg, Germany accreditation number DAR KBA-P 00010-96)

DESCRIPTION OF ENGINES AND ESSENTIAL REQUIREMENTS

Engine type: Inboard engine.

Fuel type: Diesel gas oil JIS K2204:1997 or equal.

Combustion cycle: 4-stroke.

ENGINE(S) COVERED BY THIS DECLARATION	
Engine models and engine family names:	EC Type certificate number (exhaust)
BZ602 Beta 16 BD902 Beta 25 3KBXL898KCD 7KBXL898KCB	e1*97/68DA*2002/88*0266*00
BD905 BD1005 Beta 28 BV1305 Beta 35 3KBXL01.3BCD	e1*97/68DA*2001/63*0157*00 e1*97/68DA*2004/26KA*0157*02
BD1105 Beta 30 BV1505 Beta 35/38 3KBXL01.5BCD	e1*97/68DA*2001/63*0160*00 e1*97/68DA*2004/26KA*0164*02

ENGINE(S) COVERED BY THIS DECLARATION	
Engine models and engine family names:	EC Type certificate number (exhaust)
BD1703 Beta 39 BV1903 Beta 43 BV2003 Beta 43 BV2203 Beta 50 YKBXL02.2FCD	e1*97/68DA*2001/63*0072*05 e1*97/68DA*2004/26KA*0072*08 e1*97/68DA*2004/26KA*0072*09
BV2203 6KBXL02.2FCC	e1*97/68KA*2004/26*0375*00
BV2403 Beta 60 3KBXL02.4HCD	e1*97/68GA*2001/63*0147*01
BV3300 Beta 75 3KBXL03.3BCD	e1*97/68GA*2001/63*0145*00
BV3600 Beta 75 7KBXL03.6BCD	e1*97/68JA*2004/26*0430*00
BV3300T 3KBXL03.3BAD	e1*97/68GA*2001/63*0144*00
BV3800 Beta 90 3KBXL03.8ACD	e1*97/68GA*2001/63*0155*00
BV3800T Beta 105 7KBXL03.8AAD	e1*97/68JA*2004/26*0418*00

Essential requirements	Standards Used	Other normative document used	See technical file
Annex I.B – Exhaust Emissions			
engine identification	N/A	2033/44 annex 1B para 1.	QA025
exhaust emission requirements	N/A	2003/44 para 16, L214/19	EC type certificate has its own technical file.
durability	N/A	2033/44 annex 1B para 3.	QA033
owner's manual	BS EN ISO 10240	2033/44 annex 1B para 4.	N/A
Annex I.C – Noise Emissions			
see craft manufacturer's Declaration of Conformity			

I declare on behalf of the engine manufacturer that the engine(s) will meet the exhaust emission requirements of Directive 94/25/EC as amended by Directive 2003/44/EC when installed in a recreational craft, in accordance with the engine manufacturer's supplied instructions and that this (these) engine(s) must not be put into service until the recreational craft into which it is (they are) to be installed has been declared in conformity with the relevant provisions of the above mentioned Directive

Name J. A. Growcoat Signature and title:
(identification of the person empowered to sign on behalf of the engine manufacturer)

 C.E.O.

Date: (yr/month/day) 2008 / 10 /22 Quedgeley, Gloucestershire
Certificate 2.07 Revision 07, name of notified body added.

Emission Durability

In respect to the Recreational Craft Directive 94/25/EC and amendment 2003/44/EC Annex 1, B3.

The engine must be installed, maintained and operated within the parameters detailed in the Operator's Maintenance Manual. Maintenance must use approved materials, parts and consumables. Should the engine lie unused for a period in excess of 6 months it must be inhibited otherwise it will deteriorate with resulting decrease in performance. See also the Winterising and Laying Up procedures in the Operator's Maintenance Manual.

The fuel settings of the diesel injection system must not be tampered with otherwise the guarantee will be invalid and the performance may fall outside prescribed limit. Such adjustment cannot be allowed under the terms of the emission certification.

Performance of the engine depends upon the use of correct fuels, lubricants and inhibitors. These are fully detailed in the Operator's Maintenance Manual.

Particular attention must be paid to the installation with respect to the exhaust system. The system must be designed so that water cannot back feed into the engine. The run must be such that the back pressure at the engine manifold does not exceed the level detailed in the Operator's Maintenance Manual. Wet, water injected, exhaust systems must be at least the bore mentioned in the Operator's Maintenance Manual and should the run be excessive this bore must be increased accordingly. Back pressure is measured at the outlet of the engine manifold before the water injection bend or dry bellows.

Our experience since 1987 has shown that properly installed and maintained engines hold their performance without major mishap even when running hours exceed those mentioned in the Recreational Craft Directive. It is the owners / users responsibility to ensure that the engine continues to function properly and any malfunction must be immediately investigated. The Trouble Shooting section as detailed in the Operator's Maintenance Manual is particularly helpful in this respect. Engine performance, especially with respect to erratic running, exhaust condition, low power output and high oil consumption are indications of engine conditions that may result in emissions outside the prescribed limits and must therefore be investigated and rectified immediately.

Fast Moving Parts Listings

Heat Exchanger Cooled: **Beta 43, 50 & 60**. In all cases please quote **Beta Marine WOC "K" number** and Engine type.

Description	Part Number	Qty per Engine
Alarm boards - all panels from June 2005	200-04655	1
Relay 12 Volt 40A (28Ra) fitted to rear of panels	200-87020	1
Stop Solenoid (energised to stop fuel)	600-71670	1
Fuse (Blade) 40 Amp	200-00959	1
Standard Engine Harness	200-05267	1
65 Amp Alternator Sub Loom Iskra	200-01196	1
1 Metre control panel extension loom	200-04588/01	
2 Metre control panel extension loom	200-04588/02	
3 Metre control panel extension loom	200-04588/03	
4 Metre control panel extension loom	200-04588/04	
Water Temperature Switch (Panel A, ABV & ABVW)	200-01133	1
Water Temperature Sender (Panel C & B)	200-08248	1
Oil Pressure Switch (Panel A, ABV & ABVW)	600-62670	1
Oil Pressure Sender (Panel C & B)	200-94350	1
Exhaust Bend Gasket	600-62620	1
Drive Plate 22-B-60 - TMC60	206-91950	1
Drive Plate PRM150 - Hydraulic	206-91950	1
Drive Plate PRM260 - Hydraulic	206-02095	1
Drive Plate ZF25 - Hydraulic	206-97790	1
Flexible Mountings (Metalastic type 45)	213-85900/02	4
Flexible Mountings (Metalastic type 55)	213-96970	4
Rocker Cover Gasket (from Jan 2006)	600-06374	1
Manuals		
Operators Maintenance Manual	221-02889	1
Workshop Manual – base engine only	600-00758	1
Spare Parts Manual – base engine only, Beta 43	600-02441	1 Available as a "PDF"
Spare Parts Manual – base engine only, Beta 50	600-02442	1 Available as a "PDF"

Note: the above part numbers are suitable for earth return installations only (where battery negative cable is connected directly to engine ground).

For insulated earth (where battery negative cable is isolated from engine ground) different harnesses, alternators, switches for oil pressure and engine temperature will be required.

Fast Moving Parts Listings


Heat Exchanger Cooled: **Beta 43, 50 & 60**. In all cases please quote **Beta Marine WOC "K" number** and Engine type.

Description	Part Number	Qty per Engine
Wasting Zinc Anode	209-61840	1
Heat Exchanger " O " Ring	212-07273	2
Pressure Cap 95kPa	209-80130	1
Thermostat	600-72450	1
Thermostat Gasket	600-80490	1
Fuel Filter	211-60210	1
Air Filter Element	211-08133	1
Lubricating Oil Filter	211-70510/02	1
Sump Pump	210-80061	1
Sump Pump Clamp	212-00793	2
Dip Stick Extended - guide and stick kit	600-96320	1
Sea Water Pump (6 Screw)	207-80780	1
Sea Water Pump Impeller Kit	207-80800	1
Sea Water Pump Service Kit (includes gasket and screws)	207-80810	1
Fuel Lift Pump - Beta 43	600-80870	1
Fuel Lift Pump - Beta 50	600-00633	1
Fuel Lift Pump Gasket	600-00538	1
Belt – Standard "Vee" – 65 Amp	214-80750	Correctly Select a Belt
Belt – PolyVee 100 Amp	214-07037	Correctly Select a Belt
Alternator 65 Amp External Fan	200-01155	1
Alternator 100 Amp Internal Fan	200-03008	1
Control Panel standard Key – (Silver)	600-00058/01	a pair
Control Panel Key Switch	600-00057/01	1
Control Panel Stop Button (and heat & start on ABVW)	200-00072	1
Tachometer 0 - 3,000 rpm with digital hour counter	200-02373/01	1
Water temperature switch Gauge (B & C panels)	200-96200	1
Oil pressure switch Gauge (C panels only)	200-96190	1
Voltmeter (C panels only)	200-96210	1
Green power on indicator lamp & retaining clip	200-04656	1
Red warning indicator lamp & retaining clip	200-04657	3 of 4


Service Record

	Service	Date	Responsible	
1	Commissioned			
2	First 25 hours			
3	First 50 hours			
4	Every 150 hours with shallow sump			
5	Every Year / Every 250 hours if sooner			
6				
7				
8				
9	Every 750 hours			
10				
11				
12				
13				
14				
15				
16				

Heat Exchanger Cooled
10 to 150bhp

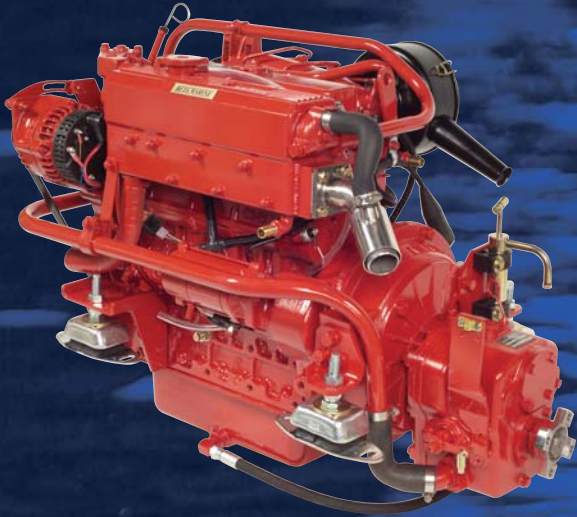


Keel Cooled
10 to 150bhp

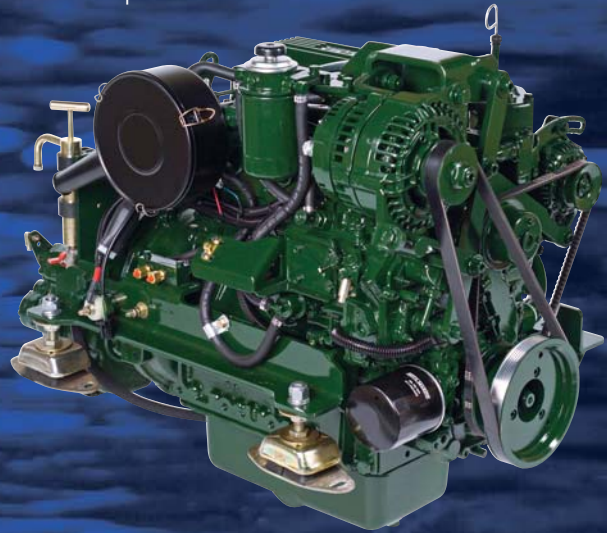

Marine Generating Sets
4 to 40kVA




Sail Drives
13.5 to 56bhp

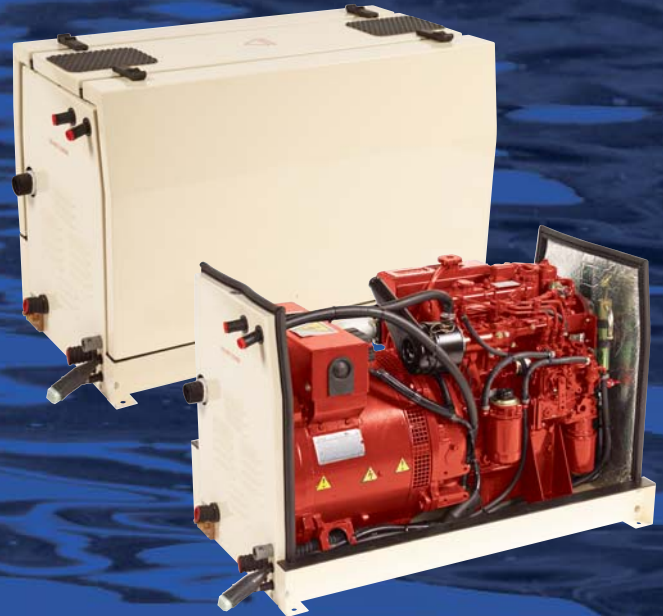

BETA MARINE

Beta Marine Limited
Davy Way, Waterwells
Quedgeley, Gloucester
GL2 2AD, UK.

Tel: 01452 723492
Fax: 01452 883742
Email: sales@betamarine.co.uk
www.betamarine.co.uk

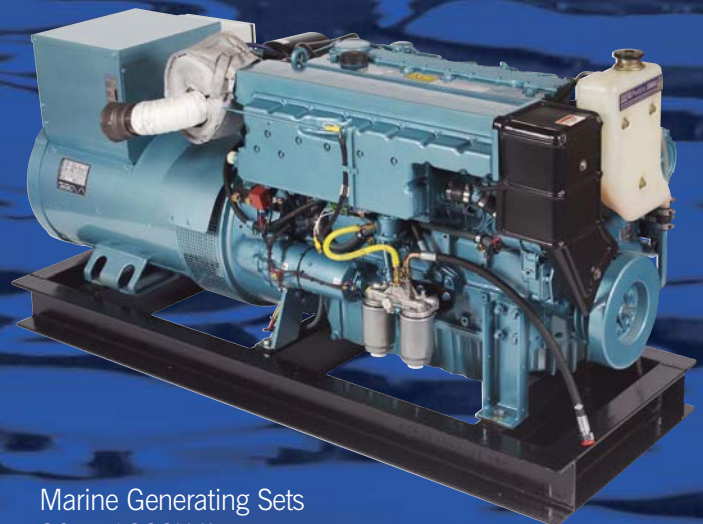

Marine Generating Sets
30 to 1000kVA

Ref: 1660, August 2011.